

IMPORTANT SAFETY INSTRUCTIONS

 <div style="border: 1px solid black; padding: 2px; display: inline-block; text-align: center;"> CAUTION <small>RISK OF ELECTRIC SHOCK DO NOT OPEN</small> </div> 	<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>
	<p>The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

For U.S.A.

Supplier's Declaration of Conformity

Model Number: DA-3000SD

Trade Name: TASCAM

Responsible party: TEAC AMERICA, INC.

Address: 10410 Pioneer Blvd., Unit #3,
Santa Fe Springs, CA 90670, U.S.A

Telephone number: 1-323-726-0303



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- a) Reorient or relocate the receiving antenna.
- b) Increase the separation between the equipment and receiver.
- c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- d) Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

IN USA/CANADA, USE ONLY ON 120 V SUPPLY.

For Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.




This product complies with the European Directives request and the other Commission Regulations.



This product complies with applicable UK regulations.

The nameplate is located on the bottom of the unit as shown below.

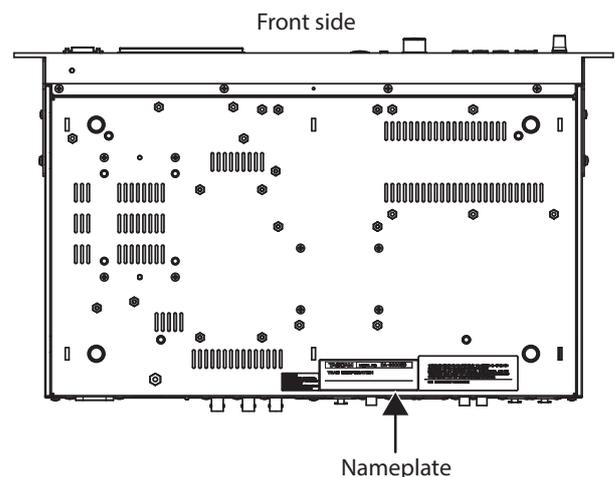

IMPORTANT SAFETY INSTRUCTIONS

WARNING

This equipment design typically applies to commercial equipment.
This equipment is not suitable for use in locations where children are likely to be present.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus draws nominal non-operating power from the AC outlet with its POWER or STANDBY/ON switch not in the ON position.
 - The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
 - Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
 - If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

WARNING

Products with Class I construction are equipped with a power supply cord that has a grounding plug. The cord of such a product must be plugged into an AC outlet that has a protective grounding connection.

WARNING

To prevent possible hearing damage, do not listen at high volume levels for long periods.



CAUTION

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.
- Installed battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.


CAUTION

- DO NOT REMOVE THE EXTERNAL CASES OR CABINETS TO EXPOSE THE ELECTRONICS. NO USER SERVICEABLE PARTS ARE INSIDE.
- IF YOU ARE EXPERIENCING PROBLEMS WITH THIS PRODUCT, CONTACT THE STORE WHERE YOU PURCHASED THE UNIT FOR A SERVICE REFERRAL. DO NOT USE THE PRODUCT UNTIL IT HAS BEEN REPAIRED.
- USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

RACK-MOUNTING THE UNIT

Use the supplied rack-mounting kit to mount the unit in a standard 19-inch rack, as shown below.

Remove the feet of the unit before mounting.

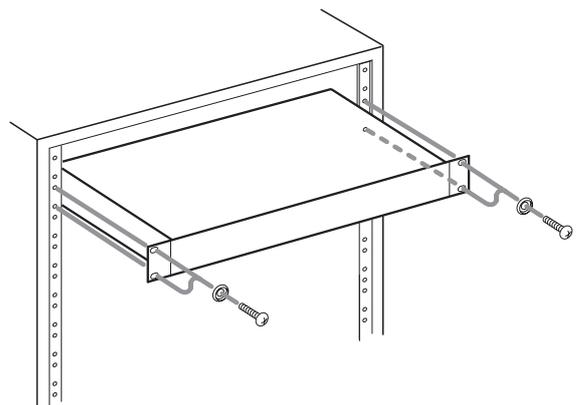

CAUTION

- Leave 1U of space above the unit for ventilation.
- Allow at least 10 cm (4 in) at the rear of the unit for ventilation.

IMPORTANT SAFETY INSTRUCTIONS

CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (+/-) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose batteries, isolate their terminals with insulation tape or something like that to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.
- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.
- The unit power should be off when you install and replace batteries.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.
- Do not disassemble a battery. The acid inside the battery could harm skin or clothing.



WARNING

DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD

followed by:

[The remote control supplied with] This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

For European Customers

Disposal of electrical and electronic equipment and batteries and/or accumulators

- (a) All electrical/electronic equipment and waste batteries/accumulators should be disposed of separately from the municipal waste stream via collection facilities designated by the government or local authorities.
- (b) By disposing of electrical/electronic equipment and waste batteries/accumulators correctly, you will help save valuable resources and prevent any potential negative effects on human health and the environment.
- (c) Improper disposal of waste electrical/electronic equipment and batteries/accumulators can have serious effects on the environment and human health because of the presence of hazardous substances in the equipment.

- (d) The Waste Electrical and Electronic Equipment (WEEE) symbols, which show wheeled bins that have been crossed out, indicate that electrical/electronic equipment and batteries/accumulators must be collected and disposed of separately from household waste.



If a battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) as defined in the Battery Directive (2006/66/EC, 2013/56/EU), then the chemical symbols for those elements will be indicated beneath the WEEE symbol.



Pb, Hg, Cd

- (e) Return and collection systems are available to end users. For more detailed information about the disposal of old electrical/electronic equipment and waste batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the equipment.

IMPORTANT SAFETY INSTRUCTIONS	2
1 – Introduction	7
Features	7
Included items.....	7
Conventions used in this manual	7
Trademarks	8
Precautions for placement and use	8
Notes about power supplies for US/Canada	8
Beware of condensation	8
Cleaning the unit	8
Product registration	9
About TASCAM customer support service	9
SD cards and USB flash drives.....	9
SD cards (sold separately).....	9
USB flash drives (sold separately)	9
Media that has been confirmed for use with this unit.....	9
Precautions for use	9
SD card write protection.....	9
SD card formatting.....	9
2 – Names and Functions of Parts	10
Wireless remote control (TASCAM RC-10).....	13
Home Screen.....	13
Menu structure.....	14
Menu screen operation basics.....	15
Menu operation procedures	15
3 – Preparations	16
Making connections.....	16
Preparing the remote control	17
Installing the battery.....	17
When to change the battery	17
Warnings about battery use	17
Using the wireless remote control	17
Turning the power on and off.....	18
Setting the date and time	18
Adjusting the brightness	18
Inserting and ejecting SD cards	19
Inserting SD cards (sold separately).....	19
Ejecting SD cards	19
SD card write protection.....	19
Connecting/disconnecting USB flash drives	20
Connecting USB flash drives (sold separately).....	20
Disconnecting USB flash drives	20
Selecting the media used.....	20
Preparing SD cards and USB flash drives.....	21
Lock function	21
Turning on the lock function.....	21
Turning off the lock function.....	21
4 – Recording	22
Unexpected power interruptions.....	22
Selecting the input source.....	22
Showing the input source	22
Setting the recording file format.....	23
Using the sampling rate converter	23
Monitoring the input signal	24
Adjusting the input signal level	24
Adjusting the output signal level	25
Setting the peak hold indicators	25
Setting the master clock.....	26
Setting the reference level.....	26
Using this unit as an AD/DA converter	27
Basic recording operations	27
Sync recording.....	28
Activating and setting sync recording.....	28
Sync recording operation	28
Creating new higher-numbered tracks automatically ...	29
Creating a higher numbered track manually	29
Setting the automatic mark function	30
Adding marks manually during recording.....	30
Adding marks when recording.....	30
Using the oscillator (OSC)	31
Setting the pause mode	31
Setting the file name format.....	32
Inputting and editing characters.....	32
Media capacities and recording times.....	32
Opening the BROWSE screen.....	33
BROWSE screen navigation.....	33
Icons on the BROWSE screen	33
Folder operations.....	34
File operations.....	34
Editing folder and file names	35
Deleting folders and files	35
Moving and copying folders and files	36
Registering folders and files in a playlist	36
Viewing folder and file information	37
Creating new folders.....	37
Dividing files	38
Undoing file division (UNDO/REDO)	39
6 – Playback	40
Playable file types	40
Files and tracks	40
Basic playback operations.....	40
Playback	40
Selecting tracks.....	41
Skipping to the previous or next track	41
Selecting tracks directly	41

Contents

Searching backward and forward	41	Analog outputs	58
Locating to specific positions	42	Digital input.....	59
Locating to a position after partial entry	42	Digital output.....	59
Adding marks manually during playback	42	Other connectors.....	59
Adding marks during playback	42	Audio performance	60
Locating to marks.....	42	Recording	60
Deleting marks	42	Playback	60
Setting the PLAY Mode	43	Control input.....	60
Repeat playback	44	General.....	60
Setting gapless playback mode.....	44	Dimensional drawings.....	61
7 – Recording/playback with cascade connections ...	45	Block diagram	62
Overview of the cascade function	45		
Connections and preparations.....	45		
Preparing media	45		
Selecting the media.....	45		
Preparing cables	45		
Setting the recording file format.....	45		
Connecting and setting the devices.....	46		
Setting master and slave units.....	47		
Using cascaded units	48		
8 – Editing playlists	49		
Overview of playlist editing.....	49		
Opening the playlist screen.....	49		
Registering tracks in a playlist	49		
Using the playlist menu	49		
Moving around playlists.....	49		
Changing playlist names.....	50		
Deleting playlists	50		
Creating a new playlist	50		
Playlist track menu operations	51		
Changing the playlist track order	51		
Removing tracks from playlists	51		
9 – Miscellaneous functions	52		
INFO button and indicator	52		
Copying files between media (backing up).....	52		
Viewing information about the media	53		
Restoring the factory settings	53		
Using a USB keyboard.....	54		
Setting the keyboard type	54		
Using a keyboard to input text.....	54		
Keyboard operation list.....	54		
10 – Message Lists	55		
11 – Troubleshooting	57		
12 – Specifications.....	58		
Media and formats.....	58		
Inputs and outputs	58		
Analog inputs.....	58		

Thank you very much for purchasing a TASCAM DA-3000SD 2ch Audio Recorder.

Before connecting and using the unit, please take time to read this manual thoroughly to ensure you understand how to properly set up and connect the unit, as well as the operation of its many useful and convenient functions. After you have finished reading this manual, please keep it in a safe place for future reference.

You can also download this Owner's Manual from the TASCAM website.



TASCAM website

<https://tascam.jp/int/>

Features

- 2-channel PCM recording at up to 192 kHz/24 bit resolution
- 2-channel DSD recording at up to 5.6 MHz
- SD card slot (supports SD standard for 512 MB–2 GB cards, SDHC standard for 4 GB–32 GB cards, SDXC standard for 64 GB–512 GB cards)
- USB device port (for USB flash drives) supports playback and copying to and from SD card
- USB keyboard port allows a keyboard to be connected for text input and external control
- 24-dot level meters have excellent visibility and their brightness can be adjusted
- 128x64-dot OLED display with high visibility and a wide viewing angle
- RC-10 wireless remote control included
- Analog audio balanced and unbalanced connectors
- PCM digital audio AES-EBU/SPDIF connectors
- DSD digital audio SDIF-3/DSD-raw connectors
- WORD IN/OUT/THRU supported (OUT/THRU set with dedicated switch)
- ADDA DIRECT mode that enables use as a standalone AD/DA converter
- CASCADE function allows synchronized operation of multiple units (including clock and recording/playback timing synchronization)
- Temperature-compensated crystal oscillator (TCXO) enables high frequency precision (1 ppm or less)
- 1U rackmount size

Included items

This product includes the following items.

Take care when opening the package not to damage the items. Keep the packing materials for transportation in the future.

Please contact the retailer where you purchased this unit if any of these items are missing or have been damaged during transportation.

- Main unit × 1
- Power cord × 1 3P
- Wireless remote control unit (TASCAM RC-10) × 1
- Lithium coin cell battery for remote control (CR2025 preinstalled in remote control) × 1
- A rack-mounting screw kit × 1
- Owner's Manual (this manual) including warranty × 1

Conventions used in this manual

The following conventions are used in this manual.

- Buttons, connectors and other physical parts of this unit are indicated like this: **MENU** button
- Text displayed on the display of the unit and external devices appears like this: **MENU**.
- The item or character shown highlighted (colors inverted) on the display is referred to as the "cursor" in some cases.
- The term "SD/SDHC/SDXC memory card" is abbreviated as "SD card".
- As necessary, additional information is provided under TIP, NOTE, ATTENTION and CAUTION headings.

TIP

These are tips about how to use the unit.

NOTE

These provide additional explanations and describe special cases.

ATTENTION

Failure to follow these instructions could result in injury, damage to equipment or lost recording data, for example.

CAUTION

Failure to follow these instructions could result in injury.

1 – Introduction

Trademarks

- TASCAM is a registered trademark of TEAC Corporation.
- SDXC Logo is a trademark of SD-3C LLC.



- Other company names, product names and logos in this document are the trademarks or registered trademarks of their respective owners.

Any data, including, but not limited to information, described herein are intended only as illustrations of such data and/or information and not as the specifications for such data and/or information. TEAC Corporation disclaims any warranty that any use of such data and/or information shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such data and/or information.

This product is designed to help you record and reproduce sound works to which you own the copyright, or where you have obtained permission from the copyright holder or the rightful licensor. Unless you own the copyright, or have obtained the appropriate permission from the copyright holder or the rightful licensor, your unauthorized recording, reproduction or distribution thereof may result in severe criminal penalties under copyright laws and international copyright treaties. If you are uncertain about your rights, contact your legal advisor. Under no circumstances will TEAC Corporation be responsible for the consequences of any illegal copying performed using the recorder.

Precautions for placement and use

- The operating temperature should be between 0°C and 40°C (32°F and 104°F).
- Do not install in the following types of places. Doing so could degrade the sound quality and/or cause malfunctions.
 - Places with significant vibrations or that are otherwise unstable
 - Near windows or other places exposed to direct sunlight
 - Near heaters or other extremely hot places
 - Extremely cold places
 - Places with bad ventilation or high humidity
 - Very dusty locations
- In order to assure good heat dissipation, do not place any object on top of the unit.
- Do not install this unit on top of any heat-generating electrical device such as a power amplifier.

Notes about power supplies for US/Canada

Insert the included power cord all the way into the AC IN connector. This unit can be used with AC 100–120 V (50/60 Hz) power supply voltage.

Hold the power cord by its plug when connecting or disconnecting it.

⚠ CAUTION

The included power cord has a rated voltage of 125 V AC. It cannot be used with over 125 V.

Beware of condensation

If the unit is moved from a cold to a warm place, or used immediately after a cold room has been heated or otherwise exposed to a sudden temperature change, condensation could occur. Should this happen, leave the unit for one or two hours before turning the unit on.

Cleaning the unit

To clean the unit, wipe it gently with a soft dry cloth. Do not wipe with chemical cleaning cloths, paint thinner, ethyl alcohol or other chemical agents to clean the unit as they could damage the surface. Once every five years, please contact the retailer where you purchased the unit or a TASCAM customer support service for internal cleaning. If the unit is not cleaned for a long time and dust is allowed to accumulate inside it, fire or malfunction could result. Cleaning is more effective when conducted before the humid season. Please check with us about the cost of internal cleaning.

Product registration

Please visit the following TASCAM website to register your TASCAM product online.
If you register your product, you will be notified when there is a firmware or software update regarding the registered product.
<https://tascamid.tascam.jp/int/login>

About TASCAM customer support service

TASCAM products are supported and warranted only in their country/region of purchase.
To receive support after purchase, on the TASCAM Distributors list page of the TEAC Global Site, search for the local company or representative for the region where you purchased the product and contact that organization.
<https://teac-global.com/>
When making inquiries, the address (URL) of the shop or web shop where it was purchased and the purchase date are required. Moreover, the warranty card and proof of purchase might also be necessary.

SD cards and USB flash drives

An SD card is necessary to record with this unit.
An SD card or USB flash drive is necessary to play files.
SD cards and USB flash drives are sold separately. Please purchase any that you need for your uses.

SD cards (sold separately)

This unit uses SD cards for recording and playback.
This unit can use SD cards that are compatible with SD, SDHC or SDXC standards. Prepare one for use.

USB flash drives (sold separately)

USB flash drives can be used with this unit to play files and to copy files between them and SD cards. Prepare one for use.

Media that has been confirmed for use with this unit

A list of SD cards and USB flash drives that have been confirmed to operate with this unit can be found on our web site. Please access to a product page of this product from the TASCAM website to find the list or contact the TASCAM customer support service.



TASCAM website

<https://tascam.jp/int/>

Precautions for use

SD cards and USB flash drives are built with high precision. In order to prevent damage to a flash drive or card, follow these precautions when handling them.

- Do not leave them in extremely hot or cold places.
- Do not leave them in extremely humid places.
- Do not let them get wet.
- Do not put things on top of them or twist them.
- Do not allow them to be struck with force.
- Do not insert or remove them during recording, playback, data transfer or other operations that access them.
- When transporting cards, carry them inside a memory card case or similar protection.

SD card write protection


This unit writes track data to the media in order to improve performance. Since track data cannot be written to write-protected SD cards, media reading will take longer and performance could otherwise be affected.

SD card formatting

SD cards and USB flash drives formatted by this unit are optimized to improve performance during recording and playback with this unit. For this reason, you should use this unit to format the SD cards and USB flash drives that you will use with it. Errors might occur during recording and playback with this unit when using an SD card or USB flash drive formatted by a computer or other device.

2 – Names and Functions of Parts

Front panel

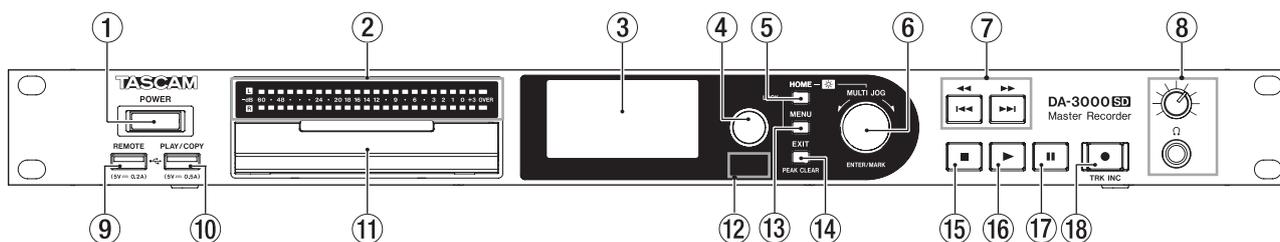

① POWER switch

Use to turn the unit on and off.

⚠ CAUTION

Before turning the power on, minimize the volume of other equipment that is connected to this unit. Failure to do so might cause sudden loud noises, which could harm your hearing or result in other trouble.

② Level meters

These show the levels of the input sound, the playback sound or the oscillator (OSC).

Levels less than the set reference level light green.

Levels greater than the set reference level light orange.

(See "Setting the reference level" on page 26.)

NOTE

When recording in PCM format, +3 dB will not light.

③ Display

This shows a variety of information.

④ INFO button/indicator

Press this button when the INFO indicator is lit blue to show the operation status of the unit on the display and light the set reference level on the level meters. In addition, pressing this button when the INFO indicator is lit red will cause a message to appear on the display. (See "INFO button and indicator" on page 52.)

⑤ HOME button

- When a menu screen is open, press to return to the Home Screen.
- Press when the Home Screen is open to change the display mode. (See "Home Screen" on page 13.)
- Turn the MULTI JOG dial while pressing this button to adjust the brightness of the display and the indicators. (See "Adjusting the brightness" on page 18.)
- While pressing the HOME button, press the MENU to switch on/off the lock function. (default: off) (See "Lock function" on page 21.)

⑥ MULTI JOG dial

This functions both as a dial and as a button.

Dial functions

When the Home Screen is open, use to skip between marks.

When in menu mode, use to select menu items and setting values.

When editing names, use to select characters.

While pressing and holding the HOME button, turn to adjust the display and indicator brightness.

Turn when the BROWSE screen is open to select subfolders and files in the same folder. (See "BROWSE screen navigation" on page 33.)

Button functions

Use to confirm selections and settings (ENTER function).

When the BROWSE screen is open, press to open a pop-up menu for the selected folder or file. (See "Folder operations" on page 34.) (See "File operations" on page 34.)

Press when stopped, in playback standby, playing back or recording to add a mark. (See "Adding marks manually during recording" on page 30.) (See "Adding marks manually during playback" on page 42.)

⑦ ◀◀ [◀◀] / ▶▶ [▶▶] buttons

- Press briefly to skip to the previous or next track.
- Press and hold to search backward or forward.

NOTE

The usual backwards / forwards speed is 10x normal playback, but pressing the ▶▶ [▶▶] button when searching backward or pressing the ◀◀ [◀◀] button when searching forward at the same time will increase the speed to 100x for as long as that button is kept pressed.

- Press when the BROWSE screen is open to move up or down one level in the folder structure. (See "BROWSE screen navigation" on page 33.)

⑧ Ω (headphone) jack/knob

- Use this standard stereo jack to connect stereo headphones. Use an adapter when connecting headphones with a mini plug. Use this knob to adjust the headphones output level.

⚠ CAUTION


Before connecting headphones, minimize the volume with the Ω (headphone) knob. Failure to do so might cause sudden loud noises, which could harm your hearing or result in other trouble.

2 – Names and Functions of Parts

- ⑨ **REMOTE connector**
You can connect a USB keyboard here and use it to input folder and file names, for example, as well as to control the unit. By default, the recorder is set use Japanese keyboards, which are arranged differently from English keyboards. To use an English keyboard, change the setting in the **KEYBOARD TYPE** screen. (See “Setting the keyboard type” on page 54.)
- ⑩ **PLAY/COPY connector**
- Use to connect a USB flash drive. (See “Connecting/disconnecting USB flash drives” on page 20.)
 - Connect a USB flash drive here to play back files on it and copy files between it and SD cards. (See “Copying files between media (backing up)” on page 52.)
- ⑪ **SD card slot**
Insert and eject SD card from here. (See “Inserting and ejecting SD cards” on page 19.)
- ⑫ **Remote sensor**
Receives signals from the included remote control (TASCAM RC-10). When using the remote point it here.
- ⑬ **MENU button**
- When the Home Screen is open, press to access the menu screens. (See “Menu structure” on page 14.) (See “Menu screen operation basics” on page 15.)
 - While pressing the HOME button, press the MENU to switch on/off the lock function. (default: off) (See “Lock function” on page 21.)
- ⑭ **EXIT [PEAK CLEAR] Button**
- Press this when a settings screen is open to go back one level in the menu.
 - When a confirmation pop-up message is open, press this to answer "NO".
 - When the Home Screen is open, press this to clear the level meter peak hold indicators.
- ⑮ **STOP button**
Stops playback and recording.
- ⑯ **PLAY button/indicator**
- Press when stopped or in playback standby to start playback.
 - Press in recording standby to start recording.
 - During playback or recording, this button lights.
- ⑰ **PAUSE button/indicator**
- Press when stopped or during playback to switch to playback standby.
 - Press when recording to switch to recording standby.
 - The button lights when in playback standby and recording standby.
- ⑱ **RECORD [TRK INC] button/indicator**
- Press when stopped to start recording standby.
 - Press when recording to start a new track and continue recording without interruption. (See “Creating a higher numbered track manually” on page 29.)
 - The button lights when recording and in recording standby.
 - Press when there is no media in the current device to activate input monitoring, causing the currently selected input signal to be output. The button blinks during input monitoring.

2 – Names and Functions of Parts

Rear panel

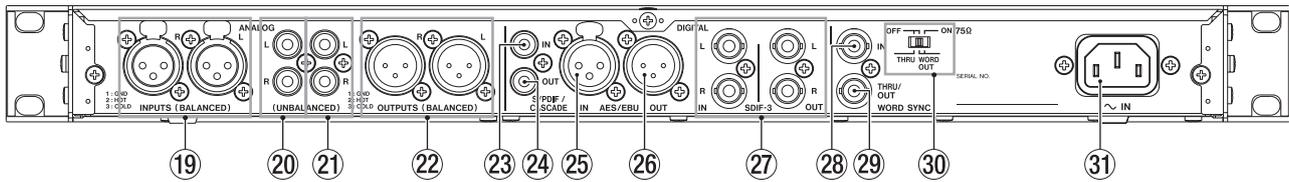

19 L/R ANALOG INPUTS (BALANCED)

These balanced analog XLR input connectors have a default nominal input level of +4 dBu, but it can also be set to +6 dBu. (See "Setting the reference level" on page 26.)
XLR (1: GND, 2: HOT, 3: COLD)

20 L/R ANALOG INPUTS (UNBALANCED)

These analog RCA pin input jacks have a nominal input level of -10 dBV.

21 L/R ANALOG OUTPUTS (UNBALANCED)

These analog RCA pin output jacks have a nominal output level of -10 dBV.

22 L/R ANALOG OUTPUTS (BALANCED)

These balanced analog XLR output jacks have a nominal output level of +4 dBu, but it can also be set to +6 dBu. (See "Setting the reference level" on page 26.)
XLR (1: GND, 2: HOT, 3: COLD)

23 DIGITAL IN [S/PDIF / CASCADE]

These are digital audio input connectors.
This digital input jack has a sampling rate converter that supports 32–192 kHz. (See "Using the sampling rate converter" on page 23.)
When connecting this unit to cascade multiple units, connect the **DIGITAL OUT [S/PDIF / CASCADE]** jack of another unit to this jack. (See "Connections and preparations" on page 45.)

24 DIGITAL OUT [S/PDIF / CASCADE]

This digital output jack can output digital audio in IEC60958-3 (S/PDIF) format.
To connect multiple DA-3000SD units, connect the **DIGITAL IN [S/PDIF / CASCADE]** jack of another unit to this jack. (See "Connections and preparations" on page 45.)

25 DIGITAL IN [AES/EBU]

This balanced XLR digital audio input jack supports the input of AES3-2003/IEC60958-4 (AES/EBU) format digital audio.
This digital input jack has a sampling rate converter that supports 32–192 kHz. (See "Setting the reference level" on page 26.)

26 DIGITAL OUT [AES/EBU]

This balanced XLR digital audio output jack can output digital audio in AES3-2003/IEC60958-4 (AES/EBU) format.

NOTE

When the **DIGITAL IN/OUT [SDIF-3]** connectors are connected, the **DIGITAL IN/OUT [S/PDIF / CASCADE]** and **DIGITAL IN/OUT [AES/EBU]** connectors cannot be used to input and output digital audio signals.

27 DIGITAL IN/OUT [SDIF-3] connectors

These are digital audio input and output connectors for DSD signals.
These are digital audio input and output connectors for the SDIF-3 (DSD-raw) format.
Each connector carries either the left or right channel of the stereo signal.

NOTE

When the **DIGITAL IN/OUT [SDIF-3]** connectors are connected, all digital audio devices (including this unit) in the system must be synchronized to the same clock source. To sync this unit to an external clock, input a 44.1 kHz clock signal through its **WORD SYNC IN** connector.
If the clock master within the system is set to 44.1 kHz, DSD audio sources will become clock slaves. For details see, "Setting the master clock" on page 26.

28 WORD SYNC IN connector

Use to input a word clock signal.
When syncing this unit to an external clock signal, the word clock signal input through this connector is used.

29 WORD SYNC THRU/OUT connector

This is a BNC word clock thru/output connector that can output a word clock signal (thru or 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz or 192 kHz).
Use the **THRU/WORD OUT** switch to change between thru and word output.

30 75Ω ON/OFF [THRU/WORD OUT] switch

Use to make the following settings.


- Whether or not the **WORD SYNC IN** connector has termination resistance (75 Ω)
- **WORD SYNC THRU/OUT** connector THRU/OUT setting

31 AC IN connector

Connect the included power cord here.

2 – Names and Functions of Parts


Wireless remote control (TASCAM RC-10)

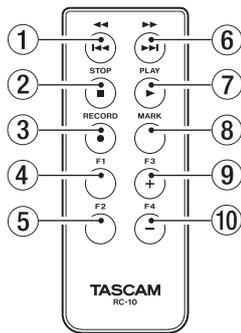

- ① **◀◀/▶▶ button**
During playback, press briefly to skip to the beginning of the track.
When near the beginning of a track, press briefly to skip to the beginning of the previous track.
Press and hold to search backward.
Press when the **BROWSE** screen is open to move up one level in the folder structure.
- ② **STOP [■] button**
Press to stop playback and recording.
- ③ **RECORD [●] button**
Press when stopped to start recording standby.
Press during recording to create a new higher-numbered track and continue recording without interruption. (See “Creating a higher numbered track manually” on page 29.)
- ④ **F1 button**
Press when stopped or during playback to switch to playback standby.
Press when recording to switch to recording standby.
- ⑤ **F2 button**
When a menu screen is open, press to return to the Home Screen.
Press when the Home Screen is open to change the display mode. (See “Home Screen” on page 13.)
- ⑥ **▶▶/▶▶▶▶ button**
Press briefly to skip to the next track.
Press and hold to search forward.
Press when the **BROWSE** screen is open to move down one level in the folder structure.
- ⑦ **PLAY [▶] button**
Press when stopped or in playback standby to start playback.
Press in recording standby to start recording.
- ⑧ **MARK button**
Press when stopped, recording, in playback standby or during playback to manually add a mark. (See “Adding marks manually during recording” on page 30.) (See “Adding marks manually during playback” on page 42.)
- ⑨ **F3 [+] button**
Skip to the next mark.
Press when the **BROWSE** screen is open to move the cursor up. (See “BROWSE screen navigation” on page 33.)
- ⑩ **F4 [-] button**
Skip to the previous mark.
Press when the **BROWSE** screen is open to move the cursor down. (See “BROWSE screen navigation” on page 33.)

Home Screen

The main unit display shows the following information.

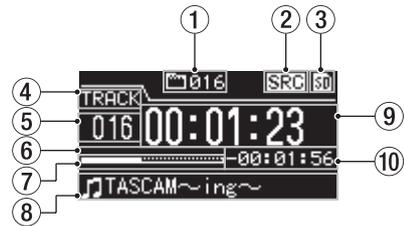

- ① **Total number of tracks**
This shows the total number of tracks in the playback area.
- ② **SRC operation indicator**
When the sampling rate converter is on, an SRC indicator appears here. When SRC is off, nothing appears here. (See “Using the sampling rate converter” on page 23.)
- ③ **Current device**
This icon shows the currently selected device.
- ④ **Display mode**
This is the current Home Screen display mode.
The unit has two display modes. The TRACK mode shows the elapsed time and remaining time of the current file, and the TOTAL mode shows the elapsed time and remaining time of all tracks.
- ⑤ **Track number**
This is the number of the track that is playing.
- ⑥ **Mark indicators**
These are the locations of marks in the track.
- ⑦ **Track playback position**
This shows the current playback position as a bar. As playback advances, the bar extends from the left to the right.
- ⑧ **Track title**
This is the file name of the track that is playing.
- ⑨ **Track elapsed time**
Depending on the display mode, this shows the elapsed time (hours: minutes: seconds) of all the tracks in the current playback area or of the currently playing track.
- ⑩ **Track remaining time**
This is the remaining time (hours: minutes: seconds) of the current track or all the tracks in the current playback area.
Depending on the display mode, this shows the remaining time (hours: minutes: seconds) of all the tracks in the current playback area or of the currently playing track.
During recording, this shows the remaining available recording time on the current media.

2 – Names and Functions of Parts

Menu structure

Press the MENU button to open the GENERAL menu screen.



There are eight menu screens organized by menu item type.

GENERAL	General function settings
REC FILE	Recording file format settings
I/O SETTINGS	Input and output settings
REC FUNC	Recording function settings
PLAY FUNC	Playback function settings
MEDIA	Media operations
TRACK EDIT	Current file editing
UTILITY	System settings and other functions

The menu items are as follows.

Menu item	Function	Pages
BROWSE	Open the BROWSE screen	page 33
MEDIA SEL	Media selection	page 20
CLOCK MSTR	Master clock settings	page 26
REF. LEVEL	Reference level settings	page 26
CASCADE	Cascade function settings	page 47
FILE	Recording file format settings	page 23
SAMPLE	Sampling frequency settings	page 23
CHANNEL	Recording mode settings	page 23
NAME	File name format settings	page 32
INPUT SEL.	Input source selection	page 22
INPUT VOL.	Input volume setting	page 24
OUTPUT VOL.	Output volume setting	page 25
SRC	Sampling rate converter settings	page 23
ADDA DIRECT	AD/DA DIRECT mode settings	page 27
IN MONITOR	Input monitoring function settings	page 24
SYNC REC	Synchronized recording function settings	page 28
AUTO TRACK	Automatic track incrementing function settings	page 29
AUTO MARK	Automatic mark function settings	page 30
PAUSE MODE	Pause mode settings	page 31
PLAY MODE	Play Mode setting	page 43
REPEAT	Repeat playback function settings	page 44
TRACK GAP	Gapless Playback mode setting	page 44
FORMAT	Media formatting	page 21
COPY	Media copy type selection	page 52
INFO.	View media information	page 53
RENAME	Edit folder and file names	page 35
DELETE	Delete folders and files	page 35
DIVIDE	Divide files	page 38
UNDO/REDO	Undo/redo DIVIDE operations*	page 39
F. PRESET	Restore the factory settings	page 53
OSC	Oscillator settings	page 31
KEYBOARD	Keyboard type setting	page 54
PEAK HOLD	Level meter peak hold time setting	page 25
CLOCK ADJST	Time setting	page 18

* "UNDO" only appears after a DIVIDE operation has been conducted. REDO only appears after UNDO has been used in place of the UNDO option.

NOTE

The settings made in all the menus are retained even when the unit is turned off.

 
2 – Names and Functions of Parts

Menu screen operation basics


You can operate the menu screens in the following manner.

To change the menu page:

Press the **MENU** button repeatedly until the menu page that you want appears



 Pushing the button cycles through the menu pages in the following order.



NOTE

You can turn the **MULTI JOG** dial to move between the **GENERAL** menu screen **BROWSE** item and the **UTILITY** menu **CLOCK ADJUST** item one item at a time.

However, it is not possible to move from the **UTILITY** menu **CLOCK ADJUST** item to the **GENERAL** menu **BROWSE** item or from the **GENERAL** page **BROWSE** item to the **UTILITY** menu **CLOCK ADJUST** item this way.

 
To select an item (vertically on the screen):

Turn the **MULTI JOG** dial.




To confirm the selection:

Press the **MULTI JOG** dial.



To open a submenu that is not shown on the display:

 Press the **MULTI JOG** dial.



To move up one level in the menu:

Press the **EXIT [PEAK CLEAR]** button.


To return directly to the Home Screen from menu mode:

Press the **HOME** button.


Menu operation procedures

This example explains how to set the **AUTO MARK** function.

1. Press the **MENU** button to open the **GENERAL** menu.

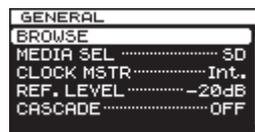

2. Press the **MENU** button to cycle through the menus.

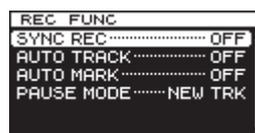


REC FUNC menu is open

3. Turn the **MULTI JOG** dial to the item to set.



AUTO MARK item selected

4. Press the **MULTI JOG** dial to open the setting screen.

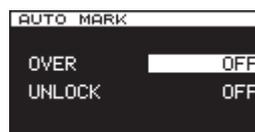

AUTO MARK screen open

5. Turn the **MULTI JOG** dial to change the setting.
6. To change the setting of a different item on the same screen, press the **MULTI JOG** dial to move the cursor to the next setting.
7. Turn the **MULTI JOG** dial to change the setting.
8. Repeat steps 5–7 as necessary to set other items.
9. Press the **MULTI JOG** dial to return to the menu. Press the **HOME** button to return to the Home Screen.

NOTE

- Press the **EXIT [PEAK CLEAR]** button to cancel the menu operation and return to the menu screen.
- In step 9 above, pressing the **MULTI JOG** dial reopens the Home Screen in some cases.



3 – Preparations

Making connections

The following example shows connections with an DA-3000SD.

Precautions before making connections

- Before making connections, read the operation manuals of the other equipment carefully and connect each one correctly.
- Turn OFF (or put in standby) the power of this unit and all other devices before connecting them.
- Connect all the devices to the same power supply line. When using a power strip, for example, use a thick cable with a high current capacity to minimize variation in the power voltage.

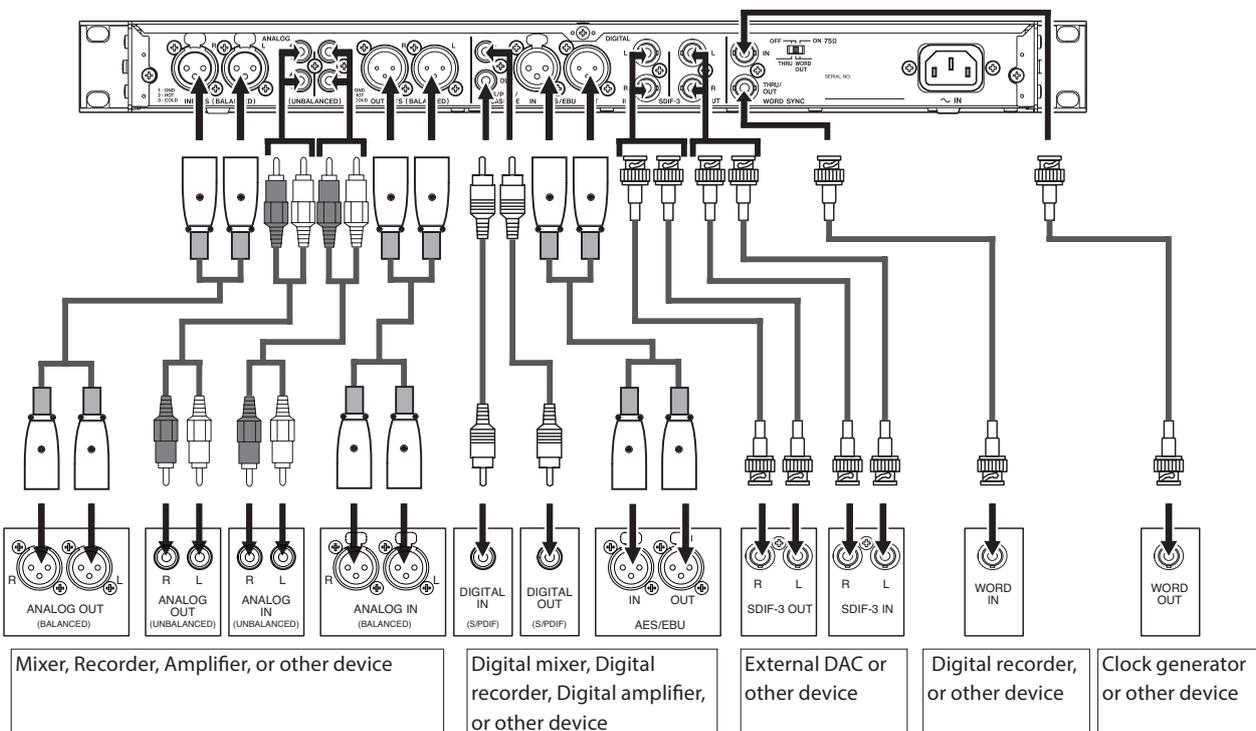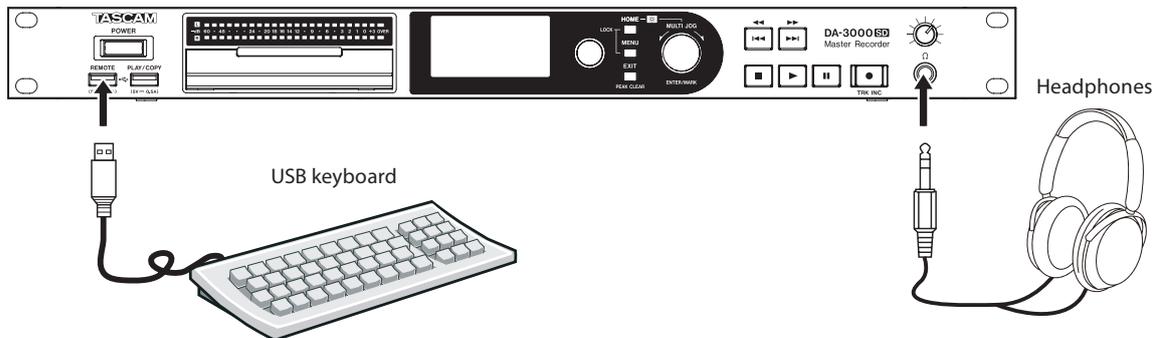


Preparing the remote control

Installing the battery


NOTE

At the time of purchase, this remote control comes with a lithium-ion coin battery (CR2025) installed. Before using the remote control, pull the isolation sheet out of the battery compartment.

1. Remove the battery holder.
While pressing ①, pull in direction ②.

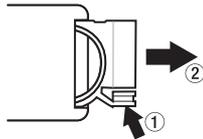

2. Install a coin-shaped lithium ion battery (CR2025) into the holder with the correct \oplus/\ominus orientation.

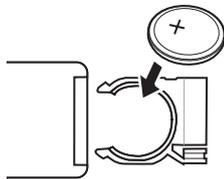

3. Reinsert the battery holder into the remote control.

When to change the battery

Replace the battery with a new one if the remote control operation range is reduced or if the buttons become unresponsive. Use a coin-shaped lithium-ion battery (CR2025).

Warnings about battery use

The accidental swallowing of a battery by a small child is extremely dangerous. Keep batteries and remote controls out of reach of small children. Consult a physician immediately if a child should swallow a battery.


Misuse of a battery could cause it to leak, rupture or otherwise be damaged. Please read and abide by the cautions related to batteries. (See "CAUTIONS ABOUT BATTERIES" on page 4.)

- Install the coin-shaped lithium-ion battery with the correct orientation.
- Do not recharge the coin-shaped lithium-ion battery.
- Do not heat or disassemble the coin-shaped lithium-ion battery or put it into fire or water.
- Do not carry or store the coin-shaped lithium-ion battery with small metal objects. Doing so could short the battery and cause leakage or rupture, for example.
- When storing or disposing of batteries, cover the contacts with tape to prevent them from touching other batteries or metal objects.
- Follow the disposal instructions written on the battery or given by the local government when you are done using it.

Using the wireless remote control

Refer to "Wireless remote control (TASCAM RC-10)" on page 13 for details about the functions of each button.

When using the remote control, point it at the remote control receiver on the unit within the angle shown below.

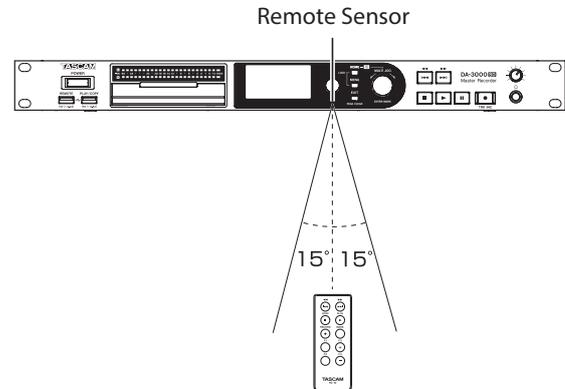

Operation distance

Directly in front: Within 7 meters

15° left or right: Within 7 meters

NOTE

- The operation distance varies depending on the angle.
- If anything is between the remote control and the sensor, operation might not work.
- Remove the battery if you will not use the remote control for a long time (one month or more).
- If the battery should leak, thoroughly clean any residue from inside the battery compartment and install a new battery.
- When using other devices controlled by infrared rays, use of this remote control might operate these devices by mistake.

3 – Preparations

Turning the power on and off

Press the front panel **POWER** switch.



After the unit starts up and the startup screen is shown, the Home Screen appears.
If no media is loaded in the current device, no track number or time will be shown on the Home Screen.

Turning the power OFF

Press the **POWER** switch to turn the power OFF.
No special shutdown procedures are necessary.

NOTE

When the unit is turned ON for the first time after purchase, and also if the unit has been stored OFF for such a long time that the internal battery has discharged, the **CLOCK ADJUST** screen will appear immediately, so that the Time can be corrected.

CAUTION

Do not turn the power OFF when the unit is in use (recording, playing back, writing data to SD/USB media, etc.). Doing so could cause recording to fail, recorded data to be damaged, sudden loud noise to be output from monitoring equipment, damage to equipment and harm to hearing.


Setting the date and time

The date and time are added to recorded files based on the unit's built-in clock.


1. Press the **MENU** button repeatedly to open the **UTILITY** page, and turn the **MULTI JOG** dial to select **CLOCK ADJUST**.



2. Press the **MULTI JOG** dial to open the **CLOCK ADJUST** screen.

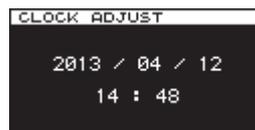

3. Press the **MULTI JOG** dial again to enter setting mode. The cursor will appear at the item to be changed.

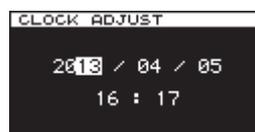

4. Turn the **MULTI JOG** dial to change the value and then press it to confirm and move the cursor to the next item.
5. After changing the year, month, date, hour and minute, the cursor disappears and the date and time setting ends.

NOTE

While setting the date and time, you can press the **EXIT [PEAK CLEAR]** button to cancel any changes and return to the menu screen.

6. Press the **EXIT [PEAK CLEAR]** button to return to the menu screen.

Adjusting the brightness

While pressing and holding the **HOME** button, turn the **MULTI JOG** dial to adjust the display and indicator brightness.



Inserting and ejecting SD cards


Inserting SD cards (sold separately)

Insert an SD card into the appropriate card slot on the front panel to use it for playback and recording.


NOTE

You can insert SD cards regardless of whether the power is ON or OFF.


1. Pull the card slot door forward to open it.

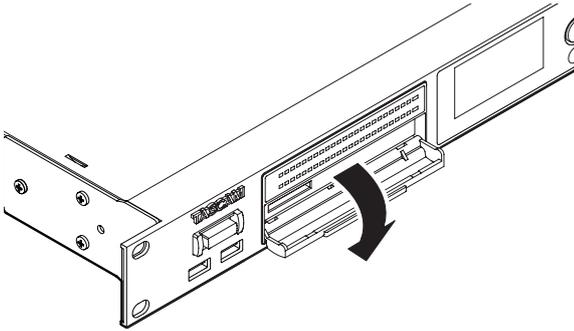

2. Insert the SD card with the correct orientation. The label should be facing up and the contacts facing in.

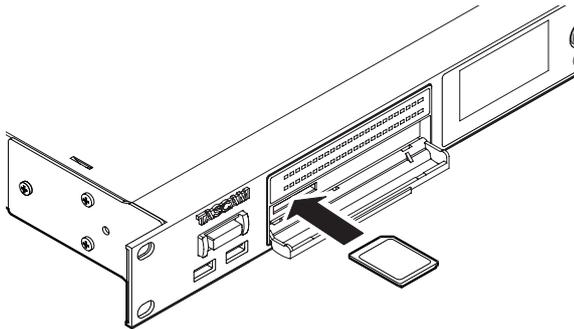

3. Close the card slot door.

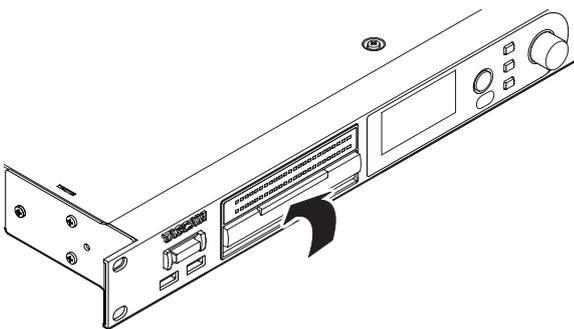

NOTE

If the SD card slot door will not close, remove the card, and then insert it once again. To remove an SD card, pull it.


Ejecting SD cards

Turn the unit off or stop operation before ejecting an SD card.

CAUTION

Never remove an SD card when the unit is in use (recording, playing back, writing data to a card, etc.). Doing so could cause recording to fail, recorded data to be damaged, sudden loud noise to be output from monitoring equipment, damage to equipment and harm to hearing.


1. Pull the card slot door forward to open it.
2. To eject an SD card, press the SD card in slightly.

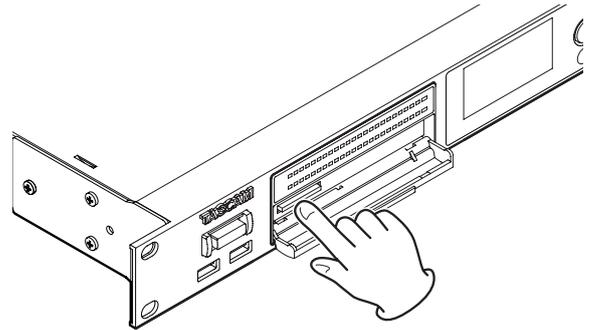

3. Pull the SD card out the rest of the way.

SD card write protection

SD cards have write-protection switches.

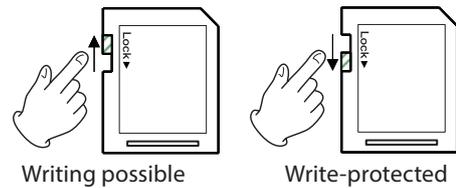

If the protection switch is slid into the "LOCK" position, adding and editing files will not be possible. To record, erase or otherwise change files, disable write protection.

NOTE

- If a protected SD card is loaded, the unit will check all of the audio files on it each time the device is changed. For this reason, changing devices takes time. Moreover, editing the playlist and other operations are not possible.
- This unit writes track data to the media in order to improve performance. Since track data cannot be written to write-protected SD cards, media reading will take longer and performance could otherwise be affected.

3 – Preparations

Connecting/disconnecting USB flash drives

Connecting USB flash drives (sold separately)

To use a USB flash drive with this unit for playback and dubbing, insert it into the PLAY/COPY connector on the front of the unit.

NOTE

You can insert a USB flash drive anytime regardless of whether the power is ON or OFF.

Disconnecting USB flash drives

Turn the power OFF or stop operation before disconnecting a USB flash drive.

CAUTION


Never remove a USB flash drive when the unit is in use (recording, playing back, writing data to the drive, etc.). Doing so could cause recording to fail, recorded data to be damaged, sudden loud noise to be output from monitoring equipment, damage to equipment and harm to hearing.

Selecting the media used


Before starting to work with the unit, select the media that you want to use (SD card or USB flash drive).

To select the media used, follow these procedures.

1. Press the **MENU** button to open the **GENERAL** menu screen, and turn the **MULTI JOG** dial to select **MEDIA SEL**.

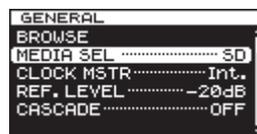

2. Press the **MULTI JOG** dial to open the **MEDIA SELECT** screen.

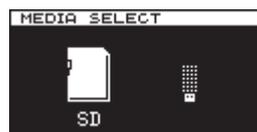

3. Turn the **MULTI JOG** dial to select the media used, and press the **MULTI JOG** dial to confirm the selection.

Options	Details
	SD card (default)
	USB flash drive

NOTE

During selection, press the **EXIT [PEAK CLEAR]** button to cancel the selection and return to the menu screen.

4. The name of the currently selected media appears at the top right of the Home Screen.



	SD card selected
	USB flash drive selected

Preparing SD cards and USB flash drives

You must use this unit to format SD cards and USB flash drives in order to make them usable by the unit.

ATTENTION


- Formatting will erase all data on an SD card or USB flash drive.
 - Always format with this unit. If an SD card or USB flash drive is formatted by another device or a computer, it could affect operation of the unit.
1. Use the **MENU** button and **MULTI JOG** dial to open the **MEDIA SELECT** screen and select the media to format. (See “Selecting the media used” on page 20.)
 2. Press the **MENU** button to open the **MEDIA** menu, and turn the **MULTI JOG** dial to select **FORMAT**.



3. Press the **MULTI JOG** dial to open the format type selection pop-up.



4. Turn the **MULTI JOG** dial to select **QUICK FORMAT** or **ERASE FORMAT**, and press the **MULTI JOG** dial. A confirmation pop-up message appears.

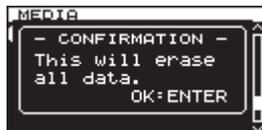

NOTE

To cancel formatting, press the **EXIT [PEAK CLEAR]** button.

5. Press the **MULTI JOG** dial to start formatting. While formatting, - **QUICK FORMAT** - or - **ERASE FORMAT** - appears in a pop-up.



Pop-up when **QUICK FORMAT** selected

6. After formatting completes, the pop-up disappears and the menu reopens.

Lock function

A lock function for this unit can be turned on/off.

When the lock function is on, operation using front panel buttons, wireless remote controls and USB keyboards is disabled.

NOTE

- If an operation is attempted when the lock function is on, **Lock turned on.** will appear on the display and the operation will not be executed.
- The **POWER** switch and the Ω (headphone) knob can be used even when the lock function is on.
- The lock function on/off is retained even when the unit is turned off.

Turning on the lock function

Press the **MENU** button while pressing the **HOME** button on the front of the unit.

Lock turned on. will appear in a pop-up and the lock function will be turned on.



Turning off the lock function

When the lock function is on, press the **MENU** button while pressing the **HOME** button on the front of the unit.

Lock turned off. will appear in a pop-up and the lock function will be turned off.



4 – Recording

This unit can record to SD card in the following formats.

PCM recording

WAV (BWF) format (44.1/48/88.2/96/176.4/192 kHz sampling frequency, 16/24 bit)

DSD recording

DSDIFF, DSF formats (2.8224/5.6448 MHz sampling frequency)
The following explanations assume that you have loaded a recordable SD card, completed the necessary connections and turned the unit on.

NOTE

- The maximum numbers of folders and tracks that can be recorded by this unit on an SD card are as follows.
Maximum tracks: 999 tracks per folder
Maximum folders: 3000 per card
- When using media with a capacity of 2 GB or less, recording the maximum number of tracks or creating the maximum number of folders in the root folder as shown above might not be possible due to file system limitations. (The actual numbers depend on other conditions.)
- If a write-protected SD card is loaded in the unit, recording will not be possible. (See “SD card write protection” on page 19.)
- This unit cannot record directly to a USB flash drive due to system limitations. It can, however, format USB flash drives and write and erase data on them, for example. (See “Preparing SD cards and USB flash drives” on page 21.) (See “5 – Folder and file operations (BROWSE screen)” on page 39.) (See “8 – Editing playlists” on page 49.)
- You can copy audio files between an SD card and a USB flash drive. For details, see “Copying files between media (backing up)” on page 52.
- The largest file that this unit will create during record is 2 GB. If a recording is about to exceed this size, a new file is automatically created, but the audio is processed so there is seamless continuity between the current and new file. On playback, in order to hear the audio seamlessly, please set the **TRACK GAP** mode setting to **GAPLESS**. (See “Setting gapless playback mode” on page 44.)

Unexpected power interruptions

If an unexpected power interruption occurs when recording to an SD card, the unit has a protection function that might prevent the complete loss of all track recording data. Data recorded up to about 25 seconds before the interruption occurs is saved.

ATTENTION

- Even with this protection function, due to the characteristics of SD cards and USB flash drives, if the unit is writing to the system area when the power is interrupted or the media is removed from the unit, all the files on the media could be damaged or lost. For this reason, you should try as much as possible to avoid power interruptions during recording and playback.
- This function was not created for the purpose of use with an external timer, for example, turning off the power.


Selecting the input source

Set the input source (recording source) to one of 6 types of input (balanced analog, unbalanced analog, PCM-SPDIF digital, PCM-AES/EBU digital, DSD-SDIF-3 digital, DSD-DSD-raw digital). Follow the procedures below to select the input source.


NOTE

The input source cannot be changed when recording or in recording standby.

1. Press the **MENU** button repeatedly to open the **I/O SETTINGS** menu, and turn the **MULTI JOG** dial to select **INPUT SEL..**

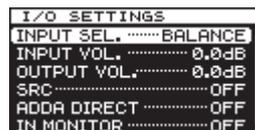

2. Press the **MULTI JOG** dial to open the **INPUT SELECT** screen.

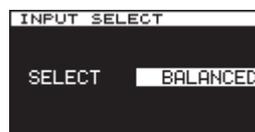

3. Turn the **MULTI JOG** dial to select the input source.
 - For PCM recording
Options: **BALANCED** (default), **UNBALANCED**, **AES/EBU**, **SPDIF**
 - For DSD recording
Options: **BALANCED** (default), **UNBALANCED**, **SDIF-3**, **DSD-raw**
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

Showing the input source

Use the procedures in “Selecting the input source” above to check the current input source. The Home Screen does not have any input source indication.

Setting the recording file format


You can set the recording file format, as well as sampling rate and stereo/mono mode.

For PCM recording, you can set the format to WAV-16 or WAV-24.


For DSD recording, you can set it to DSDIFF or DSF.

When stopped, use the menu to set the file format.

1. Press the **MENU** button repeatedly to open the **REC FILE** menu, and turn the **MULTI JOG** dial to select **FILE**.

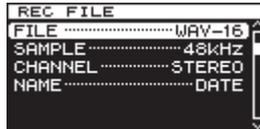

2. Press the **MULTI JOG** dial to open the **FILE TYPE** screen.

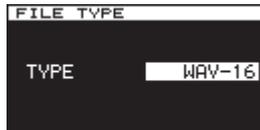


3. Turn the **MULTI JOG** dial to set the recording file format.
 - For PCM recording
Options: WAV-16 (16 bit, Default value), WAV-24 (24 bit)
 - For DSD recording
Options: DSDIFF, DSF

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

5. Turn the **MULTI JOG** dial to select **SAMPLE**.



6. Press the **MULTI JOG** dial to open the **SAMPLING RATE** screen.

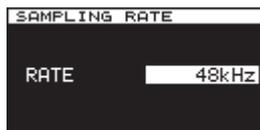


7. Turn the **MULTI JOG** dial to set the sampling rate.
 - For PCM recording
Options: 44.1kHz, 48kHz (default), 88.2kHz, 96kHz, 176.4kHz, 192kHz
 - For DSD recording
Options: 2.8MHz, 5.6MHz

8. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

9. Turn the **MULTI JOG** dial to select **CHANNEL**.



10. Press the **MULTI JOG** dial to open the **CHANNEL** screen.

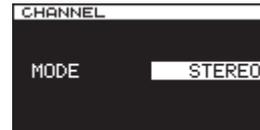

11. Turn the **MULTI JOG** dial to set the Recorded file's channel type (Stereo File or Dual Mono File).
Options: STEREO (default), MONOx2

12. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

Using the sampling rate converter

Since this unit has a built-in sampling rate converter, you can record at a sampling frequency that is different from the sampling frequency of the digital input source.

Use the menu to turn the sampling rate converter (SRC) ON/OFF.

1. Press the **MENU** button repeatedly to open the **I/O SETTINGS** menu, and turn the **MULTI JOG** dial to select **SRC**.



2. Press the **MULTI JOG** dial to open the **SRC** screen.



3. Turn the **MULTI JOG** dial to turn the sampling rate converter on or off.

Options: OFF (default), ON

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

- If you try to record when the digital signal input through the **DIGITAL IN** connector has a sampling frequency that is different from that set on the **SAMPLING RATE** screen and the sampling rate converter (SRC) is off, a -- **DIM ERROR** -- Digital input is illegal. pop-up message will appear. (See "Setting the recording file format" on page 23.)
- The sampling rate converter (SRC) will not operate on SDIF-3/DSD-raw input.
- The sampling rate converter can accept incoming data at rates of 32 kHz to 216 kHz.
- The sampling rate converter cannot be switched on/off when recording or in recording standby.

4 – Recording

Monitoring the input signal

Input signal monitoring is usually only on during recording and when in recording standby. You can, however, also enable input monitoring when the unit is stopped.

When Input signal monitoring is turned ON, playback is not possible but Recording can be performed. In order to listen to previously recorded audio, please turn the Input monitor OFF. Follow the procedures below to make this setting.

1. Press the **MENU** button repeatedly to open the I/O SETTINGS menu, and turn the **MULTI JOG** dial to select **IN MONITOR**.



2. Press the **MULTI JOG** dial to open the **INPUT MONITOR** screen.



3. Turn the **MULTI JOG** dial to turn input monitoring on or off. Options: OFF (default), ON
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

Monitoring cannot be turned on during playback or when paused.


Adjusting the input signal level

You can use the menu to adjust the level of the input signal.

1. Press the **MENU** button repeatedly to open the I/O SETTINGS menu, and turn the **MULTI JOG** dial to select **INPUT VOL.**



2. Press the **MULTI JOG** dial to open the **INPUT VOLUME** screen.

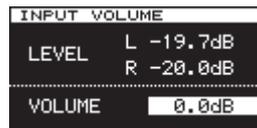

NOTE

The **LEVEL** item shows the input levels.

3. Turn the **MULTI JOG** dial to adjust the **VOLUME** item, which is the input signal level. Options: MUTE, -60dB-+12dB (default: 0.0dB)

NOTE

The level meter **OVER** indicators will light at the following levels. If the DSD mode is set to +3, though, they will light at +3dB and higher.

- PCM recording and playback: 16 bit full-scale
- DSD recording and playback: 0dB

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.


NOTE

The input signal level setting is retained even when the unit is off.


Adjusting the output signal level

You can use the menu to adjust the level of the output signal.

1. Press the **MENU** button repeatedly to open the I/O SETTINGS menu, and turn the **MULTI JOG** dial to select **OUTPUT VOL..**

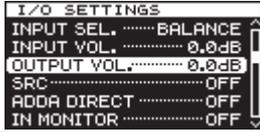

2. Press the **MULTI JOG** dial to open the **OUTPUT VOLUME** screen.

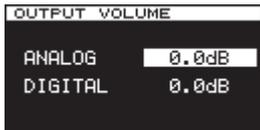

NOTE

Analog and digital output volumes can be adjusted.

3. Turn the **MULTI JOG** dial to adjust the output signal levels for the “ANALOG” and “DIGITAL” items.
Options: MUTE, -60dB→+12dB (default: 0.0dB)
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

Setting the peak hold indicators

You can set how long the peak hold indicators appear on the level meters.

1. Press the **MENU** button repeatedly to open the **UTILITY** menu, and turn the **MULTI JOG** dial to select **PEAK HOLD**.



2. Press the **MULTI JOG** dial to open the **PEAK HOLD** screen.



3. Turn the **MULTI JOG** dial to set how long the peak hold indicators appear.

Options	Details
OFF	No Peak Hold indicators are shown.
1s-10s	The peak hold indicator will remain shown for the selected number of seconds. (default: 2s)
INF.	Peak Hold indicators are shown until the EXIT [PEAK CLEAR] button is pushed.

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

4 – Recording

Setting the master clock

You can set the master clock used by this unit.

NOTE

When multiple digital audio devices are connected in the same system, make certain that they all use the same master clock.

1. Press the **MENU** button to open the **GENERAL** menu, and turn the **MULTI JOG** dial to select **CLOCK MSTR**.



2. Press the **MULTI JOG** dial to open the **CLOCK** screen.



3. Turn the **MULTI JOG** dial to select the master clock.

Options	Details
Internal (default)	Use the unit's built-in master clock.
WORD	Use the clock signal input through the WORD SYNC IN connector as the master clock.
DIN (DIGITAL IN)	Use the clock signal of the currently selected digital audio input source as the master clock.

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

- If a **CLOCK LOST...** pop-up error message appears, press the **EXIT [PEAK CLEAR]** button to return to the Menu Screen, and change the master clock setting.
- If the unit cannot lock to the set master clock, it will automatically switch to the internal clock and a star (*) will appear at the end of the selected setting.



- When using word clock and recording in DSD format, please use a 44.1kHz signal.

Setting the reference level

You can set the reference level for analog input and output to a dB value less than the maximum level (0 dB).

1. Press the **MENU** button to open the **GENERAL** menu screen, and turn the **MULTI JOG** dial to select **REF. LEVEL**.



2. Press the **MULTI JOG** dial to open the **REFERENCE LEVEL** screen.



3. Turn the **MULTI JOG** dial to set the reference level.

Options	Details
-9dB	Standard level: +6 dBu Maximum level: +15 dBu
-14dB	Standard level: +4 dBu Maximum level: +18 dBu
-16dB (default)	Standard level: +4 dBu Maximum level: +20 dBu
-18dB	Standard level: +4 dBu Maximum level: +22 dBu
-20dB	Standard level: +4 dBu Maximum level: +24 dBu

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

Using this unit as an AD/DA converter

This unit can also be used as an AD/DA converter when connected to another recorder or DAW, for example.

To use this unit as an AD/DA converter, set **ADDA DIRECT** mode to **ON**. When **ON**, the **INPUT SELECT** screen setting does not function, and setting the input selection for the analog and digital inputs separately is necessary. In addition, when **ADDA DIRECT** mode is **ON**, playback is not possible, but recording the analog input signal is possible. To play back a recording, set **ADDA DIRECT** mode to **OFF**.

1. Press the **MENU** button repeatedly to open the **I/O SETTINGS** menu, and turn the **MULTI JOG** dial to select **ADDA DIRECT**.



2. Press the **MULTI JOG** dial to open the **ADDA DIRECT** screen.



3. Turn the **MULTI JOG** dial to turn **ON** or **OFF**.
Options: **OFF** (default), **ON**
4. Press the **MULTI JOG** dial to confirm the setting.
The cursor will move to the **ANA. IN** setting.
5. Turn the **MULTI JOG** dial to select the **ANA. IN**.

Options	Details
BALANCED (default)	balanced XLR input jacks
UNBALANCED	unbalanced RCA input jacks

6. Press the **MULTI JOG** dial to confirm the setting.
The cursor will move to the **DIGI. IN** setting.
7. Turn the **MULTI JOG** dial to select the **DIGI. IN**.
Options:
 - For PCM recording: **AES/EBU**, **SPDIF**
 - For DSD recording: **SDIF-3**, **DSD-raw**

NOTE

The selected options will change automatically according to the recording file format selected on the **FILE TYPE** screen. (See "Setting the recording file format" on page 23.)

8. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.

NOTE

When **ADDA DIRECT** mode is **ON**, the input signal level setting will only affect the Analog Input.

Basic recording operations

You can begin recording after you have finished making the settings described previously, including input source selection, recording file format, sampling rate converter activation and input level adjustment.

To start recording standby from a stopped state:

Press the front panel or remote control **RECORD** button to put the unit in recording standby (The **RECORD [TRK INC]** and **PAUSE** buttons on the main unit light).

To start recording from recording standby:

Press the front panel or remote control **PLAY** button.

To switch from recording to recording standby:

Press the main unit **PAUSE** button or the remote control **F1** button.

To stop recording:

Press the front panel or remote control **STOP** button. When the unit stops recording, the recorded data will be written and an audio file will be created.

NOTE

- On the **FILE NAME** screen, you can set the format of the names automatically given to audio files when they are created. (See "Setting the file name format" on page 32.)
- The maximum file size for each track is 2 GB.
- Recorded tracks will be created in the current folder. (See "Folder operations" on page 34.)
- Confirming digital signals might take some time. While confirming, "CHECKING DIN CLK" will be shown.

ATTENTION

While the recording is being written to the current media, **WRITING FILE ...** will appear the display. While this message is shown, do not move the unit, turn off the power or remove the current media. The recorded content cannot be saved correctly if writing is interrupted.

4 – Recording

Sync recording

If the sync recording function is on, recording will begin automatically when the input signal exceeds the level set in advance (SYNC REC LEVEL).

Activating and setting sync recording

Use the menu to turn the sync recording function on and off and to set the sync recording level.

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **SYNC REC**.



2. Press the **MULTI JOG** dial to open the **SYNC REC** screen.



3. Turn the **MULTI JOG** dial to turn the sync recording function on or off.
Options: **OFF** (default), **ON**
4. Press the **MULTI JOG** dial to confirm the setting.
If set to **ON**, the cursor will move to the **LEVEL** item.
If set to **OFF**, the **REC FUNC** menu screen will reopen.
5. Turn the **MULTI JOG** dial to select the sync level.
Options: **-24dB**, **-30dB**, **-36dB**, **-42dB**, **-48dB**, **-54dB** (default), **-60dB**, **-66dB**, **-72dB**
6. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.


NOTE

- After recording starts, if the signal stays below the sync level continuously for 5 seconds, the unit automatically enters recording standby.
- Sync recording starts as soon as the level is detected.

Sync recording operation

When the sync recording function is on and the unit is in recording standby, recording will automatically start or stop in response to the level of the input source.


- When a signal higher than the sync level is input, recording will begin automatically. Recording will automatically stop when the signal stays below the sync level continuously for 5 seconds. However, recording will not begin even if input is detected unless there has been at least one second in which the signal was below the SYNC LEVEL after entering recording standby.

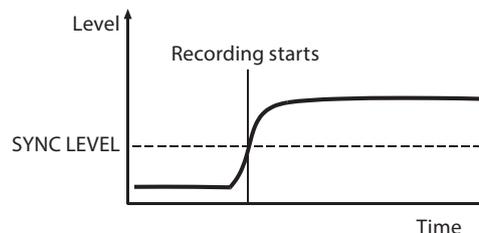

- To stop sync recording, set the **SYNC REC** screen **MODE** item to **OFF**.


If the sync level is too high

If the sync level setting is too high, the beginning of a song that starts with a low volume might not be captured.

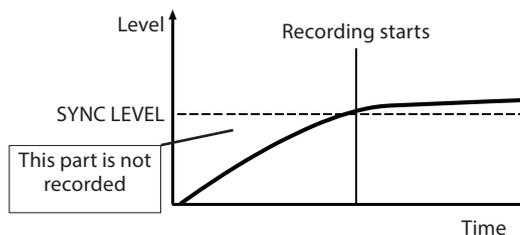

If the sync level is too low

Sync recording will not begin from recording standby if the source you are recording has a background noise level that is higher than the sync level.

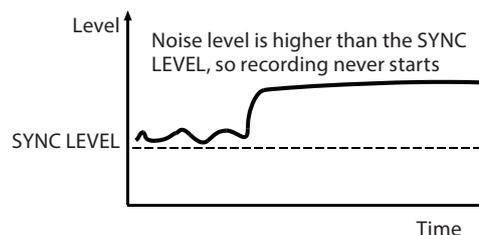

Creating new higher-numbered tracks automatically

When using the Auto Track function during recording, the unit automatically creates a new track with a higher number when a set condition is met. Use the menu to enable the Auto Track function and set its mode.

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **AUTO TRACK**.



2. Press the **MULTI JOG** dial to open the **AUTO TRACK** screen.




3. Turn the **MULTI JOG** dial to set the auto track function mode.

Options	Details
OFF (default)	New tracks will not be created automatically.
LEVEL	<p>A new track with a higher number will be created when the signal exceeds the auto track level (AUTO TRACK screen LEVEL item value) after having stayed below it for at least two seconds.</p> <p>The graph shows a signal level on the y-axis and time on the x-axis. A horizontal dashed line indicates the 'Auto track level'. The signal level starts above this line, then drops below it for a duration of 2 seconds, then rises back above it.</p>
DD	When recording a digital source (CD or MD) via a DIGITAL IN jack, a new track will be created when a track division is detected in the source. However, when recording an analog source or a digital source other than the types listed above, this will work in the same way as LEVEL mode, and new tracks will be created in response to the input level.
TIME	A new track with a higher number will be created at the set time interval (AUTO TRACK screen TIME item value).
SIZE	A new track with a higher number will be created when the set size is reached (AUTO TRACK screen SIZE item value).

NOTE

If you choose the **LEVEL**, **TIME** or **SIZE** option, the parameter to be set appears beneath the **MODE** item.

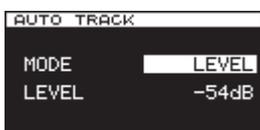

4. Press the **MULTI JOG** dial to confirm the setting. The cursor will move to the **LEVEL** item.
5. Turn the **MULTI JOG** dial to set the parameter value.

Options	Parameters
LEVEL (level mode)	-24dB, -30dB, -36dB, -42dB, -48dB, -54dB (default), -60dB, -66dB, -72dB
DD (digital direct mode)	No options
TIME (time mode)	1min, 2min, 3min, 4min, 5min, 6min (default), 7min, 8min, 9min, 10min, 15min, 30min, 1hour, 2hour
SIZE (size mode)	640MB, 1GB, 2GB (default)

6. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.

Creating a higher numbered track manually

When recording, press the front panel or remote control **RECORD** button to create a new track (with a higher number) without interrupting recording. You cannot, however, create a track of 4 seconds or less.

NOTE

You can also divide a track after recording using the editing function. (See "Dividing files" on page 38.)

4 – Recording

Setting the automatic mark function

By turning the **AUTO MARK** options **ON**, marks can be added automatically whenever the **OVER** indicator lights or an external clock synchronization error occurs. Use of this function allows you to quickly find and check problems that occurred in the system during recording.

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **AUTO MARK**.



2. Press the **MULTI JOG** dial to open the **AUTO MARK** screen.



3. Turn the **MULTI JOG** dial to select the **OVER** item. (When **OVER** is **ON**, a mark is added automatically whenever an **OVER** level meter indicator lights.)
Options: **OFF** (default), **ON**
4. Press the **MULTI JOG** dial to confirm the setting.
The cursor moves to the **UNLOCK** item.
5. Turn the **MULTI JOG** dial to select **UNLOCK**. (When **ON**, marks will be added when the unit unlocks from the external clock.)
Options: **OFF** (default), **ON**
6. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE

- When an **OVER** occurs, the Mark name is "OVERxxx" *.
 - When an **UNLOCK** even occurs, the Mark name is "UNLKxxx" *.
- * "xxx" is a number that increments through all MARKs in this track.

Adding marks manually during recording

You can add marks at the positions you want while recording and use those marks to change positions quickly during track playback.

NOTE

During recording, adding marks is possible, but moving to and deleting those marks is not possible. Moving to and deleting marks is only possible when the track is stopped, in playback standby or playing back. (See "Locating to marks" on page 42.) (See "Deleting marks" on page 42.)

Adding marks when recording

During track recording, press the **MULTI JOG** dial (or remote control **MARK** button) at any point where you want to add a mark.

NOTE

- A maximum of 99 marks can be added to each track. Mark information is stored in the track file.
 - You can also add marks during track playback. (See "Adding marks manually during playback" on page 42.)
 - When adding a mark manually, the Mark Name "MARKxxx" * is used.
- * "xxx" is a number that increments through all MARKs in this track.

Using the oscillator (OSC)

The unit can output a sine wave at a standard level. You can choose from three output frequencies for the sine wave. Use this to check connections, for example.

1. Press the **MENU** button to open the **UTILITY** menu, and turn the **MULTI JOG** dial to select **OSC**.



2. Press the **MULTI JOG** dial to open the **OSCILLATOR** screen.




3. Turn the **MULTI JOG** dial to select the frequency of the oscillator.
Options: 440Hz, 1kHz (default), 10kHz
4. Press the **MULTI JOG** dial to confirm the oscillator frequency and move the selection to the oscillator level item.
5. Turn the **MULTI JOG** dial to select the oscillator level.
Options: -25dB-0dB (the default value is the reference level setting value)
6. Press the **MULTI JOG** dial to confirm the oscillator level and move the selection to ON/OFF.
7. Turn the **MULTI JOG** dial to switch the oscillator on/off.
Options: OFF (default), ON
When "ON" is selected, a sine wave will be output and the oscillator level will be shown by the level meters.
8. Press the **MULTI JOG** dial to return to the Menu Screen.


Setting the pause mode

You can set whether or not a new track with a higher number is created when switching from recording to recording standby.

1. Press the **MENU** button repeatedly to open the **REC FUNC** menu, and turn the **MULTI JOG** dial to select **PAUSE MODE**.

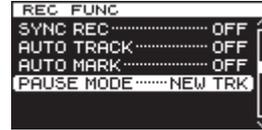

2. Press the **MULTI JOG** dial to open the **PAUSE MODE** screen.

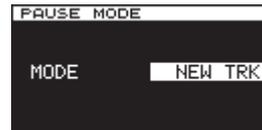

3. Turn the **MULTI JOG** dial to set the pause mode.

Options	Details
NEW TRK (default)	New track with higher number created when switching from recording to recording standby.
SAME TRK	No new track created when switching from recording to recording standby.

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

4 – Recording

Setting the file name format

You can specify the type of file name that is automatically given to files when recorded.

1. Press the **MENU** button to open the **REC FILE** menu, and turn the **MULTI JOG** dial to select **NAME**.



2. Press the **MULTI JOG** dial to open the **FILE NAME** screen.



3. Turn the **MULTI JOG** dial to set the file name format.

Options	Details
DATE (default)	The date and time of the built-in clock will become the file name.
USER1–USER3	The file will be named according to eight characters set by the user.

4. Press the **MULTI JOG** dial to return to the menu screen after selecting **DATE** or after selecting **USER1–USER3** if you do not want to change the file name given.

After selecting **USER1–USER3**, if you want to change the file name given, press the **▶▶ [▶▶I]** button to open the **RENAME** screen.



5. Edit the file name. See “Inputting and editing characters” on page 32 for details about how to edit a file name.
6. When you are done setting the file name, turn the **MULTI JOG** dial to select **Enter**. Then, press the **MULTI JOG** dial to confirm the changes to the characters and return to the **FILE NAME** screen.
7. Press the **MULTI JOG** dial again to return to the menu screen.

Inputting and editing characters

Use the following operations to edit characters.

To move the cursor (editing position):

Use the **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons on the main unit.

To change the character at the cursor position:

Turn the **MULTI JOG** dial.

To insert a space:

Turn the **MULTI JOG** dial to select **SPACE**, and press the **MULTI JOG** dial.

To delete a character:

Turn the **MULTI JOG** dial to select **DEL** (when you want to delete a character after the cursor) or **BS** (when you want to delete a character before the cursor), and press the **MULTI JOG** dial.

To delete all characters after the cursor position:

Turn the **MULTI JOG** dial to select **DEL**, and press and hold the **MULTI JOG** dial.

To delete all characters before the cursor position:

Turn the **MULTI JOG** dial to select **BS**, and press and hold the **MULTI JOG** dial.

To switch between uppercase and lowercase:

Turn the **MULTI JOG** dial to select **Shift**, and press the **MULTI JOG** dial.

This also switches between numbers and symbols at the same time.

To cancel editing:

Press the **EXIT [PEAK CLEAR]** button.

NOTE

- You can also directly access SD card from a computer to change the names of files, but doing so could change the playback order of the files.
- Names that contain characters other than letters of the alphabet, numbers and symbols cannot be edited. (Such names cannot be shown on the **RENAME** screen.)
- The following symbols and punctuation marks cannot be used in names.
¥ \ / ; : , * ? " < > |
- You can also use a USB keyboard to edit text. (See “Using a keyboard to input text” on page 54.)

Media capacities and recording times

This table shows maximum total recording times for different media capacities and file formats.

Recording mode settings		SD card (per GB)	
PCM	WAV-16	44.1 kHz	90 min.
		48 kHz	85 min.
		88.2 kHz	45 min.
		96 kHz	42 min.
		176.4 kHz	22 min.
	WAV-24	192 kHz	21 min.
		44.1 kHz	60 min.
		48 kHz	55 min.
		88.2 kHz	30 min.
		96 kHz	25 min.
DSD	DSDIFF	176.4 kHz	15 min.
		192 kHz	13 min.
	DSF	2.8 MHz	22 min.
		5.6 MHz	11 min.
		2.8 MHz	22 min.
		5.6 MHz	11 min.

5 – Folder and file operations (BROWSE screen)

This unit manages audio files on SD cards and USB flash drives in a folder structure.

You can select the folder or file that you want to work with on the **BROWSE** screen and open file or folder menu pop-up. In these menus, you can create folders, delete folders and files, change their names and add files to playlists, for example. Moreover, you can also move and copy folders and files between folders using a direct operation from the **BROWSE** screen.

TIP

- By using a card reader or other interface to read files on SD/USB media from a computer, you will be able to use your computer to modify the folder structure, edit folder and file names, and delete folders and files.
- If you perform this type of editing from your computer, be aware that the playback order of the files on the unit may have changed.


Opening the BROWSE screen

The following operation example assumes that an SD card has been loaded and selected as the current media.

1. Press the **MENU** button to open the **GENERAL** page of the menu screen, and turn the **MULTI JOG** dial to select **BROWSE**.



2. Press the **MULTI JOG** dial to open the **BROWSE** screen.

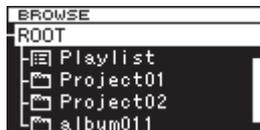

NOTE

During selection, press the **EXIT [PEAK CLEAR]** button to cancel the selection and return to the menu screen.

BROWSE screen navigation

Folders and music files appear on the **BROWSE** screen in a hierarchical structure much as they would appear on a computer.

When the **BROWSE** screen is open, use the main unit **MULTI JOG** dial or **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons (or or remote control **F3/F4** or **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons) to select folders and files that you want to work with.

- Press the **MULTI JOG** dial to open the folder or file menu pop-up. (See "Folder operations" on page 34.) (See "File operations" on page 34.)
- Press the **EXIT [PEAK CLEAR]** button to move up one level in the file structure. When using the folder or file menu, press this to go back one step.
- Turn the **MULTI JOG** dial, or use the remote control **F3/F4** buttons to select a subfolder or file inside the same folder.
- When a folder or a file is selected, press the main unit or remote control **◀◀ [I◀◀]** button to move up a level in the file structure, or press the **▶▶ [▶▶I]** button to move down a level.
When a folder is selected, you can press the **MULTI JOG** dial to change levels even when the folder menu pop-up **SELECT** item is selected. When the top line on the **BROWSE** screen is selected, press the **MULTI JOG** dial to move up one level. When any other line is selected press the **MULTI JOG** dial to move down one level.
- When a folder or file is selected, press the main unit **HOME** button (or remote control **F1** button) to return to the Home Screen.
- When a folder or a file is selected, press the main unit or remote control **PLAY** button to return to the Home Screen and start playback of the selected folder or file.
- When a folder or a file is selected, press the **PAUSE** button to return to the Home Screen and put the unit into a playback pause state at the beginning of that folder or file.

Icons on the BROWSE screen

The meanings of icons that appear on the **BROWSE** screen are as follows.

Playlist (📀)

The playlist 📀 icon is followed by the playlist name. (See "Opening the playlist screen" on page 49.)

Folder (📁)

The folder 📁 icon is followed by the folder name.

Audio file (🎵)

The audio file 🎵 icon is followed by the audio file name.

NOTE

The current folder does not have a special icon. The current folder always appears at the top of the **BROWSE** screen.

5 – Folder and file operations (BROWSE screen)

Folder operations

Select the desired folder on the **BROWSE** screen and press the **MULTI JOG** dial to open the folder menu pop-up.



Turn the **MULTI JOG** dial to select the item that you want, and press the **MULTI JOG** dial to execute the operation.

NOTE

When a protected SD card is loaded, the **RENAME**, **DELETE**, **ADD P.L.** and **CREATE** items cannot be used. (See “SD card write protection” on page 19.)

SELECT

Open the selected folder.

NOTE

When a folder is selected, you can also press the main unit or remote control **▶▶ [▶▶▶]** button to open a folder.

RENAME

Open the **RENAME** screen where you can edit the name of the selected folder. (See “Editing folder and file names” on page 35.)

DELETE

Delete the selected folder. (See “Deleting folders and files” on page 35.)

MOVE/COPY

Move/copy the selected subfolder to a different folder. (See “Moving and copying folders and files” on page 36.)

ADD P.L.

Register all the files in the selected folder in the desired playlist. (See “Registering folders and files in a playlist” on page 36.)

INFO

Show information (total number of files, total time/size and last change date) about the selected folder in a pop-up. (See “Viewing folder and file information” on page 37.)

CREATE

Creates a new folder. (See “Creating new folders” on page 37.)

CANCEL

Do not conduct any operation on the selected folder, and close the folder menu.

File operations

Select the desired file on the **BROWSE** screen and press the **MULTI JOG** dial to open the file menu pop-up.



Turn the **MULTI JOG** dial to select the item that you want, and press the **MULTI JOG** dial to execute the operation.

NOTE

When a protected SD card is loaded, the **RENAME**, **DELETE**, **ADD P.L.** and **MOVE/COPY** items cannot be used. (See “SD card write protection” on page 19.)

SELECT

Open the selected file, and return to the Home Screen.

RENAME

Open the **RENAME** screen where you can edit the name of the selected file. (See “Editing folder and file names” on page 35.)

DELETE

Delete the selected file. (See “Deleting folders and files” on page 35.)

MOVE/COPY

Move the selected file to a different position in the same folder, or move/copy it to a different folder. (See “Moving and copying folders and files” on page 36.)

ADD P.L.

Add the selected file to the desired playlist. (See “Registering folders and files in a playlist” on page 36.)

INFO

Show information about the selected file. (See “Viewing folder and file information” on page 37.)

File information is shown on two pages. Press the **MULTI JOG** dial to open the second page.

1st page: Total track time/file size
File format/recording mode (stereo/mono)
Sampling frequency

2nd page: Creation date

DIVIDE

Divide the selected file into two files. (See “Dividing files” on page 38.)

UNDO

Immediately after dividing a file, you can undo the operation, restoring files to their previous state. (See “Undoing file division (UNDO/REDO)” on page 39.)

REDO

This option appears only immediately after undoing a file division. Use it to execute the same division again, restoring the files to the state before the undo operation. (See “Undoing file division (UNDO/REDO)” on page 39.)

CANCEL

Do not conduct any operation on the selected file, and close the file menu.

5 – Folder and file operations (BROWSE screen)

Editing folder and file names

1. Select the folder or file with the name that you want to edit, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **RENAME**.



Folder menu



File menu

3. Press the **MULTI JOG** dial to open the **RENAME** screen.



4. Edit the name of the folder or file.
For details about editing folder and file names, see "Inputting and editing characters" on page 32.
5. When you are done editing the folder or file name, turn the **MULTI JOG** dial to select **Enter**, and press the **MULTI JOG** dial to confirm the name change.
RENAMING ... appears in a pop-up, and the folder or file name is changed.



After the folder or file name is changed, the **BROWSE** screen reopens.

NOTE

- You can also directly access SD/USB media from a computer to change the names of files, but doing so could change the previous playback order of the files.
- Names that contain characters other than the letters of the alphabet, numbers and symbols cannot be edited (the name will not appear when the **RENAME** function is being used).
- The following symbols and punctuation marks cannot be used in names.
¥ \ / ; : , * ? " < > |
- In addition to using the **BROWSE** screen to select a folder or file to change its name, you can also use the **RENAME** item on the **TRACK EDIT** page of the menu screen to edit the name of the selected folder or file.



Deleting folders and files

You can delete folders and files from SD cards and USB flash drives. If you delete a folder, all the files in it will also be deleted.

1. Select the folder or file that you want to delete, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **DELETE**.



Folder menu



File menu

3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.



NOTE

Press the **EXIT [PEAK CLEAR]** button to cancel deletion.


4. Press the **MULTI JOG** dial again to delete the selected folder or file from the SD card or USB flash drive.
While the folder or file is being deleted, **DELETING FILE ..** appears in a pop-up.



After deletion completes, the **BROWSE** screen reopens.

NOTE

In addition to using the **BROWSE** screen to select a folder or file to delete, you can also use the **DELETE** item on the **TRACK EDIT** page of the menu screen to delete the selected folder or file.

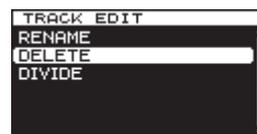

5 – Folder and file operations (BROWSE screen)

Moving and copying folders and files

1. Select the folder or file that you want to move or copy, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **MOVE/COPY**.




Folder menu



File menu

3. Press the **MULTI JOG** dial.
The name of the folder or file that will be moved or copied blinks on the **BROWSE** screen.
4. Use the **MULTI JOG** dial to open the destination folder for the item to be moved or copied on the **BROWSE** screen.
To move to a location at a higher level in the folder structure, choose the higher folder (at the top of the list).
If you move the cursor to a place where folder and file names are shown, the name of the folder or file that will be moved or copied blinks.
5. Press the **MULTI JOG** dial to open the **- MOVE OR COPY -** selection pop-up.

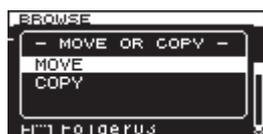

NOTE

If the destination is in the same folder as the sub folder or file selected, copying is not possible so the **- MOVE OR COPY -** pop-up will not appear. Only moving is possible within the same folder.

6. Select **MOVE** to move the folder or file from its previous location. Select **COPY** to copy the folder or file. Then, press the **MULTI JOG** dial to confirm the move or copy operation. Depending on the selected item, **MOVING ...** or **COPYING ...** appears in a pop-up, and the folder or file is moved or copied.



After selecting MOVE



After selecting COPY

After moving or copying completes, the **BROWSE** screen reopens.

NOTE

After using **MOVE**, the moved folder or file will not remain in its original folder location.
After using **COPY**, the copied folder or file will also remain in its original folder location.

Registering folders and files in a playlist

You can add folders and files to the playlist that you want.

1. Select the folder or file that you want to add to the playlist, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **ADD P.L.**



Folder menu



File menu

3. Press the **MULTI JOG** dial to add the folder or file to the current playlist, and return to the **BROWSE** screen.

NOTE

- If you select a folder, all the files in the folder will be added to the playlist. Files in subfolders, however, will not be added.
- A maximum of 100 tracks can be added to a playlist.
- If you attempt to add more than 100 tracks, a **P.LIST FULL** warning message pop-up will appear, and the track(s) will not be added.
- The files will be inserted at the end of the current playlist*.

*Current playlist: This will be "Playlist001" if the media is new. If other playlists have been created, the last opened playlist will be the current playlist. For details, see "Opening the playlist screen" on page 49.

5 – Folder and file operations (BROWSE screen)

Viewing folder and file information

You can view folder and file information.

1. Select the folder or file that you want to check, and press the **MULTI JOG** dial to open the folder or file menu pop-up.
2. Turn the **MULTI JOG** dial to select **INFO**.



Folder menu



File menu

3. Press the **MULTI JOG** dial to open the folder or file information pop-up.
File information is shown on two pages. Press the **MULTI JOG** dial again to switch to the second information page.



Folder menu



File menu

4. After checking the information, press the **MULTI JOG** dial or **EXIT [PEAK CLEAR]** button to return to the **BROWSE** screen.

Creating new folders

1. Select the folder where you want to create a new subfolder, and press the **MULTI JOG** dial to open the folder menu pop-up.
2. Turn the **MULTI JOG** dial to select **CREATE**.



3. Press the **MULTI JOG** dial to open the **CREATE** screen.



4. Input the folder name. For details about how to input a folder name, see "Inputting and editing characters" on page 32.
5. After inputting the folder name, turn the **MULTI JOG** dial to select **Enter**, and press the **MULTI JOG** dial to confirm the name. A confirmation pop-up message appears.



NOTE

To cancel the creation of a folder, press the **EXIT [PEAK CLEAR]** button.

6. Press the **MULTI JOG** dial to create the new folder. **CREATING ...** appears in a pop-up, and the new folder is created.



After the new folder is created, the **BROWSE** screen reopens.

NOTE

- The maximum number of folders that can be created on a single SD card or USB flash drive is 3000.
- When using media with a capacity of 2 GB or less, creating the maximum number of folders in the root folder as shown above might not be possible due to file system limitations. (The exact number depends on use conditions.)

5 – Folder and file operations (BROWSE screen)


Dividing files

You can divide a file into two files at any position you like.

1. Select the file that you want to divide, and press the **MULTI JOG** dial to open the file menu pop-up.
2. Turn the **MULTI JOG** dial to select **DIVIDE**.



3. Press the **MULTI JOG** dial to open the **DIVIDE** screen.

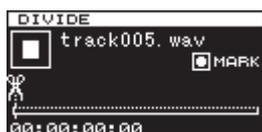

4. Use the following controls to set the **DIVIDE** point.
Press the **PLAY** button to play the file.
Press the **STOP** button to stop playback.
Press and hold the **◀◀ [I◀◀]/▶▶ [▶▶I]** button to search.
Turn the **MULTI JOG** dial to move between mark positions.




5. After finding the approximate position where you want to divide the file using the above operations, press the **PAUSE** button to enter scrub playback mode.



In scrub playback mode, you can turn the **MULTI JOG** dial to move 20 msec at a time.

6. After confirming the division point, press the **MULTI JOG** dial. A confirmation pop-up message appears.

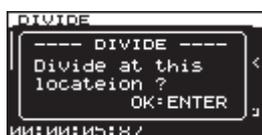

NOTE

To cancel the division of a file, press the **EXIT [PEAK CLEAR]** button.

7. Press the **MULTI JOG** dial to divide the file. **DIVIDING...** appears in a pop-up, and the file is divided.



After dividing completes, the **BROWSE** screen reopens.

NOTE

- When stopped, you can press the **EXIT [PEAK CLEAR]** button to return to the **BROWSE** screen without dividing.
- You cannot move to the beginning or end of a track by using the **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons. You can only make fine adjustments with the **MULTI JOG** dial when in scrub playback mode. By pressing and holding the **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons, you can move the division point continuously.
- After dividing a file, two new files with "_a" and "_b" added to the end of the original file name are created.

Example:

File name before division

TASCAM_0000.wav

File names after division

TASCAM_0000_a.wav (part before division point)

TASCAM_0000_b.wav (part after division point)

- In addition to using the **BROWSE** screen to select a file for division, you can also use the **DIVIDE** item on the **TRACK EDIT** page of the menu screen to divide the selected file.
- Division is not possible if the full file path and file name would have a total of more than 255 characters.
- If the name of a file after division would be the same as that of an existing file, division is not possible and a **- CANNOT DIVIDE - Duplicate name error.** pop-up message will appear.

TIP

You can add a mark during recording at a position where you want to divide a file. (See "Adding marks when recording" on page 30.)

5 – Folder and file operations (BROWSE screen)

Undoing file division (UNDO/REDO)

This function can only be used after dividing a file.

Immediately after dividing a file, you can undo the operation, restoring the file to its previous state.

Immediately after undoing a file division, the UNDO option becomes REDO. Use it to execute the same division again, restoring the files to the state before the undo operation. (The division point setting will be the same as when the DIVIDE operation was first conducted.)

UNDO and REDO options only appear after a file has been divided.

1. Select the file that was divided, and press the **MULTI JOG** dial to open the file menu pop-up.
2. Turn the **MULTI JOG** dial to select UNDO.



3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.



NOTE

To cancel an UNDO operation, press the **EXIT [PEAK CLEAR]** button.

4. Press the **MULTI JOG** dial to undo the file division.
UNDO WORKING ... appears in a pop-up, and the file division is undone.



After completing the undo, the **BROWSE** screen reopens. The file that the undo operation was conducted on will be selected.

5. After undoing a file division, if you want to redo the division, you can execute the **REDO** menu item. Press the **MULTI JOG** dial to open the file menu pop-up.
6. Turn the **MULTI JOG** dial to select **REDO**.



7. Press the **MULTI JOG** dial to open a confirmation pop-up message.



NOTE

To cancel an REDO operation, press the **EXIT [PEAK CLEAR]** button.

8. You can press the **MULTI JOG** dial to REDO the operation.
REDO WORKING ... appears in a pop-up, and the file is divided again.



After the redo operation completes, the **BROWSE** screen reopens.

NOTE

The division of the currently selected file cannot be undone or redone from the **BROWSE** screen. To undo or redo file division, use the **UNDO** and **REDO** items on the **TRACK EDIT** menu page.



To UNDO file division



To REDO file division

6 – Playback

In this chapter we explain the playback functions for audio files stored on SD cards and USB flash drives.

The following explanations assume that an SD card or USB flash drive that contains an audio file is loaded in the unit, that the unit is on and that the current media is set appropriately. (See “Selecting the media used” on page 20.)

Playable file types

This unit can play files with the following formats.

- WAV and BWF formats (wav extension)
(44.1/48/88.2/96/176.4/192 kHz sampling frequency, 16/24 bit)
- DSDIFF format (dff extension) (2.8224/5.6448 MHz sampling frequency)
- DSF format (dsf extension) (2.8224/5.6448 MHz sampling frequency)

TIP

This unit can play back a file even if it did not record it if the file is in one of the above formats. For example, if you use a computer or another audio device to copy a file that meets the above conditions to an SD card or USB flash drive and load that media in this unit, playing that file should be possible. In other words, you can efficiently prepare materials for playback on this unit.

Files and tracks

Audio data is saved on media in files.

If the **MODE** item on the **CHANNEL** screen is set to **STEREO**, one stereo file will be used as one track. If set to **MONOx2**, two mono files will be used as one track. (See “Setting the recording file format” on page 23.)

When explaining recording and playback in this manual, we usually refer to audio files as “tracks” (or sometimes as “songs”). We mainly use the term “files” when explaining media management. In any case, these terms refer to the same thing.

Basic playback operations

This section explains basic operations including starting playback, playback standby and stopping.

The following explanation assume that you have completed the necessary connections, that the unit power is ON, the current device is set, media containing audio files is loaded in that device and the Home Screen is open.

Playback

To start playback, press the **PLAY** button (or remote control **PLAY** button).

If no audio file that can be played back by this unit is on the current media, the Home Screen will appear as follows.



To stop playback:

Press the **STOP** button.

To pause playback and enter playback standby:

Press the **PAUSE** button.

Selecting tracks

If the play area has more than one track, you can either skip backward or forward to the track or enter the track number directly to select a track for playback.

Skipping to the previous or next track

Use the ◀◀[|◀◀]/▶▶[▶▶|] buttons on the main unit or remote control to skip tracks.

Selecting tracks directly

On the **BROWSE** screen, you can turn the **MULTI JOG** dial to select a track, and press the **PLAY** button to start playing it.

Searching backward and forward

You can search forward or backward in a track while listening to the audio.

1. Play the desired track or put it into playback standby.
2. Press and hold the ◀◀[|◀◀]/▶▶[▶▶|] button on the front panel or remote control to start searching backward or forward.
The usual backwards / forwards speed is 10x normal playback, but pressing the ▶▶[▶▶|] button when searching backward or pressing the ◀◀[|◀◀] button when searching forward at the same time will increase the speed to 100x for as long as that button is kept pressed.
3. To stop searching, release the button you are holding.
The unit will return to the state it was in before searching (playback standby or playback).

NOTE

- If you search forward to the end of a track, searching will skip to the beginning of the next track and continue.
- If you search forward to the end of the last track, the unit will enter playback standby unless the repeat setting is **OFF**, in which case searching will skip to the beginning of the first track and continue. (See “Repeat playback” on page 44.)
- If you search backward to the beginning of a track, searching will skip to the end of the previous track and continue.
- If you search backward to the beginning of the first track, the unit will enter playback standby unless the repeat setting is **OFF**, in which case searching will skip to the end of the last track and continue. (See “Repeat playback” on page 44.)

6 – Playback

Locating to specific positions

If you use a USB keyboard with a number pad or a USB number pad, you can locate to specific positions when the unit is stopped, playing back or in playback standby.

Press the * (asterisk) key to clear the track number and time display and prepare the unit to receive numeric input.

Use the numeric keypad to enter numbers in the following order.

- Track number: 3 digits
- Elapsed time from track beginning: 2 digits each for hours, minutes, seconds

For example, if you want to specify a location that is 1 minute 30 seconds from the beginning of track 2, you would press keys in the following order.

0 → 0 → 2 → 0 → 0 → 0 → 1 → 3 → 0

When you finish entering the nine digits, the unit will automatically locate to the specified position.

After locating to the new position, the unit will resume the same status as before (stopped, in playback standby or playing back).

This means playback will start automatically from the located position only during playback

Locating to a position after partial entry

If you press the **MULTI JOG** dial, **PLAY** button or **PAUSE** button on the front panel (or remote control **PLAY** button or **F1** button) before you finish entering the time, you will locate to the position that is specified at that point.

For example, suppose you input only:

0 → 0 → 2 → 0 → 0 → 1 → 2

Then, if you press the **MULTI JOG** dial, **PLAY** button or **PAUSE** button, the unit will locate to 12 minutes after the beginning of track 2.

The button pressed when locating determines what happens after locating.

MULTI JOG dial pressed:

The unit resumes playback or playback standby according to the status before locating.

PLAY button pressed:

Playback starts.

PAUSE button pressed:

The unit enters playback standby.

Remote control PLAY button pressed:

If playing back before locating, playback pauses after locating.

If stopped or in playback standby before locating, playback starts after locating.

Adding marks manually during playback

When stopped, when in playback standby or during playback, you can add marks manually to the track in any positions you like. During track playback, you can move quickly to marks.

Adding marks during playback

When a track is stopped, playing back or in playback standby, press the **MULTI JOG** dial (or remote control **MARK** button) at any point where you want to add a mark.

NOTE

- Each track can store information for a maximum of 99 added marks.
- You can also add marks during recording. (See “Adding marks manually during recording” on page 30.)
- When adding a mark manually, the Mark Name “MARKxxx” * is used.

* “xxx” is a number that increments through all MARKs in this track.

Locating to marks

When a track is stopped, playing back or in playback standby, you can turn the **MULTI JOG** dial (or use the remote control **F3** [+]/**F4** [-] buttons) to locate to marks.

Turn the **MULTI JOG** dial right to locate to the nearest later mark or left to locate to the nearest previous mark from the current position.

When locating to a MARK point, that MARK point's name is displayed in the bottom section of the HOME screen. Also, if a MARK point is passed during playback, that MARK point's name is also displayed.

By pressing the **HOME** button, the MARK Point name for the current position is also displayed.

Deleting marks

You can delete an added mark when stopped or when in playback standby.

1. Move to the mark that you want to delete. (See “Locating to marks” on page 42.)
2. Press the **MULTI JOG** dial to open the - DELETE MARKS - pop-up.



3. Turn the **MULTI JOG** dial to select whether to delete one mark or all marks in a file.

Options	Details
SINGLE	Delete only the selected mark.
ALL	Delete all the marks added to the current file.

- Press the **MULTI JOG** dial to delete the mark or marks.
If you selected **SINGLE**, the Home Screen will reappear after the selected mark is deleted.
If you selected **ALL**, a confirmation pop-up message will appear.



Press the **MULTI JOG** dial again to delete all the marks added to the current file.
The Home Screen will reappear after all the marks are deleted.

NOTE

To cancel marked deletion, press the **EXIT [PEAK CLEAR]** button.


Setting the PLAY Mode

Setting the PLAY mode.

- Press the **MENU** button to open the menu screen **PLAY FUNC** page, and turn the **MULTI JOG** dial to select **PLAY MODE**.



- Press the **MULTI JOG** dial to open the **PLAY MODE** screen.

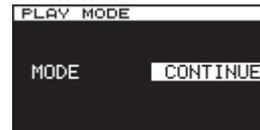

- Turn the **MULTI JOG** dial to select the Play mode.

Options	Details
CONTINUE (default)	Continues to play all tracks from track 1 through to the last one.
SINGLE	Plays only the currently selected track.

- Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.

NOTE


By using the combination of Repeat Playback and Play Mode = **SINGLE**, a single track can be looped endlessly.

6 – Playback

Repeat playback

You can set the unit to play tracks repeatedly.

1. Press the **MENU** button repeatedly to open the **PLAY FUNC** menu, and turn the **MULTI JOG** dial to select **REPEAT**.

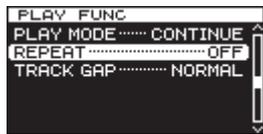

2. Press the **MULTI JOG** dial to open the **REPEAT** screen.



3. Turn the **MULTI JOG** dial to select the repeat playback mode.

Options	Details
OFF (default)	Repeat playback disabled.
ON	Repeat playback enabled.

4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.
5. After completing the setting, press the **HOME** button (or remote control **F2** button) to return to the Home Screen.
6. Select the track that you want to play back repeatedly and start playback.

Setting gapless playback mode


You can set the unit so that gaps (silent intervals) between tracks during playback are eliminated.

If you want audio data, including tracks recorded using the auto track and track increment functions, to play back continuously without gaps between tracks, set the track gap mode to **GAPLESS**. When the track gap mode is **NORMAL**, brief silences will occur between tracks.

1. Press the **MENU** button to open the menu screen **PLAY FUNC** page, and turn the **MULTI JOG** dial to select **TRACK GAP**.



2. Press the **MULTI JOG** dial to open the **TRACK GAP** screen.

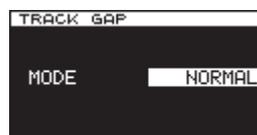

3. Turn the **MULTI JOG** dial to select the track gap mode. Options: **NORMAL** (default), **GAPLESS**
4. Press the **MULTI JOG** dial to confirm the selection and return to the menu screen.


ATTENTION

- If **GAPLESS** is selected during DSD file playback. Depending on the status of the audio data, noise might occur at the division between tracks due to the nature of DSD files. If the noise is bothersome, set the track gap mode to **NORMAL** to avoid it. (Noise will not occur during the gapless playback of audio from tracks created using this unit's auto track and track increment functions, for example.)
- When using the cascade function. Set both the master and slave units to the same track mode. If the units do not have the same setting, they will not be able to synchronize when tracks change. When the track gap mode is set to **NORMAL**, since the slave unit waits for a playback start signal from the master unit after each track ends, if the slave unit is played by itself, each time a track ends, playback will pause at beginning of the next track.

7 – Recording/playback with cascade connections

Overview of the cascade function

Using the cascade connection capability of the DA-3000SD, multiple DA-3000SD units can be controlled simultaneously. A multichannel system can be realized by synchronizing recording and playback.

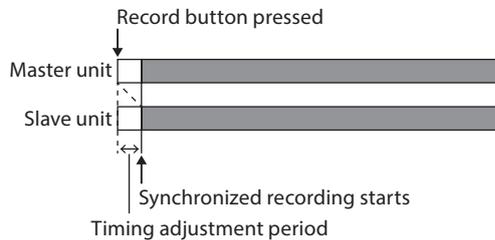

Recording and playback with cascade connections involves the following two types of synchronization (timing and clock).

Timing synchronization

Depending on the cascade setting, slave units will synchronize to the master unit when recording/playback starts.

Clock synchronization

During recording and playback, the internal clock of the master unit or an external clock generator is used to synchronize.

NOTE

The following functions cannot be used during synchronized recording/playback using cascade connections.

- The included RC-10 remote control cannot control slave units.
- PCM recording using the **DIGITAL IN [AES/EBU]** jacks is not possible.
- PCM recording using the **DIGITAL IN [S/PDIF / CASCADE]** jacks is not possible.
- Sync recording functions are unavailable.
- LEVEL, DD and TIME mode auto track functions are disabled.
- Auto mark functions are unavailable.

Connections and preparations

Preparing media

When conducting synchronized recording and playback, use identical media (same brand, capacity and model number) in the master and slave units. Use of different media could cause media access speed differences, resulting in synchronization discrepancies and other unpredictable problems.

We have posted a list of media that we have confirmed for use with cascade operation on the TASCAM website.



TASCAM website

<https://tascam.jp/int/>

Selecting the media

Set the media for the devices (master and slave) to be cascaded. Select the same type of media for all devices (SD card). See "Selecting the media used" on page 20 for details.

Preparing cables

Use high-quality digital coaxial cables (75 Ω impedance) for cascade connections. (Do not use analog RCA cables. Doing so could cause malfunction.)

When using word clock, connect with high-quality BNC cables (75 Ω impedance).

Setting the recording file format

When recording, set the master and slave units to use the same recording file format. (Recording and playback is possible with the units that are using different file formats and sampling frequencies, but synchronization will not occur with sampling frequency precision.) (See "Setting the recording file format" on page 23.)

ATTENTION

During cascade operation, do not record files with different file formats or sampling frequencies inside the same folder or copy such files from a computer. Doing so could cause malfunction.

7 – Recording/playback with cascade connections

Connecting and setting the devices

Connect the master and slave devices.
Connect the devices in the following manner according to the synchronization method.


ATTENTION

When installing units on top of each other, leave space between units to allow good heat dispersal.
When mounting them in a rack, leave at least 1U open above each unit.

Synchronizing using S/PDIF with the master unit as the clock master

Connections

Use a coaxial digital cable to connect the master unit **DIGITAL OUT** to the slave unit **DIGITAL IN [S/PDIF / CASCADE]**.
When connecting a second slave unit, use a coaxial digital cable to connect the first slave unit **DIGITAL OUT** to the second slave unit **DIGITAL IN [S/PDIF / CASCADE]**.

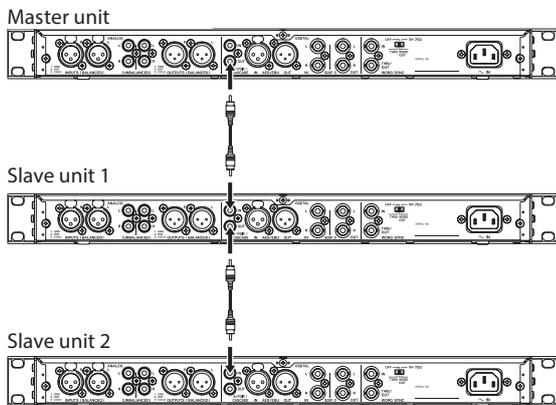

Settings


Press the **MENU** button to open the **GENERAL** page of the menu screen. Set the **CLOCK MSTR** and **CASCADE** items as follows. (See "Setting the master clock" on page 26.) (See "Setting master and slave units" on page 47.)

	GENERAL Page	
	CLOCK MSTR setting	CASCADE setting
Master unit	Internal	MASTER
Slave unit	DIN	SLAVE

Using the master unit as the clock master for word clock synchronization

Connections

Use a coaxial digital cable to connect the master unit **DIGITAL OUT** to the slave unit **DIGITAL IN [S/PDIF / CASCADE]** and a BNC cable to connect the **WORD SYNC THRU/OUT** to the slave unit **WORD SYNC IN**.
When connecting a second slave unit, use a coaxial digital cable to connect the first slave unit **DIGITAL OUT** to the second slave unit **DIGITAL IN [S/PDIF / CASCADE]** and a BNC cable to connect the first slave unit **WORD SYNC THRU/OUT** to the second slave unit **WORD SYNC IN**.

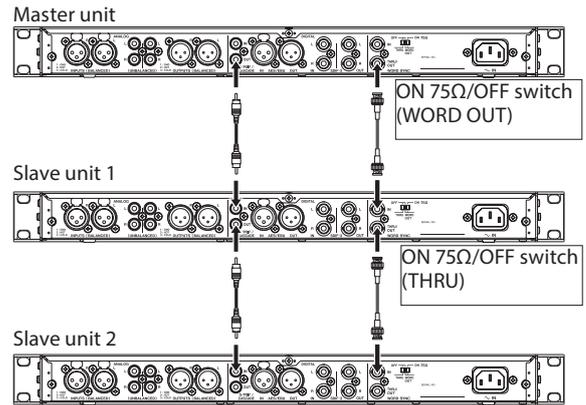

In addition, set the **75Ω ON/OFF [THRU/WORD OUT]** switches on the master and slave units as follows.

	ON 75Ω/OFF [THRU/WORD OUT] switch	
	ON 75Ω/OFF	THRU/WORD OUT
Master unit	ON	WORD OUT
Slave unit	OFF	THRU
Slave unit (last)	ON	WORD OUT

Settings

Press the **MENU** button to open the **GENERAL** page of the menu screen. Set the **CLOCK MSTR** and **CASCADE** items as follows. (See "Setting the master clock" on page 26.) (See "Setting master and slave units" on page 47.)


	GENERAL page	
	CLOCK MSTR setting	CASCADE setting
Master unit	Internal	MASTER
Slave unit	WORD	SLAVE

7 – Recording/playback with cascade connections

Using an external clock generator as the clock master

Connections

Use coaxial cables to connect the master and slave unit **DIGITAL IN/OUT [S/PDIF / CASCADE]** connectors as shown below. Use BNC cables to connect the external clock generator word clock output connectors to the master and slave unit **WORD SYNC IN** connectors. Set their **75Ω ON/OFF [THRU/WORD OUT]** switches to **ON 75Ω/WORD OUT**.

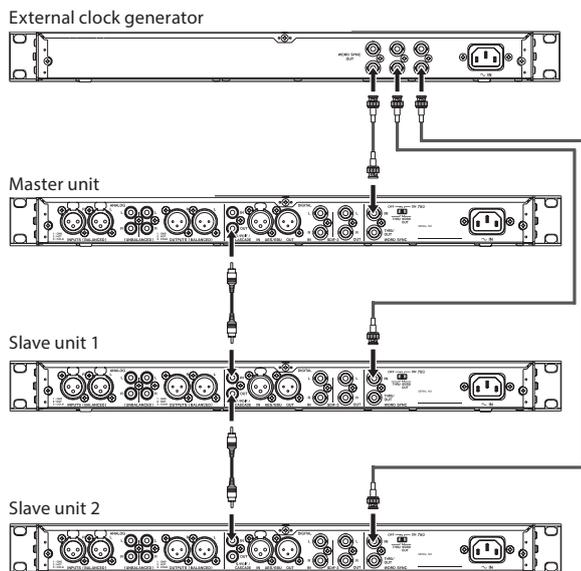

Settings

Press the **MENU** button to open the **GENERAL** page of the menu screen. Set the **CLOCK MSTR** and **CASCADE** items as follows. (See "Setting the master clock" on page 26.) (See "Setting master and slave units" on page 47.)


	GENERAL	
	CLOCK MSTR setting	CASCADE setting
Master unit	WORD	MASTER
Slave unit	WORD	SLAVE

Setting master and slave units

1. Press the **MENU** button to open the **GENERAL** page of the menu screen, and turn the **MULTI JOG** dial to select **CASCADE**.



2. Press the **MULTI JOG** dial to open the **CASCADE** screen.

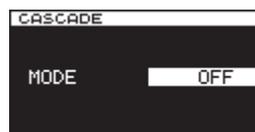

3. Turn the **MULTI JOG** dial to set the unit to master or slave. Options: **OFF** (default), **MASTER**, **SLAVE**
4. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.


7 – Recording/playback with cascade connections

Using cascaded units

When operating cascaded units, the following general rules apply to recording and playback.

Playing back both master and slave units

Synchronized playback from both the beginnings and the middles of tracks is possible.

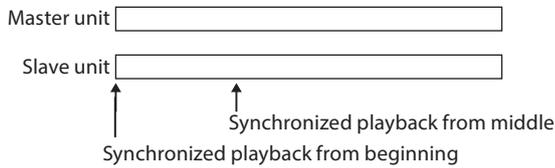

Operation:


- Press the master unit **PLAY** button to start playback of both master and slave units and its **STOP** button to stop synchronized playback.
- During synchronized playback, press the master unit **PAUSE** button to pause playback.
- Use the master unit **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons to skip tracks, and press and hold the **◀◀ [I◀◀]/▶▶ [▶▶I]** buttons to search backward/forward. (See “Skipping to the previous or next track” on page 41.) (See “Searching backward and forward” on page 41.)
- Press the master unit **MULTI JOG** dial to add marks to the master and slave units. (See “Adding marks during playback” on page 42.)
- Turn the **MULTI JOG** dial to move to marks set on the master unit. (See “Locating to marks” on page 42.)

NOTE

- When searching backward/forward, differences in operation speed might occur between the master and slave units.
- Moving to marks set on a slave unit is not possible.

Recording to both master and slave units

Synchronized recording from the beginnings of tracks is possible.

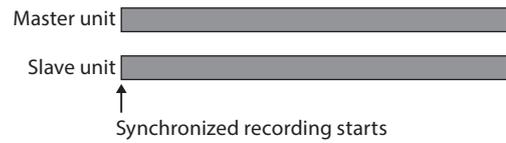


Operation:

- Press the master unit **RECORD [TRK INC]** button to put both the master and slave units into recording standby. Then, press the master unit **PLAY** button to start recording. Press the **STOP** button to stop synchronized recording.
- During synchronized recording, press the master unit **PAUSE** button to pause recording.
- During synchronized recording, press the master unit **RECORD [TRK INC]** button to increment the track number (create a new track and continue recording).
- During synchronized recording, if the master unit auto track function is set to **SIZE**, tracks will be incremented automatically. (See “Creating a higher numbered track manually” on page 29.)
- Press the master unit **MULTI JOG** dial to add marks to both the master and slave units. (See “Adding marks when recording” on page 30.)

Playing back with the master unit and recording with a slave unit

Playing a track on the master unit from its beginning and simultaneous recording on a slave unit is possible.

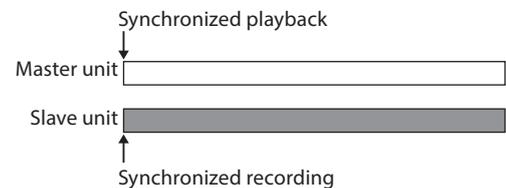

Operation:

Press the slave unit **RECORD [TRK INC]** button to put it in recording standby. Then press the master unit **PLAY** button to start master unit playback and synchronized slave unit recording.

NOTE

During the above synchronized operation, a recording slave unit will not synchronize with the following operations

- Pressing a **◀◀ [I◀◀]/▶▶ [▶▶I]** button to skip tracks.
- Pressing and holding a **◀◀ [I◀◀]/▶▶ [▶▶I]** button to search backward/forward.
- Turning the **MULTI JOG** dial to move to a mark.

Overview of playlist editing

Whenever you load an SD card or USB flash drive into this unit for the first time, one empty playlist is automatically created on that media. You can also create new playlists.

Opening the playlist screen

You can view playlists from the **BROWSE** screen.


When you have format media using this unit, a file named "Playlist001" will be created automatically in the Playlist folder, which is in the first level of the **ROOT** folder. You can also create new playlists inside the Playlist folder. (See "Creating a new playlist" on page 50.)

The following procedures explain how to view "Playlist001," which was automatically created when the media was formatted.

1. Press the **MENU** button to open the **GENERAL** page of the menu screen, and turn the **MULTI JOG** dial to select **BROWSE**.




2. Press the **MULTI JOG** dial to open the **BROWSE** screen.

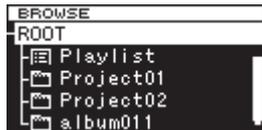


3. Select the **ROOT** folder and turn the **MULTI JOG** dial to select the **Playlist** folder.



Press the **▶▶ [▶▶]** button to enter the **Playlist** folder, and show **Playlist001** that was automatically created.

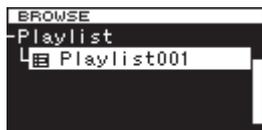

4. Press the **▶▶ [▶▶]** button to show the tracks that have been added to **Playlist001**. If no tracks have been added, it will appear empty.

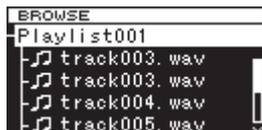

NOTE

With newly formatted media, **Playlist001** will be the current playlist. After other playlists have been created, the last open playlist will be the current playlist.

Registering tracks in a playlist

You can register tracks in a playlist. In addition, you can register a folder to add all the tracks in that folder at one time.

For details, see "Registering folders and files in a playlist" on page 36.

Using the playlist menu

With the **Playlist** folder or a playlist selected, press the **MULTI JOG** dial to open the playlist pop-up menu. This is the menu to use when you want to work with the **Playlist** folder or a playlist.

NOTE

If you select the **Playlist** folder or the current playlist and open the pop-up menu, the **RENAME** and **DELETE** items will not be shown.

SELECT

Set the selected playlist as the current playlist, and show the files that have been added to it. (See "Moving around playlists" on page 49.)

If you select this when the files registered in the playlist are shown, the **Playlist** folder will reopen.

RENAME


Change the playlist name. (See "Changing playlist names" on page 50.)

DELETE

Delete the playlist. (See "Deleting playlists" on page 50.)

INFO

Shows the number of tracks included in the playlist and their total playback time, as well as the playlist creation date in a pop-up.

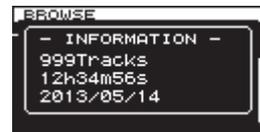

CREATE

Create a new playlist. (See "Creating a new playlist" on page 50.)

NOTE

When a protected SD card is loaded, the **RENAME**, **DELETE** and **CREATE** items cannot be used. (See "SD card write protection" on page 19.)

CANCEL

Do nothing with the currently selected playlist and close the playlist menu.

Moving around playlists

Press the **◀◀ [◀◀]** button to move up one level from the current position, and press the **▶▶ [▶▶]** button to move down one level. You can also press the **MULTI JOG** dial to open the pop-up playlist menu and select the **SELECT** item to move up or down a level in the same manner.



8 – Editing playlists

Changing playlist names

1. Select the folder that you want to change the name of, and press the **MULTI JOG** dial to open the playlist pop-up menu.
2. Turn the **MULTI JOG** dial to select **RENAME**.



3. Press the **MULTI JOG** dial to open the **RENAME** screen.



4. Edit the playlist name.
See "Inputting and editing characters" on page 32 for details about editing text.
5. After you finish editing the playlist name, turn the **MULTI JOG** dial to select **Enter**, and press the **MULTI JOG** dial to confirm the name.
RENAMING ... appears in a pop-up, and the playlist name is changed.



After the playlist name is changed, the **BROWSE** screen reopens.

NOTE

- Names that contain characters other than the letters of the alphabet, numbers and symbols cannot be edited (the name will not appear when the **RENAME** function is being used).
- The following symbols and punctuation marks cannot be used in names.
¥ \ / ; : , * ? " < > |

Deleting playlists

Playlists can be deleted.

NOTE

You cannot delete the current playlist.

1. Select the playlist that you want to delete and press the **MULTI JOG** dial to open the playlist pop-up menu.
2. Turn the **MULTI JOG** dial to select **DELETE**.



3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.



NOTE

To cancel the deletion of a playlist, press the **EXIT [PEAK CLEAR]** button.

4. Press the **MULTI JOG** dial to delete the selected playlist.
During playlist deletion, **DELETING P.LIST.** appears in a pop-up.



After deletion completes, the **BROWSE** screen reopens.

NOTE

When you delete a playlist, the audio files themselves are not deleted. Only the playlist information is deleted. To delete actual audio files, refer to the instructions in "Deleting folders and files" on page 35.

Creating a new playlist

You can create a new playlist in the current folder.

1. On the **BROWSE** screen, select the **Playlist** folder or a playlist, and press the **MULTI JOG** dial to open the playlist pop-up menu.
2. Turn the **MULTI JOG** dial to select **CREATE**.



3. Press the **MULTI JOG** dial to open the **CREATE** screen.



4. Input the name that you want to give the playlist.
See "Inputting and editing characters" on page 32 for details about editing text.
5. After you finish inputting the playlist name, turn the **MULTI JOG** dial to select **Enter**, and press the **MULTI JOG** dial to confirm it.
A confirmation pop-up message appears.



NOTE

To cancel creation of a playlist, press the **EXIT [PEAK CLEAR]** button.

6. Press the **MULTI JOG** dial to create the new playlist.
CREATING ... appears in a pop-up, and the new playlist is created.



After creation, the **BROWSE** screen reopens.

Playlist track menu operations

When a track that has been added to the playlist is selected, press the **MULTI JOG** dial to open the pop-up playlist track menu. Use this menu to work with a track that has been added to a playlist.

SELECT

Open a track that has been added to the current playlist, and return to the Home Screen.

ORDER

Change the order of tracks that are already in the playlist. (See “Changing the playlist track order” on page 51.)

REMOVE

Remove a track from the playlist. (See “Removing tracks from playlists” on page 51.)

INFO

The following information is shown for the track that has been added to a playlist.

This information is shown on two pages. Press the **MULTI JOG** dial to open the second page.

- 1st page: Total track time/file size
File format/recording mode (stereo/mono)
Sampling frequency
- 2nd page: Creation date



NOTE

When a protected SD card is loaded, the **ORDER** and **REMOVE** items cannot be used. (See “SD card write protection” on page 19.)

CANCEL

Do not conduct any operation related to the currently selected playlist track and close the playlist track menu.

Changing the playlist track order

You can change the order of tracks that have been added to a playlist one at a time.

1. Select the track that you want to rearrange on the **BROWSE** screen, and press the **MULTI JOG** dial to open the playlist track pop-up menu.
2. Turn the **MULTI JOG** dial to select **ORDER**.



3. Press the **MULTI JOG** dial. The track to be reordered blinks.
4. Turn the **MULTI JOG** dial to move that track to the position in the order where you want it, and press the **MULTI JOG** dial to confirm the new position.

When the **MOVING ...** pop-up appears, the track is being moved.



After completion, the **BROWSE** screen reopens.

Removing tracks from playlists

To remove a track from a playlist, use the track menu **REMOVE** item. This operation only removes tracks from playlists. It does not delete the audio files themselves.

1. Choose the track in the playlist that you want to delete and press the **MULTI JOG** dial to open the playlist track menu pop-up.
2. Turn the **MULTI JOG** dial to select **REMOVE**.



3. Press the **MULTI JOG** dial.
A confirmation pop-up message appears.



NOTE

To cancel removal, press the **EXIT [PEAK CLEAR]** button.

4. Press the **MULTI JOG** dial to remove the file from the playlist. **REMOVING ...** appears in a pop-up and the track is removed.



After the track is removed, the **BROWSE** screen reopens.

NOTE

If you want to delete the audio file itself, see the instructions in “Deleting folders and files” on page 35.

9 – Miscellaneous functions

INFO button and indicator

If you press the **INFO** button, which is in the middle of the front panel, when its indicator is lit blue, the current operation status of the unit is shown on the display. If you press the **INFO** button when its indicator is lit red, an error message will appear on the display.

Operation status display (indicator blue)




Information shown:


- CLOCK:** Sampling frequency/clock source
- FILE:** File type/quantization bit rate
Recording mode (stereo/mono)
Recording date

When the indicator is lit blue, each time you press the **INFO** button, the display will alternate between the operation status and the Home Screen.

Alert display (indicator red)

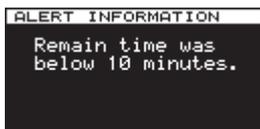

Displayed alert (1)

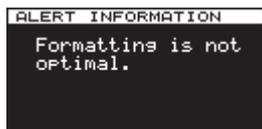


Displayed Alert (2)

Information shown:

- (1) The remaining record time is less than 10 minutes. This alert is displayed when a recording has continued past the point that only 10 minutes worth of data will fit on the media.
- (2) The media was formatted on a different product or computer. It is possible that recording or playback errors may occur, so it is recommended to re-format the media on this unit.

Once the alert is displayed and acknowledged, Alert (1) will not re-appear until after recording is stopped, and Alert (2) will not re-appear until a different media is inserted.

Error message (indicator red)

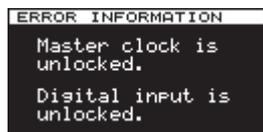

Information shown:

Master clock/digital input error
Pressing the **INFO** button toggles the display in the order ALERT information → Error Information → Operational Status → Home Screen. The ALERT information and Error displays are only viewable when such an event has occurred and the **INFO** button is red.

Copying files between media (backing up)

You can copy all the contents of one medium to another (creating a backup).

For the copy destination, use media with capacity greater than the size of the data to be copied.

ATTENTION

Before copying (backing up) the destination media is automatically formatted.

1. Press the **MENU** button to open the **MEDIA** menu, and turn the **MULTI JOG** dial to select **COPY**.




2. Press the **MULTI JOG** dial to open a pop-up with copy (backup) destination options.



3. Turn the **MULTI JOG** dial to select copy destination.

- When the current media is an SD card
SD >>> USB
- When the current media is a USB card
USB >>> SD

4. Press the **MULTI JOG** dial to open a confirmation pop-up message.

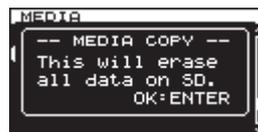

NOTE

To cancel copying (backing up), press the **EXIT [PEAK CLEAR]** button.

5. Press the **MULTI JOG** dial again to start copying (backing up). While copying (backing up), **COPYING MEDIA ...** appears in a pop-up. When copying (backing up) completes, the menu screen will reopen.
If the volume of data being copied is large, copying (backing up) will take several hours to complete.

Media capacity (GB)	Copied data size (recording time)			Copy (back up) time
	PCM (24-bit WAV)		DSD	
	44.1 kHz	192 kHz	5.6 MHz	
32	About 32 hours	About 7 hours	About 6 hours	About 2 hours
64	About 64 hours	About 14 hours	About 12 hours	About 4 hours
128	About 128 hours	About 28 hours	About 24 hours	About 8 hours
256	About 256 hours	About 56 hours	About 48 hours	About 16 hours


Viewing information about the media

You can view information about the media in the current device.

1. Press the **MENU** button repeatedly to open the **MEDIA** menu, and turn the **MULTI JOG** dial to select **INFO..**



2. Press the **MULTI JOG** dial to open the **MEDIA INFORMATION** screen. Information about the current media is shown. You can check its total capacity, open space and total number of folders.

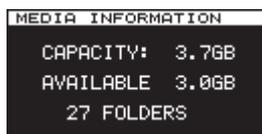

Restoring the factory settings


You can restore all the settings that are stored in the unit's backup memory to the values that they had when shipped from the factory.

Follow these steps using the menu to restore the settings.

1. Press the **MENU** button repeatedly to open the **UTILITY** menu, and turn the **MULTI JOG** dial to select **F.PRESET.**



2. Press the **MULTI JOG** dial to open a confirmation pop-up message.

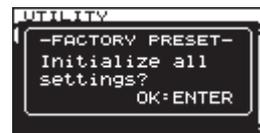

NOTE

To cancel, press the **EXIT [PEAK CLEAR]** button.

3. Press the **MULTI JOG** dial again to restore the unit settings to their factory defaults.

READING MEDIA ... appears in a pop-up.

When restoration completes, the menu screen reappears.

9 – Miscellaneous functions

Using a USB keyboard

By connecting a Windows-compatible USB keyboard or numeric keypad to the **REMOTE** connector on the front panel of the main unit, you can use it to operate this unit.

Various types of control are possible, but using a keyboard is particularly efficient for inputting text.

Setting the keyboard type

Set the keyboard type to match the one you have connected.

1. Press the **MENU** button repeatedly to open the **UTILITY** menu, and turn the **MULTI JOG** dial to select **KEYBOARD**.



2. Press the **MULTI JOG** dial to open the **KEYBOARD TYPE** screen.



3. Turn the **MULTI JOG** dial to select **US** (US English keyboard) or **JPN** (Japanese keyboard).
Options: **JPN** (default), **US**
4. Press the **MULTI JOG** dial to confirm the setting and return to the menu screen.

Using a keyboard to input text

You can input and edit folder and file names in the same way you would type text on a computer.

In character input mode:

You can use and directly input characters with ordinary number, character and symbol keys.

To move the cursor:

Use the ordinary arrow (**←** and **→**) keys.

To delete a character:

Delete key: Delete the character at the cursor position.

Backspace key: Delete the character to the left of the cursor position.

To insert a character:

You can input a characters at the desired position (in default insert mode).

If the character input mode is not the default insert mode, press the **Insert** key to switch to insert mode before inputting the character.

To edit a character:

Press the **Insert** key to enter overwrite mode, and then move the cursor to the character you want to edit and input the new character.

NOTE

- The following symbols and punctuation marks cannot be used in names.

¥ \ / ; : , * ? " < > |

- Japanese katakana cannot be input.

Keyboard operation list

You can use the keyboard not only for entering text, but also for other operations such as controlling the transport and editing. The keys on the keyboard have functions that correspond to the buttons on the front panel of the main unit as shown below. Moreover, character input mode is activated automatically according to the current operation of the unit.

Full keyboard

Keyboard key(s)	Operation
Esc key	Same as the EXIT [PEAK CLEAR] button
F1 key	Same as the HOME button
F2 key	Same as the INFO button
F3 key	Same as the MENU button
F12 key	Same as the RECORD button
R key	Search backward
P key	Skip to the previous track
S key	Stop
F key	Search forward
N key	Skip to the next track
Enter key	Same as pressing the MULTI JOG dial (Add/delete a mark)
Space bar	Same as the PLAY button and PAUSE button
↑ key	Same as the ▶▶ button during transport operation. Moves the cursor up at other times.
↓ key	Same as the ◀◀ button during transport operation. Moves the cursor down at other times.
← key	Same as turning the MULTI JOG dial left during transport operation (move to the next earlier mark). Moves the cursor left at other times.
→ key	Same as turning the MULTI JOG dial right during transport operation (move to the next later mark). Moves the cursor left at other times.

Numeric keypad (transport operation only)

Keyboard key(s)	Operation
. (period) key	STOP button
0 key	Same as the PLAY button and PAUSE button
1 key	Same as the ◀◀ button
2 key	Same as the ▶▶ button
3 key	Same as the RECORD button
7 key	Same as the ◀◀ button
8 key	Same as the ▶▶ button
- key	Same as turning the MULTI JOG dial left (move to earlier mark in track)
+ key	Same as turning the MULTI JOG dial right (move to later mark in track)
Enter key	Same as pressing the MULTI JOG dial (add a mark)

10 – Message Lists

The following is a list of the pop-up messages that might appear on the DA-3000SD under certain conditions. Refer to this list if one of these pop-up messages appears and you want to check the meaning or determine a proper response.

Message	Meaning
Cannot set Mark. Limit reached.	The maximum number of marks that can be set has been reached, so a new mark cannot be added.
Create Playlist failed.	The creation of a new playlist failed.
Divide failed.	Division was not possible.
Operation Failed.	The execution of some operation failed.
Operation Failed. Folder limit.	The maximum number of folders has been reached so a new folder could not be created.
Operation Failed. long name Path Name is too long.	The total number of characters in the full file path and file name exceeds 255.
Rename failed.	The RENAME operation could not be executed.
SD Card Locked.	The SD card is locked.
This file already exists.	When RENAME or another operation was conducted, another file with the same name already existed.
This folder already exists.	When RENAME or another operation was conducted, another folder with the same name already existed.
Un/Redo failed.	The REDO operation failed.
Lock turned on.	The lock function is on. Operation from the front panel and external devices is disabled.
CLOCK LOST Switched to internal.	Master clock synchronization became unlocked. The unit switched to its internal clock.
- CANNOT COPY - Not Enough space on Media.	Not enough open space is available on the media, so copying is not possible.
- CANNOT INC. - Media full or too short interval.	Incrementing the track was not possible because either the interval was too short or the media does not have enough space.
- CANNOT MOVE - Mono file is not supported.	Moving mono ×2 files is not supported, so moving is not possible.
- CANNOT MOVE - This name already exists.	Moving is not possible because another file already has the same name.
--- CAUTION --- Cannot execute. Media Full.	Editing is not possible because the media does not have enough open space.
--- CAUTION --- Formatting not optimal for Recording/Search	This media format is not recommended.
--- CAUTION --- Not possible now Please Stop first.	Stop the unit before executing this function.
--- CAUTION --- Not recommended type for Recording/Search	This media is not recommended.
--- CAUTION --- RECORD stopped. ABS time limit.	Recording stopped because more than 24 hours elapsed.
--- CAUTION --- RECORD stopped. Media Full.	Recording stopped because the media ran out of open space.
-- COPY FAILED --	Copying failed.
- DEVICE ERROR -	An error occurred with the device.
-- DIN ERROR --	An error occurred during digital input.
--- ERROR --- INFO WRITING.	An error occurred at the end of recording.

10 – Message Lists

Message	Meaning
--- ERROR --- General Error needs to STOP.	A general error occurred.
--- ERROR --- Unsupported File. (too many tracks)	This file is not supported.
--- ERROR --- Unsupported Fs.	The sampling rate is not supported.
- MEDIA ERROR -	A media error occurred.
-- PLAY ERROR --	A playback error occurred.
-- PLAY ERROR -- Buffer underrun.	A buffer underrun error occurred.
-- READ ERROR --	An error occurred while reading.
-- REC ERROR --	Recording stopped because an error occurred during recording.
-- REC ERROR -- Buffer overflow.	Recording stopped because a buffer overflow error occurred.
- WRITE ERROR -	An error occurred while writing.
- CANNOT DIVIDE - Duplicate name error.	Division was not possible because a file already exists with a name that would be used by a new file after division.
-CANNOT RECORD- Media Full.	Recording is not possible because there is no open space on the media.
-CANNOT RECORD- Take limit reached.	Recording is not possible because the maximum number of files has been reached
- PLAYLIST ERROR - There are some unusable entries	There is a problem with the playlist entry information.
--- CAUTION --- Cannot play while input monitoring.	When the Input signal monitoring function is ON, and ADDA Direct mode is also ON, it is not possible to Play any tracks.
--- CAUTION --- Cannot turn on. Cascade mode is not off.	When Cascade mode is ON, this function is unavailable (ADDA Direct Mode)
--- CAUTION --- Cannot select as cascade mode. ADDA DIRECT - ON.	The Cascade Mode cannot be turned ON because ADDA Direct Mode is already ON.
--- CAUTION --- There is no entry.	The unit attempted to Play, etc, but the Playlist has no entries in it, so there is nothing to play.
--- CAUTION --- Cannot record. System limit.	This unit cannot record directly to a USB flash drive due to system limitations.
--- CAUTION --- Cannot select as master clock. Fs convert on.	The Sample Rate Converter (SRC) is already ON, so the Digital Input (DIN) cannot be selected as the Master Clock.
--- CAUTION --- Cannot turn on. D-IN is already Master Clock.	The Master Clock is already set to the Digital Input "DIN", so the Sample Rate Converter cannot be enabled.
--- CAUTION --- Must stop first.	This function or setting cannot be changed right now. Please STOP the unit, then it can be changed.

11 – Troubleshooting

If the unit is not functioning properly, please check the following items before calling for service. If these measures do not solve the problem, please contact the store where you purchased this unit or TASCAM customer support service.

Power does not turn on.

Confirm that the power plug is inserted securely.

Media is not detected.

- Confirm that the SD card or USB flash drive is inserted securely.
- Stop playback or recording once.

Playback is not possible.

If you are trying to play a WAV file, confirm that it uses a sampling frequency (44.1, 48, 88.2, 96, 176.4 or 192 kHz) and bit depth (16/24 bit) that are supported by this unit. If you are trying to play a DFF/DSF file, confirm that it uses a sampling frequency (2.8224 or 5.6448 MHz) supported by this unit.

No sound.

- Check the connections with the monitoring system and check the volume of the amplifier.
- If you cannot hear the input signal, confirm that the **INPUT MONITOR** screen setting is **ON**.
- If you cannot hear the playback signal, confirm that the **INPUT MONITOR** screen setting is **OFF**.

Unable to record.

- Check the connections.
- Adjust the recording level.
- If the media does not have enough open space, erase unneeded data to make more space or change the media.
- If the folder already contains a large number of entries (the total number of files, folders and other items), change the recording folder.

Changed settings are not saved.

This unit backs up settings whenever you change them. This backup could fail if you turn the power off while this data is being written, so do not turn the power off immediately after changing a setting.

I hear noise.

Check if any connecting cable might have a bad connection.

When editing text, “Name Full” appears.

Due to file system limitations, a maximum of 255 characters (halfwidth) can be used for items such as file and folder names. Moreover, the file path on the **BROWSE** screen is also limited to 255 characters.

Operation using the remote control (RC-10) is not possible.

Confirm that a battery is installed in the remote control and that it still has a charge.

12 – Specifications

Media and formats

Recording media

SD cards: 512 MB–2 GB SD supported
(Media ejection: 4 GB–32 GB SDHC supported
push-push type) 64 GB–512 GB SDXC supported

Playback media

SD cards: 512 MB–2 GB SD supported
(Media ejection: 4 GB–32 GB SDHC supported
push-push type) 64 GB–512 GB SDXC supported
USB flash drives

Recording/playback formats

PCM mode

Fs: 44.1, 48, 88.2, 96, 176.4 and 192 kHz
Bit depth: 16 and 24 bit
Playback: BWF (.wav extension)
Recording: BWF and WAV (both .wav extension)

DSD mode

Fs: 2.8224 and 5.6448 MHz
Playback and recording: DSDIFF (.dff extension)
DSF (.dsf extension)

Number of channels

2 mono/1 stereo

Inputs and outputs

Analog inputs

Unbalanced

Connectors: RCA pin jacks
Reference input level: –10 dBV
Maximum input level: +6 dBV
Input impedance: 22 k Ω or higher
Minimum input level: –22 dBV

Balanced

Connectors: XLR-3-31 (1: GND, 2: HOT, 3: COLD)
Reference input level: +4 dBu or +6 dBu (only when
maximum input level is +15 dBu)
Maximum input level: +24 dBu, +22 dBu, +20 dBu, +18 dBu
or +15 dBu (use menu to set)
Input impedance: 10 k Ω or higher
Minimum input level: –8 dBu or –6 dBu (only when
maximum input level is +15 dBu)

Analog outputs

Unbalanced

Connectors: RCA pin jacks
Reference output level: –10 dBV
Maximum output level: +6 dBV
Output impedance: 200 Ω or less

Balanced

Connectors: XLR-3-32 (1: GND, 2: HOT, 3: COLD)
Reference output level: +4 dBu or +6 dBu (only when
maximum input level is +15 dBu)
Maximum output level: +24 dBu, +22 dBu, +20 dBu, +18 dBu
or +15 dBu (set in menu)
Output impedance: 100 Ω or less

Ω (headphone) jack

Connector: 6.3 mm (1/4") standard stereo jack
Maximum output: 45 mW + 45 mW (32 Ω load, 0.1%
distortion)

Digital input

S/PDIF / CASCADE (unbalanced)

Connector:	RCA pin jack
Format:	IEC60958-3 (S/PDIF)
Input frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz (when SRC OFF) 32 kHz–216 kHz (when SRC ON)
Allowable frequency deviation:	±100 ppm (when SRC OFF)

AES/EBU (balanced)

Connector:	XLR-3-31 (1: GND, 2: HOT, 3: COLD)
Format:	AES3-2003/IEC60958-4 (AES/EBU)
Input frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz (when SRC OFF) 32 kHz–216 kHz (when SRC ON)
Allowable frequency deviation:	±100 ppm (when SRC OFF)

SDIF-3 (unbalanced)

Connectors:	BNC connector × 2 (L, R)
Format:	SONY SDIF-3/DSD-raw
Clock sync frequency:	44.1 kHz (when 2.8 MHz or 5.6 MHz)

Digital output

S/PDIF / CASCADE (unbalanced)

Connector:	RCA pin jack
Format:	IEC60958-3 (S/PDIF)

AES/EBU (balanced)

Connector:	XLR-3-32 (1: GND, 2: HOT, 3: COLD)
Format:	AES3-2003/IEC60958-4 (AES/EBU)

SDIF-3 (unbalanced)

Connectors:	BNC connector × 2 (L, R)
Format:	SONY SDIF-3/DSD-raw
Clock sync frequency:	44.1 kHz (when 2.8 MHz or 5.6 MHz)

Other connectors

WORD SYNC IN jack

Connector:	BNC
Input level:	equivalent to 5 V TTL
Input impedance:	75 Ω ±10% (includes terminal on/off switch)
Input frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz
Allowable frequency deviation:	±100 ppm

WORD SYNC THRU/OUT

Connector:	BNC
Output level:	equivalent to 5 V TTL
Output impedance:	75 Ω ±10%
Output frequency:	44.1, 48, 88.2, 96, 176.4 or 192 kHz (includes THRU/OUT on/off switch)
Frequency stability:	±1 ppm or less (Ta = 25°C)

USB (PLAY/COPY)

Connector:	USB A-type 4-pin
Protocol:	USB 2.0 HIGH SPEED (480 Mbps)
Power supply rating:	DC 5.0 V 0.5 A

USB (REMOTE)

Connector:	USB A-type 4-pin
Protocol:	USB 1.1 FULL SPEED (12 Mbps)
Power supply rating:	DC 5.0 V 0.2 A

12 – Specifications

Audio performance

Recording

Distortion (THD+N, 1 kHz)

PCM 24 bit mode and DSD mode

0.003% or less (Ref: –16 dB/BALANCED, JEITA)

0.005% or less (UNBALANCED, JEITA)

S/N

PCM 24 bit mode

113 dB or higher (Ref: –20 dB/BALANCED, JEITA)

111 dB or higher (UNBALANCED, JEITA)

DSD mode

106 dB or higher (Ref: –20 dB/BALANCED, AES-17 20k LPF)

104 dB of higher (UNBALANCED, AES-17 20k LPF)

Frequency response

PCM mode

Fs = 44.1 or 48 kHz

20 Hz–20 kHz: +0.1 dB, –0.5 dB (JEITA)

Fs = 88.2 or 96 kHz

20 Hz–40 kHz: +0.1 dB, –1 dB (JEITA)

Fs = 176.4 or 192 kHz

20 Hz–80 kHz: +0.1 dB, –6 dB (JEITA)

DSD mode

20 Hz–50 kHz: +0.1 dB, –3 dB (JEITA)

20 Hz–100 kHz: +0.1 dB, –12 dB (JEITA)

Crosstalk (1 kHz)

PCM 24 bit mode and DSD mode

105 dB or higher (JEITA)

Playback

Distortion (THD+N, 1 kHz)

PCM 24 bit mode and DSD mode

0.003% or less (BALANCED, JEITA)

0.001% or less (UNBALANCED, JEITA)

S/N

PCM 24 bit mode

118 dB or higher (Ref: –20 dB/BALANCED, JEITA)

116 dB or higher (UNBALANCED, JEITA)

DSD mode

116 dB or higher (Ref: –20 dB/BALANCED, AES-17 20k LPF)

114 dB of higher (UNBALANCED, AES-17 20k LPF)

Frequency response

PCM mode

Fs = 44.1 or 48 kHz

20 Hz–20 kHz: ±0.1 dB (JEITA)

Fs = 88.2 or 96 kHz

20 Hz–40 kHz: +0.1 dB, –0.3 dB (JEITA)

Fs = 176.4 or 192 kHz

20 Hz–80 kHz: +0.1 dB, –3 dB (JEITA)

DSD mode

20 Hz–50 kHz: +0.1 dB, –3 dB (JEITA)

20 Hz–100 kHz: +0.1 dB, –12 dB (JEITA)

Control input

Infrared sensor

RC-10 wireless remote control

General

Power

AC 120 V, 60 Hz (U.S.A./Canada)

AC 220 V–240 V, 50 Hz–60 Hz (U.K./Europe/Australia)

Power consumption

24 W

Dimensions(W × H × D)

483 × 45 × 305 (mm) / 19 x 1.75 x 12 (in)

Weight


4.1 Kg (9.04 lb)

Operating temperature range

0–40°C (32–104°F)


- 0 dBu = 0.775 Vrms
- 0 dBV = 1 Vrms

Dimensional drawings

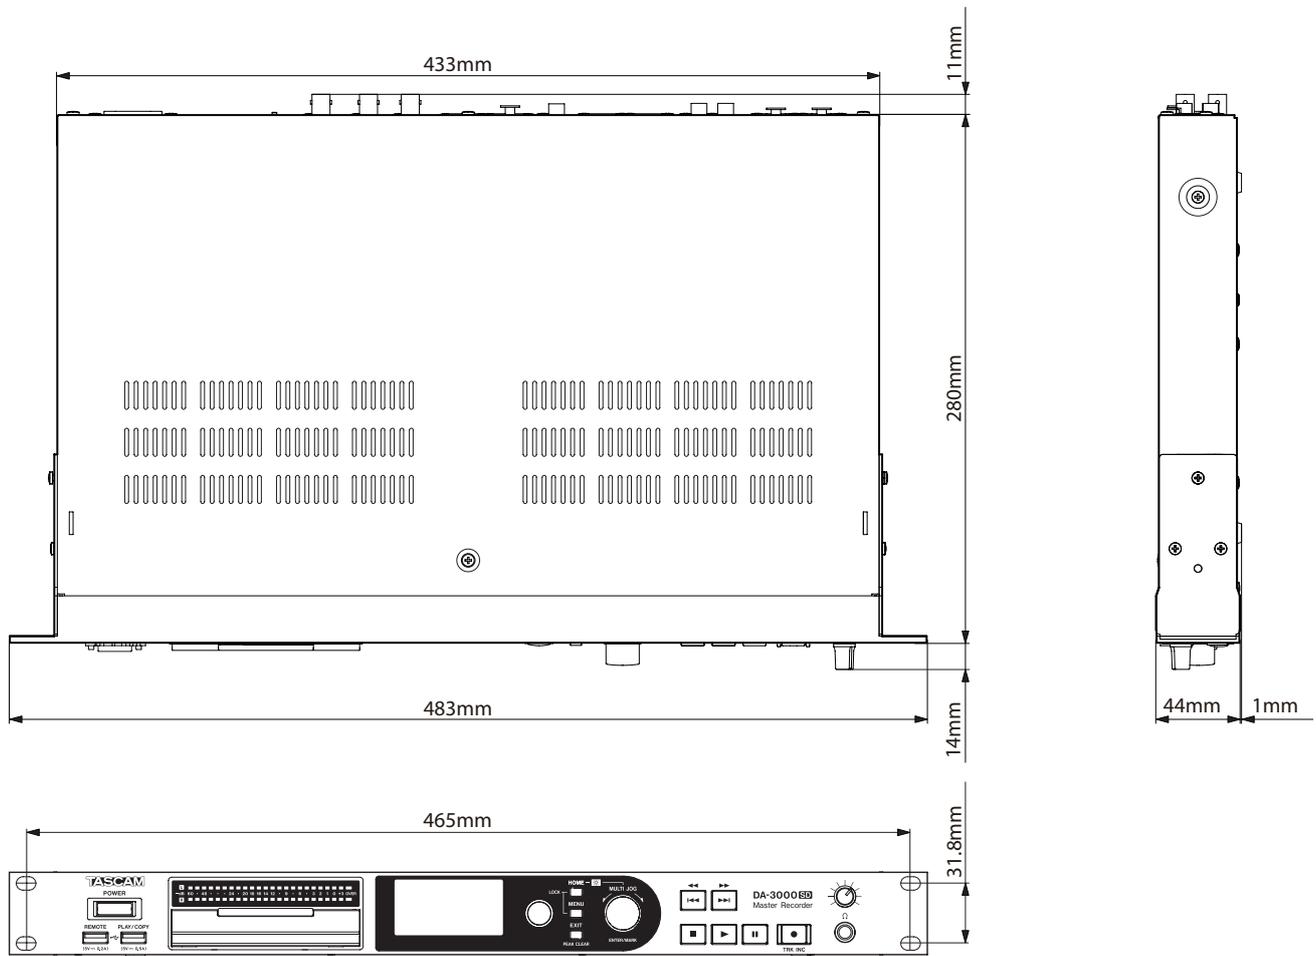

- Illustrations and other depictions may differ in part from the actual product.
- Specifications and external appearance may be changed without notification to improve the product.

Block diagram

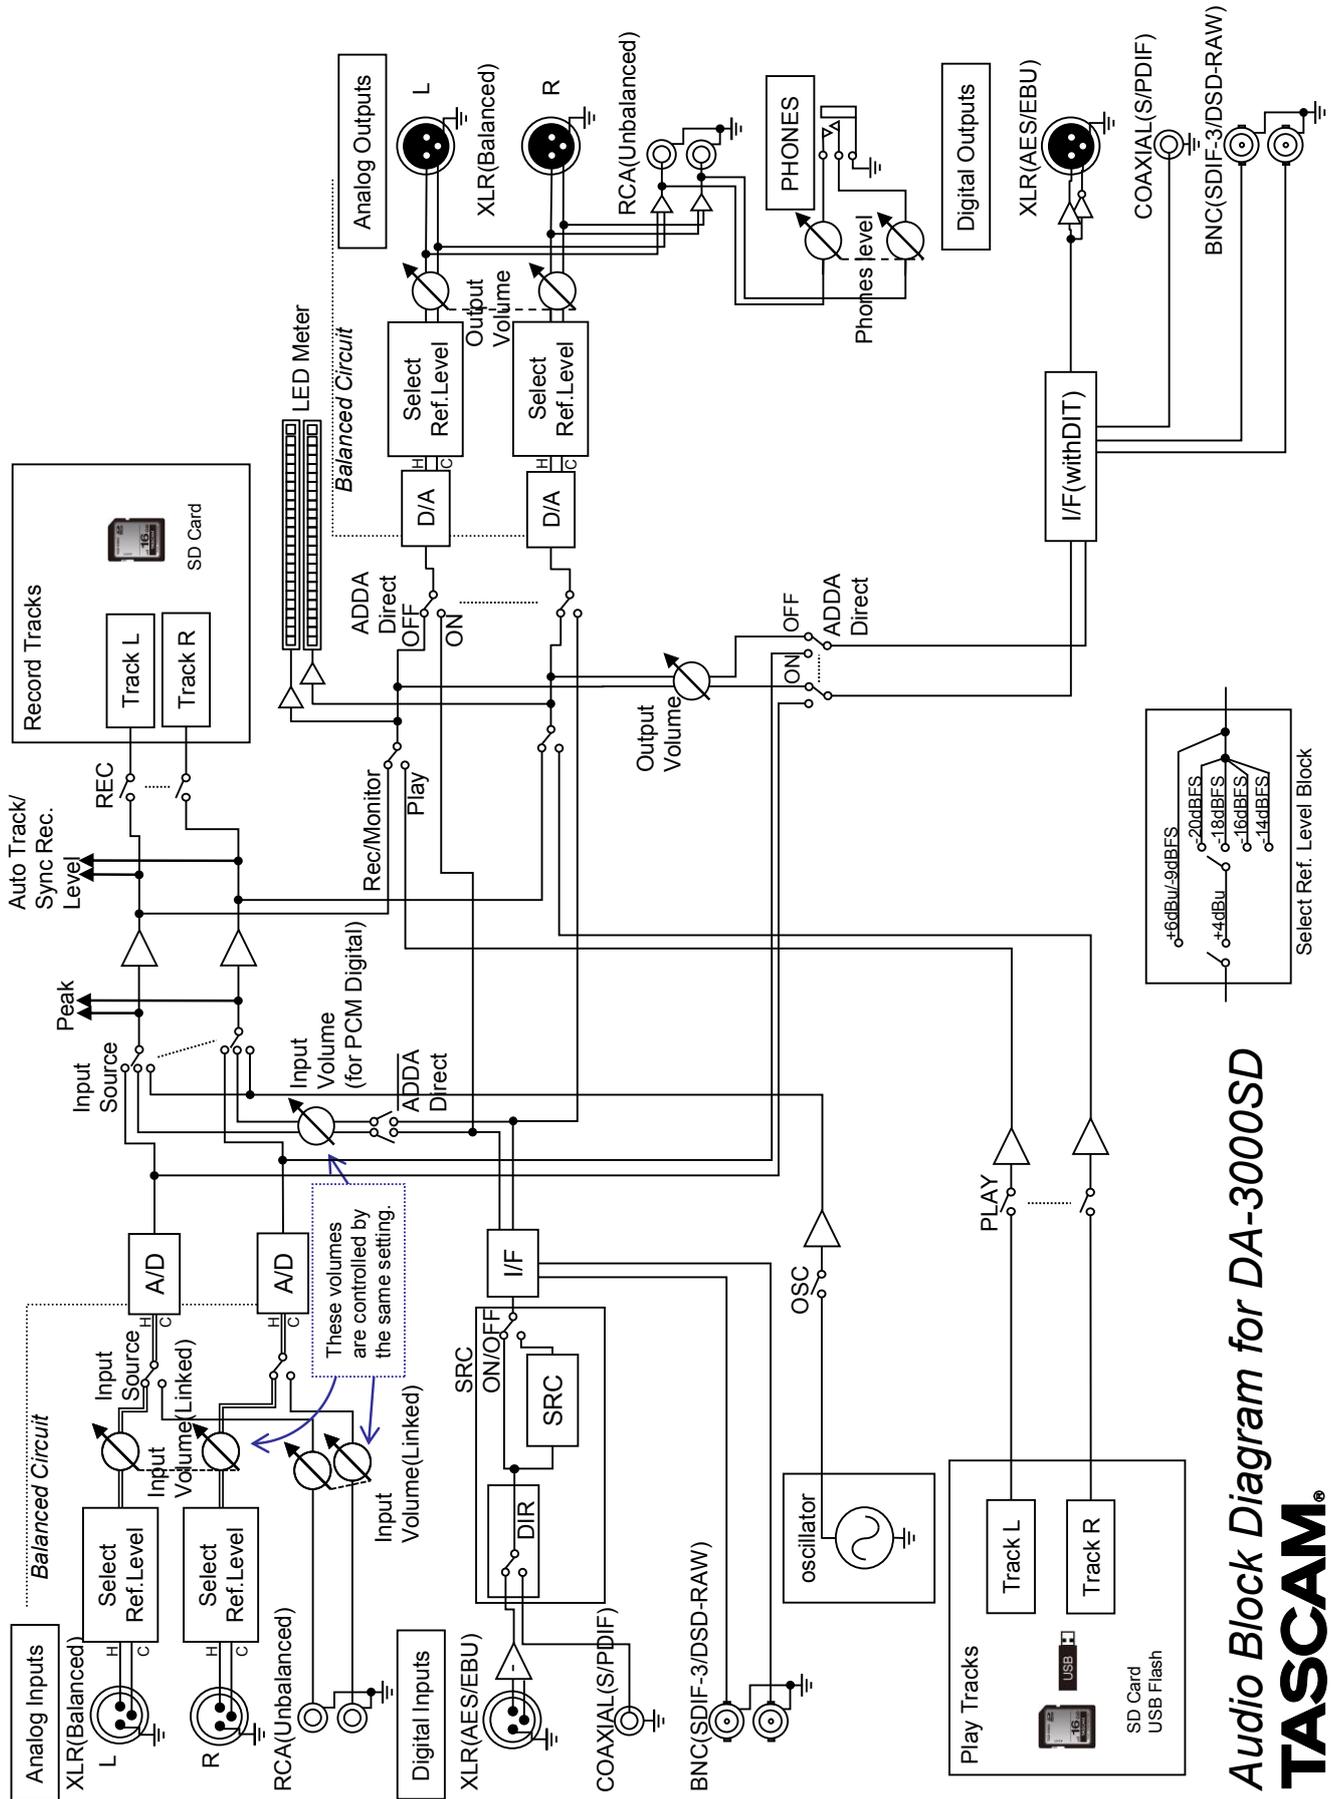

Audio Block Diagram for DA-3000SD
TASCAM

WARRANTY

< In the United States >

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is only valid within the United States when product is purchased within the United States.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as specified below, this warranty covers all defects in material and workmanship in the product. The following are not covered by the warranty:

1. Damage to or deterioration of the external cabinet or surface.
2. Damage resulting from accident, misuse, abuse, or neglect.
3. Damage resulting from failure to perform basic daily maintenance and/or calibration, or otherwise resulting from failure to follow instructions contained in the product owner's manual.
4. Damage occurring during shipment of the product (claims must be presented to the carrier).
5. The use of non-TEAC parts and services, unauthorized service technicians and do-it-yourself repairs are not eligible for warranty reimbursement.
6. Damage resulting from causes other than product defects, including lack of technical skill, competence, or experience of the user.
7. Damage to any unit which has been altered or on which the serial number has been defaced, modified, or removed.
8. Warning: For TEAC products that are FDA and/or FAA certified the use of non-TEAC parts, unauthorized service technicians and do-it-yourself repairs could de-certify the unit.
9. Products not purchased from an authorized TASCAM dealer in the United States.

WHO MAY ENFORCE THE WARRANTY

This warranty may be enforced only by the original purchaser.

LENGTH OF WARRANTY

One (1) year including parts and labor from the date of original purchase.

WHAT WE WILL PAY FOR

We will pay all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section of this warranty.

HOW YOU CAN GET WARRANTY SERVICE

Your unit must be serviced by an authorized TASCAM service station in the United States. (This warranty is not enforceable outside the U.S.) If you are unable to locate an authorized TASCAM service station in your area, please contact us. We either will refer you to an authorized service station or instruct you to return the unit to the factory. Whenever warranty service is required, you must present both the original dated sales receipt and this warranty statement as proof of warranty coverage. You must pay any shipping charges if it is necessary to ship the product for service. However, if the necessary repairs are covered by the warranty, we will pay return surface shipping charges to any destination within the United States.

LIMITATION OF IMPLIED WARRANTIES

Any implied warranties, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

TEAC's liability for any defective product is limited to repair or replacement of the product, at TEAC's option. TEAC shall not be liable for:

1. Damages based upon inconvenience, loss of use of the product, loss of time, interrupted operation or commercial loss; or
2. Any other damages, whether incidental, consequential or otherwise.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

To Locate an Authorized Service Center in Your Area:

Online
https://tascam.com/us/support/service_center

Email product support
<https://tascam.com/us/support/contact>

Telephone
(323) 726-0303 (hours of operation 8:30 AM until 5:00 PM pacific time)

Via US mail
TASCAM Professional Division
TEAC America, Inc.
10410 Pioneer Blvd., Unit #3, Santa Fe Springs, CA 90670
Voice: (323) 726-0303
Fax: (323) 978-5192
Web: <https://tascam.com/us/>

< Europe >

This product is subject to the legal warranty regulations of the country of purchase. In case of a defect or a problem, please contact the dealer where you bought the product.

Ce produit est sujet aux réglementations concernant la garantie légale dans le pays d'achat. En cas de défaut ou de problème, veuillez contacter le revendeur chez qui vous avez acheté le produit.

Dieses Gerät unterliegt den gesetzlichen Gewährleistungsbestimmungen des Landes, in dem es erworben wurde. Bitte wenden Sie sich im Gewährleistungsfall an den Händler, bei dem sie das Gerät erworben haben.

Las condiciones de garantía de este aparato están sujetas a las disposiciones legales sobre garantía del país en el que ha sido adquirido. En caso de garantía, debe dirigirse al establecimiento donde adquirió el aparato.

Questo apparecchio è conforme alle norme sulla garanzia vigenti nel rispettivo Paese in cui esso è stato acquistato. Si prega di rivolgersi al proprio commerciante, presso il quale è stato acquistato l'apparecchio, nel caso in cui si voglia richiedere una prestazione in garanzia.

< In other countries/areas >

This warranty gives you specific legal rights, and you may also have other rights that vary by country, state or province. If you have a warranty claim or request, please contact the dealer where you bought the product.

该保证书赋予了顾客特定的合法权利，并且因国家，州或省等地域的不同，顾客可能拥有其他权利。如需申请或要求保修，请与购买本产品的销售店进行联系。

If you require repair services for your TASCAM equipment, please contact the dealer where the product was purchased from or the TASCAM Distributor in your country. A list of TASCAM Distributors can be found on our website at: <https://teac-global.com/>

TASCAM

TEAC CORPORATION
Phone: +81-42-356-9143
1-47 Ochiai, Tama-shi, Tokyo 206-8530 Japan

<https://tascam.jp/jp/>

TEAC AMERICA, INC.
Phone: +1-323-726-0303
10410 Pioneer Blvd., Unit #3, Santa Fe Springs, CA 90670, U.S.A

<https://tascam.com/us/>

TEAC UK Ltd.
Phone: +44-1923-797205
Luminous House, 300 South Row, Milton Keynes, Buckinghamshire, MK9 2FR, UK

<https://www.tascam.eu/en/>

TEAC EUROPE GmbH
Phone: +49-611-71580
Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany

<https://www.tascam.eu/de/>

TEAC SALES & TRADING(SHENZHEN) CO., LTD
Phone: +86-755-88311561-2
Room 817, Xinian Center A, Tairan Nine Road West, Shennan Road, Futian District, Shenzhen, Guangdong Province 518040, China

<https://tascam.cn/cn/>

Printed in China

0724.MA-3849A

WARRANTY

Model / Modèle / Modell
Modello / Modelo

DA-3000SD

Serial No. / No de série / Seriennummer
Numero di serie / Número de serie

Date of purchase / Date de l'achat / Datum des Kaufs
Data dell'acquisto / Fecha de compra

TASCAM
<https://teac-global.com/>

Owner's name / Nom du propriétaire / Name des Eigentümers
Nome del proprietario / Nombre del propietario

Address / Adresse / Adresse
Indirizzo / Dirección

Dealer's name / Nom du revendeur / Name des Händlers
Nome del commerciante / Nombre del establecimiento

Dealer's address / Adresse du revendeur / Adresse des Händlers
Indirizzo del commerciante / Dirección del establecimiento

Sample

Memo

