

Pioneer

HDJ-C70

Professional DJ Headphones

Casque professionnel pour DJ

Professioneller DJ Kopfhörer

Auricolari professionali per DJ

Professionele DJ Hoofdtelefoon

Auriculares profesionales para DJ

Auscultadores Profissionais para DJs

Профессиональные наушники для DJ

专业DJ耳机

專業的DJ耳機

プロフェッショナルDJヘッドホン

Operating Instructions

Mode d'emploi

Bedienungsanleitung

Istruzioni per l'uso

Handleiding

Manual de instrucciones

Manual de instrucoes

Инструкция по эксплуатации

使用说明书


操作手冊

取扱説明書

Replacing the cable


To detach the cable

1. **Disconnect the plug moldings where they join the headphones.**
*If other parts are removed first, the cable may be stretched, causing the lead wires to be broken.
2. **Remove the headphones' left ear pad.**
3. **Gently remove the head cushion together with its inner plastic parts.**
4. **Use the accessory screwdriver to remove the screw at the bottom of the Left-side speaker unit.**
*Take care not to lose the removed screw!
*Take care not to damage the inner parts of the speaker unit with the tip of the screwdriver.
5. **Hold onto the cable bushing and disconnect the L-R cable divider, then disconnect the cable from the groove. Take care not to pull excessively on the cable since the wires may break.**

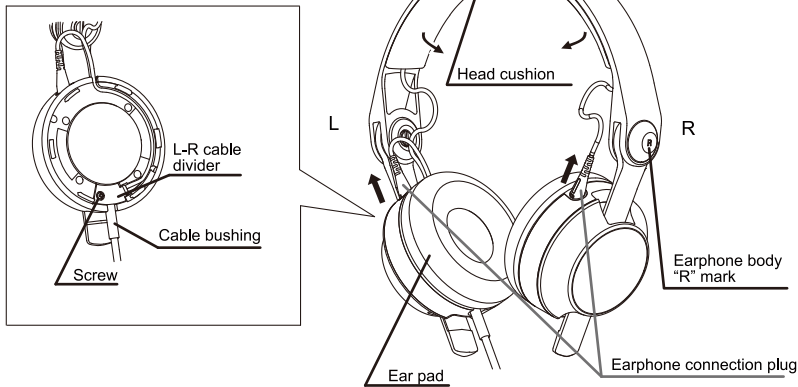


To attach the cable


- Align the mark on the center of the head cushion with the corresponding mark on the replacement cable, then fit the cable along the cable guides.
- Be sure that the L-R cable divider is on the L side of the headphones, then align the tab on the headband with the groove in the center of the head cushion, and gently press the two together beginning from the center and working outward from there.

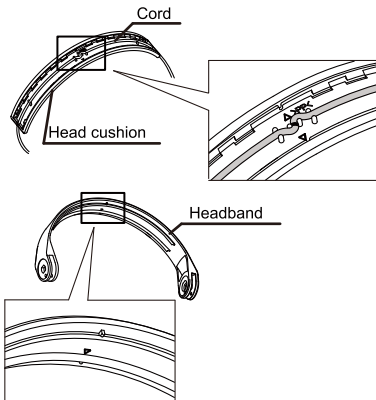

- Insert the L-R cable divider into the groove at the bottom of the L-side unit, and press the cable along the groove. When pressing the L-R cable divider into the groove, the process will be easier by following the direction indicated in the illustration, and ending by aligning the screw holes.

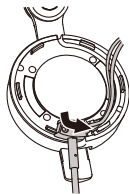


- Use the accessory screwdriver to tighten the screw securely.
- Align the tab on the ear pad with the groove on the speaker unit, and assemble the ear pad.

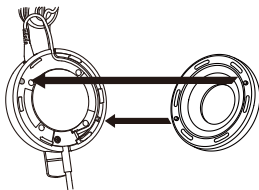

- Connect the L and R plug moldings to the respective sides on the headphones.




Earphone housing rotation

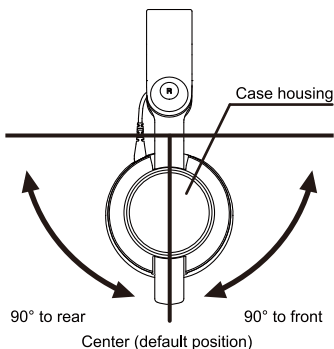

These headphones are designed to allow sound monitoring with one ear by rotating the opposite earphone housing (left or right) up and away from the ear. To rotate the earphone on one side, hold the housing case and rotate it forward or back 90° away from the ear.

Rotation tightness (resistance) adjustment

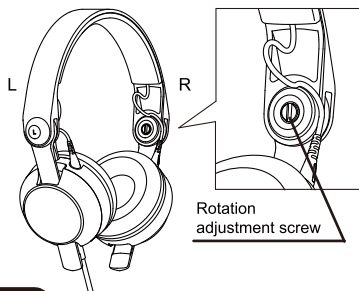

The rotation resistance (tightness) can be adjusted by loosening or tightening the rotation adjustment screw as shown in the illustration.

*Rotation cannot be completely locked.
Excessive tightening may result in damage to the unit.

Please read through these operating Instructions so you will know how to operate your model properly.

WARNING

- Adjust headphones sound to the proper volume. Loud sound may damage your ears.
- For traffic safety, never use the headphones while riding a bicycle, motor bike, or while driving a car. It is dangerous to increase the sound volume too much because you cannot hear external sounds; take great care about traffic around you.

CAUTION

- Never inspect the inside OR remodel this machine. If the customer remodels this machine, PIONEER will no longer guarantee its performance.

Precautions for use

- Caution should be observed during use, since adjustable parts may pinch the user's hair, depending on the way in which headphones are used.
- Do not subject the headphones to strong forces or impacts, since damage could occur to the exterior appearance or product performance.
- When headphones are dirty, wipe with a dry, soft cloth. Take care not to blow into the speaker unit.
- Sound quality might deteriorate or sound maybe interrupted if the plug is dirty. Keep the plug clean by wiping it with a soft, dry cloth occasionally.
- Ear pads may degrade over long periods of use or storage. In this event consult your dealer.
- If any itching or skin discomfort occurs during use, cease use immediately.
- This product is not edible. Place out of reach of small children to prevent accidental ingestion of small parts.

SPECIFICATIONS

Type Fully-enclosed dynamic headphones
Impedance 40 Ω
Sensitivity 100 dB
Frequency response 7 Hz to 32 000 Hz
Maximum input power 2 000 mW
Driver units \varnothing 40 mm dome type
Cord Single-side Cord 1.6 m
Plug \varnothing 3.5 mm stereo mini-plug
(gold plated, threaded type)

Ear pad Polyurethane (leather finish)
Weight 195 g (without cord)
Accessories Coiled cable, 1.0 m
(extended length 3.0 m),
 \varnothing 6.3 mm standard stereo plug adapter
(gold plated, threaded type),
Screwdriver, Carrying pouch

NOTE: Specifications and design are subject to possible modifications without notice due to improvements.

Informational Note for Customers in EU Only:



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one). For countries not mentioned above, please contact your local authorities for the correct method of disposal. By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.