

The **ADJ RFC** has many differnet functions and gives you complete control of your compatiable ADJ LED fixtures.

Always check your fixture's instruction manual to see what features the ADJ RFC can control. To control the your desired fixture you must aim the controller at the front of the fixture and be no more the 30 feet away. Note: The remote cannot be used when the fixtures are connected to a DMX controller.

BLACKOUT - Pressing this button will blackout the fixture.

AUTO RUN - This button will run an automatic program. You can control the speed of the Auto Run by pressing the SPEED button and then pressing the "+" and "-" buttons.

PROGRAM SELECTION - This button will activate program select mode.

FLASH - This button will activate the flash (strobe) effect. You can control the flash speed by pressing the "+" and "-" buttons.

SPEED - Press this button and use the "+" & "-" buttons to adjust the speed of the Auto run and Programs.

SOUND ACTIVE - This button activates sound active mode.

R G B W/A - Press either one of these buttons and the press the "+" or "-" to adjust the brightness.

"+" and "-" - Use these buttons to adjust the flash rate, speed of the Auto Run and Programs, sound sensitivity, and color select.