

## IP8

---

### Getting Started Guide

- ⓘ Before starting please check [www.allen-heath.com](http://www.allen-heath.com) for the latest software and documentation.

## **Limited One Year Manufacturer's Warranty**

Allen & Heath warrants the Allen & Heath -branded hardware product and accessories contained in the original packaging ("**Allen & Heath Product**") against defects in materials and workmanship when used in accordance with Allen & Heath's user manuals, technical specifications and other Allen & Heath product published guidelines for a period of ONE (1) YEAR from the date of original purchase by the end-user purchaser ("**Warranty Period**").

This warranty does not apply to any non-Allen & Heath branded hardware products or any software, even if packaged or sold with Allen & Heath hardware.

Please refer to the licensing agreement accompanying the software for details of your rights with respect to the use of software/firmware ("EULA").

Details of the EULA, warranty policy and other useful information can be found on the Allen & Heath website: [www.allen-heath.com/legal](http://www.allen-heath.com/legal).

Repair or replacement under the terms of the warranty does not provide right to extension or renewal of the warranty period. Repair or direct replacement of the product under the terms of this warranty may be fulfilled with functionally equivalent service exchange units.

This warranty is not transferable. This warranty will be the purchaser's sole and exclusive remedy and neither Allen & Heath nor its approved service centres shall be liable for any incidental or consequential damages or breach of any express or implied warranty of this product.

### **Conditions Of Warranty**

The equipment has not been subject to misuse either intended or accidental, neglect, or alteration other than as described in the User Guide or Service Manual, or approved by Allen & Heath. This warranty doesn't cover fader wear and tear.

Any necessary adjustment, alteration or repair has been carried out by an authorised Allen & Heath distributor or agent.

The defective unit is to be returned carriage prepaid to the place of purchase, an authorised Allen & Heath distributor or agent with proof of purchase. Please discuss this with the distributor or the agent before shipping. Units returned should be packed in the original carton to avoid transit damage.

**DISCLAIMER:** Allen & Heath shall not be liable for the loss of any saved/stored data in products that are either repaired or replaced.

Check with your Allen & Heath distributor or agent for any additional warranty information which may apply. If further assistance is required please contact Allen & Heath Ltd.

# IMPORTANT - Read before starting

## Safety instructions

---

Before starting, read the **Important Safety Instructions** printed on the sheet supplied with the equipment. For your own safety and that of the operator, technical crew and performers, follow all instructions and heed all warnings printed on the sheet and on the equipment panels.



Refer to this User Guide for information on applicable power supply whenever this symbol is printed on the equipment panels.

## System operating firmware

---

The function of the IP Remote Controller is determined by the firmware (operating software) that the mixing system runs. Firmware is updated regularly as new features are added and improvements made.

- ❗ Check [www.allen-heath.com](http://www.allen-heath.com) for the latest version of mixer or AHM firmware. dLive requires firmware V1.60 or higher to work the IP1.

## Software licence agreement

---

By using this Allen & Heath product and the software within it you agree to be bound by the terms of the relevant **End User Licence Agreement** (EULA), a copy of which can be found at [www.allen-heath.com/legal](http://www.allen-heath.com/legal). You agree to be bound by the terms of the EULA by installing, copying, or using the software.

## Further information

---

Please refer to the **Allen & Heath website** for further information, knowledgebase and technical support. For more information on system setup and mixing functions please refer to the mixer or AHM processor guides available for download at [www.allen-heath.com](http://www.allen-heath.com).

- ❗ Check for the latest version of this Getting Started Guide.

You can also join our Allen & Heath Digital Community to share knowledge and information with other users.

## General precautions

---

- Use only the power supply provided with this device (Sunpower EA1024H1-120).
- Protect the equipment from damage through liquid or dust contamination. Cover the equipment when it is not being used for a long period.
- If the equipment has been stored in sub-zero temperatures allow time for it to reach normal operating temperature before use at the venue. Recommended operating temperature is 0 to 35 degrees Celsius.
- Avoid using the equipment in extreme heat and direct sunlight. Make sure there is adequate air movement around the equipment.
- Clean the equipment with a soft brush and dry lint-free cloth. Do not use chemicals, abrasives or solvents.
- It is recommended that servicing is carried out only by an authorised Allen & Heath agent. Contact details for your local distributor can be found on the Allen & Heath website. Allen & Heath do not accept liability for damage caused by maintenance, repair or modification by unauthorised personnel.

## Register your product

---

Register your product online at [www.allen-heath.com/register](http://www.allen-heath.com/register).

### IP8 Getting Started Guide

Copyright © 2016 Allen & Heath. All rights reserved.

# ALLEN & HEATH

Allen & Heath Limited, Kernick Industrial Estate, Penryn, Cornwall, TR10 9LU, UK

<http://www.allen-heath.com>

# Contents

IMPORTANT - Read before starting.....	3
1. Introduction .....	6
2. Mounting the Remote Controller .....	7
3. Front Panel.....	8
4. Rear Panel.....	10
5. Connect and power up.....	11
5.1 Set up the unit Name and IP Address .....	11
5.2 System connection.....	12
5.3 Ethernet Switch .....	12
5.4 Programming the Remote Controller.....	13
6. Dimensions .....	14
7. Technical specs .....	14

# Packed items

Check you have received the following:

- IP8 Remote Controller
- Getting Started Guide AP10354
- Safety Sheet
- 12V Power Supply

## 1. Introduction

The IP8 is part of the Allen & Heath IP Series of remote controllers. It interfaces with the AHM, dLive or Avantis mixing system via standard TCP/IP Network connections and can therefore be networked with other controllers, computers and third party devices using standard Ethernet infrastructure. It can be powered by an external 12V PSU or over Ethernet (PoE+).


The IP8 controls and functions are programmed using the AHM System Manager software, dLive Surface / Director software, or Avantis mixer / Director software, and can suit a number of applications including:

- Installation – The installer or system integrator can configure the IP8 to provide the degree of control needed by the day to day operator, for example the levels of microphones and music sources in a room.
- Surface extender – The sound engineer can make use of all fader strips on a dLive Surface or Avantis mixer to control Input channels, and set up a 'sidecar' IP8 to control master levels or FX sends/returns.
- Personal Monitoring – The IP8 can be configured to control the Send levels and assignments of multiple channels to a specific mix on the dLive, for example for wireless IEM use, giving musicians the freedom to control their own monitor sound.


## 2. Mounting the Remote Controller

The IP8 can be used free standing or mounted in a plinth.

Use the holes indicated below for 6B screws when mounting in a plinth, podium or furniture. Ensure adequate air flow around the unit.

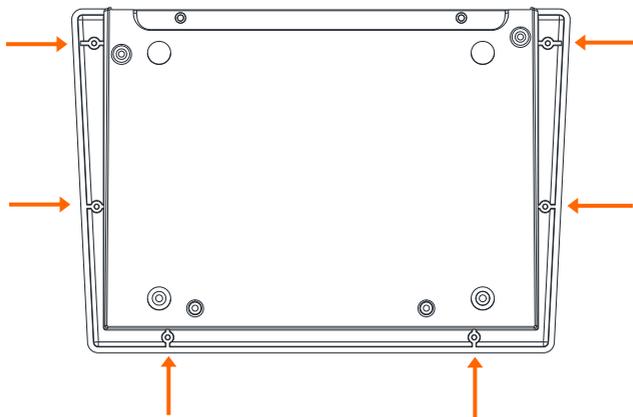

### 3. Front Panel

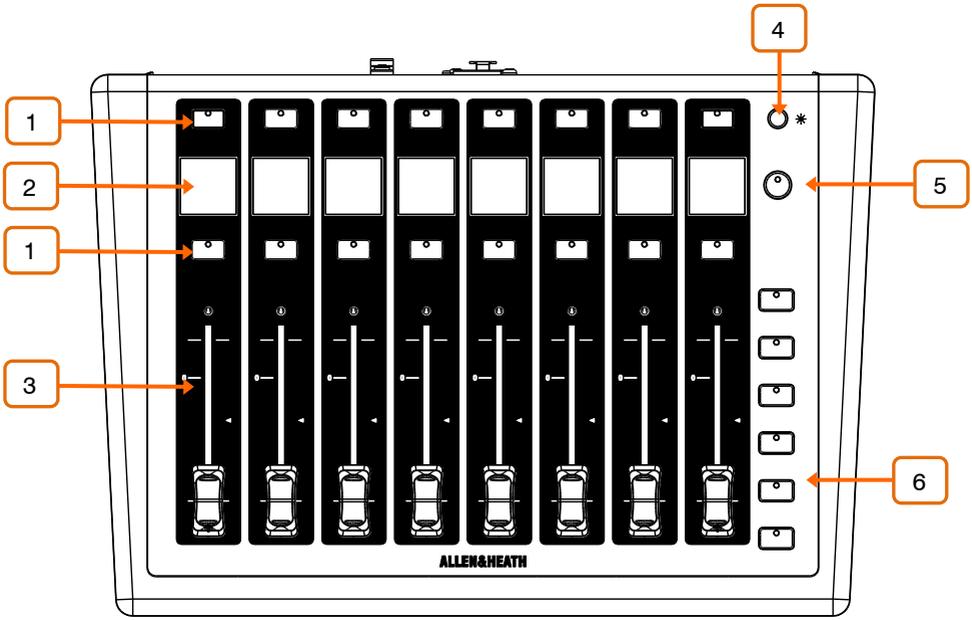

**1 SoftKeys** – 2 sets of 8x backlit assignable keys. Can be configured individually or as part of a vertical ‘Rotary Strip’. Available functions include Send On/Off, PAFL, Mute, Scene Recall, Tap Tempo, Talkback Assign, Custom MIDI.

**2 LCD Displays** – 8x colour displays providing information on the channels and on the function of the SoftKeys.



3

**Faders** – 8x assignable motorised faders. Can be configured individually or as part of a vertical ‘Rotary Strip’.

Available functions include Input Level, Mix / Zone Level, DCA / Control Group Level, Aux Send Level, FX Send Level, Custom MIDI.

4

**Dimmer** – Steps through different brightness presets for all displays and keys, for use in low light environments.

5

**SoftKey (Alt View)** – Assignable key. Can be configured to show alternative information on the LCD displays.

Other available functions include Send On/Off, PAFL, Mute, Scene / Preset Recall, Tap Tempo, Talkback Assign, Custom MIDI.

6

**SoftKeys (Layers)** – 6x additional, backlit assignable keys. Can be configured to change Layers on the Remote Controller. This allows up to 6 different sets of controls / channels instantaneously available at a press of a button. For example you can control the sends of 48 individual Inputs to a monitor mix, or set up the Layers to control the sound to 6 different zones in a venue.

Other available functions include Send On/Off, PAFL, Mute, Scene Recall, Tap Tempo, Talkback Assign, Custom MIDI.



# 5. Connect and power up

## 5.1 Set up the unit Name and IP Address

---

When connecting multiple IP Remote Controllers to the same network, ensure each unit is set to a unique Name and IP Address beforehand. Alternatively you can enable DHCP on the Remote Controllers, provided a DHCP Server is present on the network and the DHCP range is compatible with the IP Address of the mixing system.

The factory default settings are as follows:

Unit Name	IP8
DHCP	Off
IP Address	192.168.1.73
Subnet Mask	255.255.255.0
Gateway	192.168.1.254

There are two ways of editing these settings:

**Browser access** – Connect a PC or Mac computer to the Network port of the IP8. Set your computer to a compatible, static IP Address, for example 192.168.1.100 with Subnet 255.255.255.0. Open a web browser and type the IP8 default IP Address **192.168.1.73** in the URL bar. This will give access to the unit network settings. Repeat the operation for each IP8 unit.


**System software** – Connect the IP8 to a dLive/Avantis/AHM Network port. Use the mixer touchscreen interface or Director / System Manager software to edit the IP8 network settings. Once applied, repeat the operation for each IP8 unit.

 Refer to the mixer or AHM processor guides available for download at [www.allen-heath.com](http://www.allen-heath.com) for more information.

## 5.2 System connection

---

Connect the IP8 to a dLive / Avantis / AHM Network port using a CAT5 cable up to 100m long.

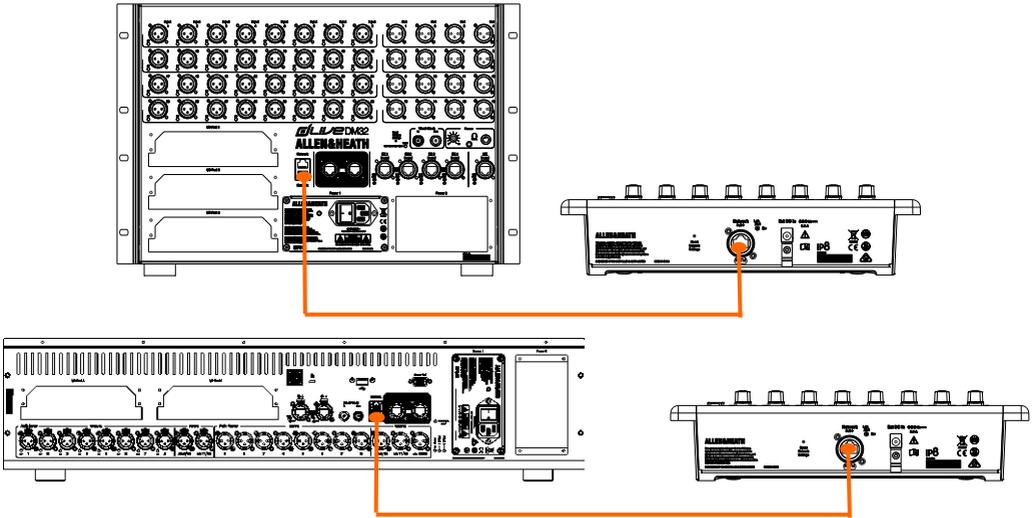

Power up the IP8 by plugging the external PSU into the DC In socket. The port Lnk/Err indicator flashes at a steady rate when the link is established. The unit Name and IP address are displayed on the LCD Displays for easy identification of the unit. After a few seconds the IP8 will display the assignments and functions if any have been set for the unit.

**i** If the firmware in a connected IP Remote Controller is not the same version as that in the mixing mixer, then the host mixer or processor will automatically update the IP firmware at power up.

## 5.3 Ethernet Switch

---

For parallel connection of multiple IP Remote Controllers you can use a standard Ethernet switch.

**i** For PoE (Power over Ethernet), the PoE+ 802.3at standard (25.5W at source) is required. Check that the overall power rating is enough to provide for all IP Remote Controllers you wish to connect (allow 25W per IP8 unit).

## 5.4 Programming the Remote Controller

---


Use the AHM System Manager software, dLive Surface / Director software, or Avantis mixer / Director software to configure the controller as appropriate.

With dLive, the IP8 can be set to link to either the **MixRack** or the **Surface**. This is regardless of the physical Network connection, for example the unit might be physically connected to the MixRack but set to link to the Surface. Linking to the MixRack provides an independent Remote Controller that can be used with or without Surface connection. Linking to the Surface adds the ability to assign extra functions to the IP8 SoftKeys such as **Sel** and **Mix**.

The functions and assignments of the IP8 are stored in the dLive / Avantis Scenes or AHM Presets. They are not stored locally on the Remote Controller.

 Refer to the mixer or AHM processor guides available for download at [www.allen-heath.com](http://www.allen-heath.com) for more information.

## 6. Dimensions

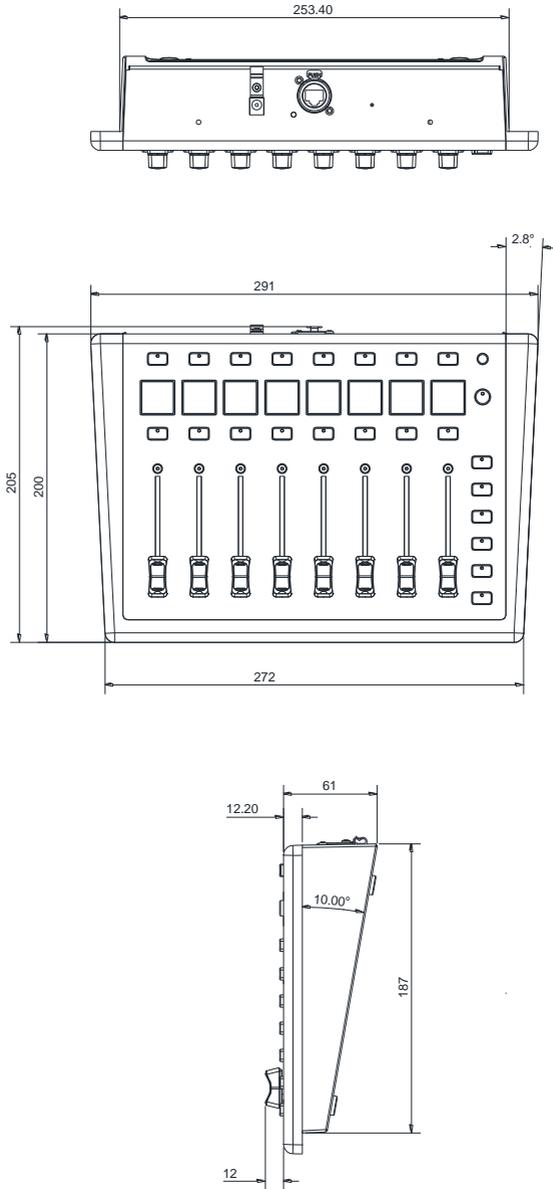

## 7. Technical specs

### System

Network	Fast Ethernet 100MBps
Ext DC In	+12V, 2.5A
PoE	802.3at (25.5W at source)
Max power consumption	25W
Operating Temperature Range	0 deg C to 35 deg C (32 deg F to 95 deg F)

### Dimensions and Weights

	Width x Depth x Height
IP8	291 x 205 x 61 mm
IP8 (boxed)	380 x 350 x 165 mm

### Weights

IP8	2.5kg (5.5lbs)
IP8 (boxed)	2.6kg (5.7lbs)