
# COLORADO I

### **User Manual**





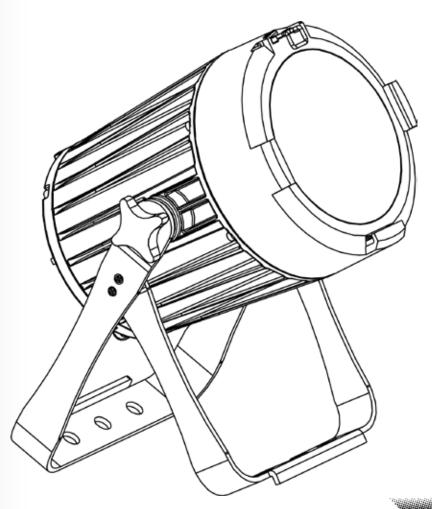

Edition The COLORado 1 Solo User Manual Rev. 2 includes a description, safety precautions, and installation, programming, operation, and maintenance instructions for the COLORado 1 Solo **Notes** as of the release date of this edition in August 2016.

Trademarks CHAUVET, the Chauvet logo and COLORado 1 Solo are registered trademarks or trademarks of Chauvet & Sons LLC. (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

### © Copyright 2016 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document For better results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If **Printing** using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

Intended Any person in charge of installing, operating, and/or maintaining this product should completely Audience read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions..

### Revision

**Document** The COLORado 1 Solo User Manual Rev. 2 supersedes all previous versions of this manual. Discard any older versions of this manual and replace with this version. Go to www.chauvetprofessional.com for the latest version.



### **Table of Contents**

1. Before You Begin	1
What Is Included	1
Claims	
Manual Conventions	
Symbols	1
Safety Notes	
Personal Safety	
Mounting And Rigging	
Power And Wiring	
Operation	
Expected LED Lifespan	
2. Introduction	3
Description	
Features	
Overview	
Dimensions	5
3. Setup	6
AC Power	6
AC Plug	
Power Linking	
DMX Linking	
DMX Personalities	
Remote Device Management (RDM)	
Master/Slave Connectivity	
Mounting	8
Orientation	
Rigging	
Procedure	8
4. Operation	9
Control Panel Description	g
Control Options	
Programming	
Control Panel Lock	
Passcode	
Menu Map	
Menu Map (Cont.)	
Configuration (Standalone)	
Auto Programs	
Edit Custom Programs	
Master/Slave	12
Color Settings	
Dimmer Profiles	
Program Upload	
ResetWhites Setting	
White Calibration.	
Static Color	
Color Temperature Settings	
Color Temperature SettingsZoom Mode	14
:	14 14
Zoom Mode	14 14 14
Zoom Mode  LED Frequency  Software Information  RDM	14 14 14 14
Zoom Mode  LED Frequency  Software Information	14 14 14 14



DMX Personalities	15
DMX Control	
Loss Of Signal Setting	15
TOUR Notes	16
Master Dimmer	
Red, Green, Blue, and White Color Selection	
Color Macros	
Strobe	
Auto/Custom	
Zoom Dimmer Speed	
DMX Values	
DMX Values (Cont.)	21
DMX Values (Cont.)	22
DMX Values (Cont.)	23
DMX Values (Cont.)	24
5. Technical Information	25
Product Maintenance	25
6. Technical Specifications	26
Returns	27
Contact Us	28



### 1. Before You Begin

What Is • Included

COLORado 1 Solo

Seetronic Powerkon IP65 power cord

Warranty Card

Quick Reference Guide

Claims Carefully unpack the product immediately and check the box to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

### Manual Conventions

<b>O</b> ,	· · · · · · · · · · · · · · · · · · ·			
Convention	Meaning			
1–512	A range of values in the text			
50/60	A set of mutually exclusive values in the text			
<set></set>	A button on the product's control panel			
Settings	A product function or a menu option			
MENU>Settings	A sequence of menu options			
1–10	A range of menu values from which to choose in a menu			
Yes/No	A set of two mutually exclusive menu options in a menu			
ON	A unique value to be entered or selected in a menu			

### **Symbols**

Symbols	Meaning
<u> </u>	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
$oldsymbol{\hat{I}}$	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Any reference to data or power connections in this manual assumes the use of Seetronic IP rated cables



### **Safety Notes**

Read all the following Safety Notes before working with this product. These notes include important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

### **Personal Safety**

- Avoid direct eye exposure to the light source while the product is on.
- · Always disconnect this product from its power source before servicing.
- · Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing during operation because it may be very hot.

# Mounting And Rigging

- Do not submerge this product (IP65). Temporary outdoor operation is fine.
- Do not allow the product to remain pointed straight down if using in below freezing temperatures.
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Not for permanent outdoor installation in locations with extreme environmental conditions.
   This includes, but is not limited to:
  - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
  - Where the normal high or low temperatures of the location exceed the temperature ranges in this manual.
  - Locations that are prone to flooding or being buried in snow.
  - Other areas where the product will be subject to extreme radiation or caustic substances.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.

# Power And Wiring

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

### Operation

- Do not operate this product if you see damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at a higher temperature.
- · In case of a serious operating problem, stop using this product immediately!



In the unlikely event that your Chauvet product requires service, contact Chauvet Technical Support.

# Expected LED Lifespan

LEDs gradually decline in brightness over time, mostly because of heat. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal, single-LED conditions. For this reason, using clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan can be 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product and reducing the ambient temperature to an optimal operating range. In addition, limiting the overall projection intensity may also help to extend the LEDs' lifespan.



### 2. Introduction

Description The COLORado 1 Solo is an IP65-rated high-power quad-color (RGBW) LED wash product with color mixing and zoom control. This powerful wash product projects an even, fully homogenized beam through fast and smooth zooming optics. The COLORado 1 Solo features new IP rated power and data connectors, full convection cooling, and a double-bracketed yoke that can serve as a floor mount or hanging support bracket.


### Features ·


9, 12 or 17-channel quad-color LED wash product

- Operating modes:
  - 9-channel: H/S/CCT control, dimmer, strobe, zoom, zoom reset, dimmer speed
  - 9-channel: R/G/B/W, dimmer, strobe, zoom, zoom reset, dimmer speed
  - 12-channel: R/G/B/W, dimmer, strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
  - 17-channel: 16-bit R/G/B/W and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
  - 17-channel: 16-bit R/G/B/W and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset
- Zooming RGBW LED wash for touring, rental and production indoors or out
- Completely homogenized wash with superior color mixing and zoom
- 8° to 55° smooth and fast zoom
- All environment operation with IP rated power and DMX connections
- Color temperature presets, from 3200 K to 10000 K
- Selectable, smooth dimming curves for programming versatility
- OLED display with password protection




### **Overview**

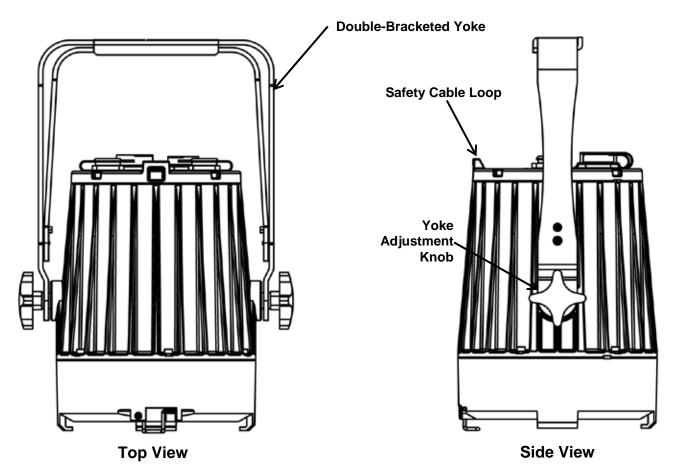

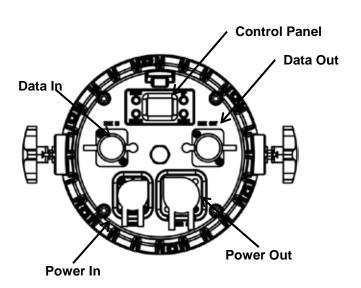




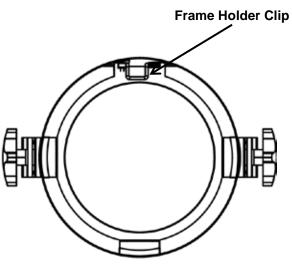



**Front View** 



### **Dimensions**

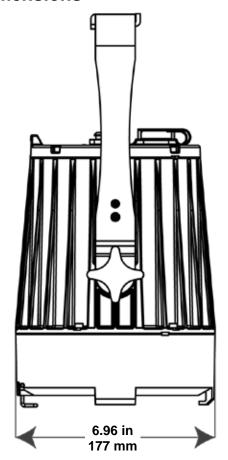

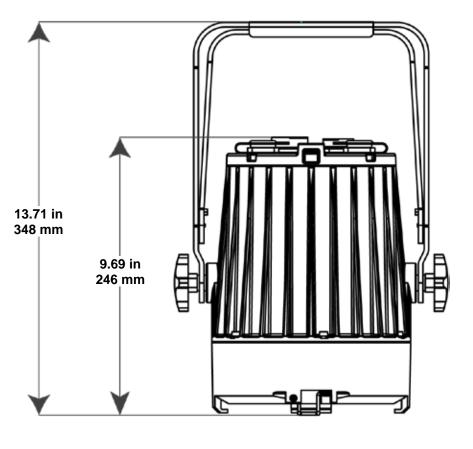

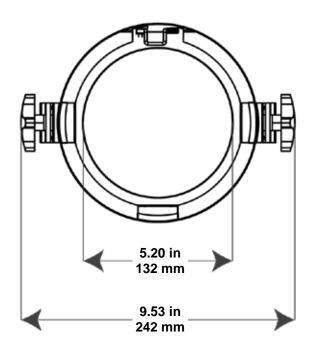



### 3. Setup

### **AC Power**

Each COLORado 1 Solo has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each COLORado 1 Solo, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the Chauvet website: www.chauvetprofessional.com.



- Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.



Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

The COLORado 1 Solo comes with a power input cord terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color	
AC Live	AC Live Black		Yellow or Brass	
AC Neutral White		Blue	Silver	
AC Ground	Green/Yellow	Green/Yellow	Green	

Power Linking The COLORado 1 Solo supports power linking. You can power link up to 24 products at 120 V; up to 40 at 208 V; or up to 45 at 230 V. This product comes with a power input cord.



- To preserve the IP65 rating and the warranty of this product, Seetronic Powerkon cables must be used.
- Insert the attached IP65 rated plugs into the corresponding power/data connections when not in use.



### DMX Linking

You can link the COLORado 1 Solo to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with the COLORado 1 Solo, you can control each individually with a single DMX controller.

DMX The COLORado 1 Solo uses a 5-pin DMX data connection for the HSIC, SSP, TOUR, TR16, Personalities and STD.Y DMX personalities.

- Refer to the Introduction chapter for a brief description of each DMX personality.
- Refer to the Operation chapter to learn how to configure the COLORado 1 Solo to work in these personalities.
- The DMX Values section provides you with detailed information regarding the DMX personalities.



- If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.
- For optimum control of the 16-bit dimming channels in the TR16 and STD.Y personalities, be sure that both dimming curves in SETTING > DIMMER are set to OFF.

# (RDM)

Remote Device Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to Management communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The COLORado 1 Solo supports RDM protocol that allows feedback to make changes to menu map options.

# Connectivity

Master/Slave The Master/Slave mode allows a COLORado 1 Solo (the master) to control one or more COLORado 1 Solos (the slaves) without a DMX controller. One COLORado 1 Solo becomes the master when running an auto or custom program, or by being in a Static mode.

> You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The Operation section of this manual provides detailed instructions on how to configure the master and slaves.
- If you are not familiar with or need more information about DMX standards, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.



- To preserve the IP65 rating and the warranty of this product, IP65 data cables must be used.
- Insert the attached IP65 rated plugs into the corresponding power/data connections when not in use.



### Mounting


Before mounting this product, read and follow the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to http://trusst.com/products/.

Orientation Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.

Rigging Chauvet recommends using the following general guidelines when mounting this product.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to mount this product away from any flammable material as indicated in the Safety Notes.
- If hanging this product, make sure that the mounting location can support the product's weight. See the **Technical Specifications** for the weight-bearing requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable. For our CHAUVET Professional line of safety cables, go to http://trusst.com/products/.

Procedure The COLORado 1 Solo comes with a double-bracketed yoke to which you can either attach mounting clamps for hanging or simply use as a floor stand. You must supply your own mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For our CHAUVET Professional line of mounting clamps, go to http://trusst.com/products/.

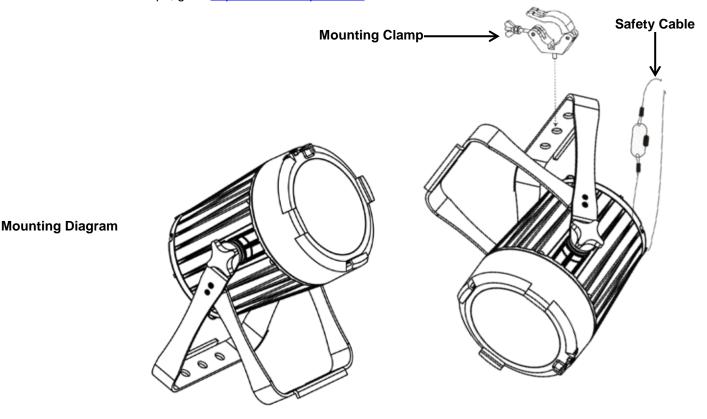

Floor Mounting

**Overhead Mounting** 



When using only one mounting clamp, be sure to use a clamp with a captive bolt to prevent accidental loosening.



### 4. Operation

### **Control Panel Description**

Button	Function
<menu></menu>	Exits from the current menu or function
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function

Control Set the COLORado 1 Solo starting address in the 001–512 DMX range. This enables control of Options up to 30 products in the 17-channel TR16 personality.

### **Programming**

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press < MENU> repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press **<ENTER>** to select. In this case, if there is another programming level, you will see that first option, or you will see the selected value.
- Press **<MENU>** repeatedly to exit to the previous main level.

Control Panel This setting enables you to activate or disable the control panel lock, which keeps nonauthorized personnel from changing the product's settings.

- Lock 1. Go to the KEY main level.
  - 2. Select ON or OFF.



When the control panel lock is activated, in order to access the products main programming level, the product will prompt you to enter the passcode. Enter the passcode as described in Passcode.

**Passcode** After being prompted to enter the passcode:

Press <UP>, <DOWN>, <UP>, <DOWN>, <ENTER>.



### Menu Map

Main Level	Programming Levels			Description		
STATIC	REC GREE BLU WHIT	E E	000–255		Combines red, green, blue, and white to make a custom color (0–100%)	
	ZOO	М			Changes the beam angle (zoom)	
	STRO				Selects the strobe frequency (0–25 Hz)	
ADDRESS		001–			Selects the DMX starting address	
AUTO PROGRAM	AUTO1		Speed	000–255	10 automatic programs	
		PROGR <i>A</i>	AM1-10		10 customizable programs	
RUN MODE		DM			DMX mode	
		SLA			Master/Slave mode	
ZOOM MODE		ZOOM M	ODE 1		Normal operation	
		ZOOM M	ODE 2		Recommended for use Below 40 °F	
	HSIC				9-channel: H/S/CCT control, dimmer, strobe, zoom, zoom reset, dimmer speed	
	SSP				9-channel: R/G/B/W, dimmer, strobe, zoom, zoom reset, dimmer speed	
PERSONALITY	TOUR				12-channel: R/G/B/W, dimmer, strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset	
	TR16				17-channel: 16-bit RGBW and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset	
	STD.Y				17-channel: 16-bit RGBW and dimmer; strobe, color macro, auto/custom, dimmer speed, auto speed, zoom, zoom reset	
			RED			
			GREEN		Combines red, green, blue, and white to make	
			BLUE		a custom color (0-100%)	
			WHITE			
EDIT	PROGRAM	SCENE	ZOOM	000-	Changes the beam angle (zoom)	
EDIT	01-10	01–30	STROBE	255	Selects the strobe frequency (0–25 Hz)	
			TIME		Defines the step duration (slow to fast)	
			FADE		Defines the fade duration (slow to fast)	



Menu Map (Cont.)

Ienu Map (C Main Level		Programming Levels			Description		
		UPLOAD	**** (Enter Passcode)	SEND	Uploads custom programs to other COLORado 1 Solo products		
		RESET	*** (Enter Pa		Defaults product to factory settings		
			U	<u> </u>	Universal color balance		
		COLOR	RGBW		RGB set to <b>255</b> = balanced white		
			OF	F	RGB set to <b>255</b> = max. output		
			OF	F	No dimmer		
			DIN	14			
		DIMMER	DIM3		Selects dimming profiles from		
					fast ( <b>DIM1</b> ) to slow ( <b>DIM4</b> ) or <b>OFF</b>		
SETTING	****		DIN	11			
	(Enter Passcode)	DMX ERROR	SAVE		Continues with last command upon loss of DM control		
			BLACK		Blacks out fixture upon loss of DMX		
		PWM	600Hz				
			1200Hz				
			2000Hz		Selects the PWM output frequency		
			2400Hz		- Colocolo trio i vvivi output frequency		
			6000Hz				
			25000Hz				
			WARM WHITE		Sets the color temperature when all color faders		
		FULL POWER	NEUTRAI		are set to 100%		
		ССТ	COOL				
			NORI	MAL	Manual color temperature		
KEY		ON			Turns the passcode on or off		
		OFF	DED		·		
			RED				
		WHITE 01-12	GREEN BLUE	000–255	Modifies the color macros used in the TOUR, TR16, HSIC, and STD.Y personality		
CALIBC	**** /Entor	01-12	WHITE		Personality		
CALIB.C	(Enter Passcode)		R.				
		RGBW		000–255	Defines the color temperature used when		
		KOBW	В.	000 255	COLOR is set to RGBW.		
	VERSION		V0.1		Shows installed software version		
INFO		UID	0x21A400	067	Displays Current UID #		
	RDM		COLORado 1 SoLo				



### Configuration (Standalone)

Use standalone configuration to operate the product without a DMX controller.

**Auto Programs** Auto programs allow for dynamic RGBW color mixing without a DMX controller.

- Go to the AUTO PRPGRAM main level.
- 2. Select the desired auto (AUTO1-10) and (Speed 000-255) or custom program (PROGRAM1-10).



You cannot edit any of the auto programs (AUTO1-10); however, you can edit the custom programs (PROGRAM1-10). See Edit Custom Programs for details.

Edit Custom This setting allows the programming of up to 30 scenes for each of the 10 customizable Programs programs, including colors and effects.

- 1. Go to the **EDIT** main level.
- 2. Select the desired auto program (PROGRAM01-10).
- 3. Select the desired scene (SCENE 01-30).
- 4. Select the desired color or effect (RED, GREEN, BLUE, WHITE, STROBE, TIME, or FADE).
- 5. Select the color or effect value (000–255).
- 6. Repeat for the other colors or effects.
- 7. Return to the scene (SCENE 01-30) level.
- Repeat the settings of colors and effects for the other scenes.

Master/Slave The Master/Slave mode allows a group of COLORado 1 Solos (the slaves) to simultaneously duplicate the output of another COLORado 1 Solo (the master) without a DMX controller.

- 1. Set each of the slaves:
  - a. Go to the RUN MODE main level.
  - b. Select **SLAVE**.
- Set the master:
  - a. Set the running mode to **DMX** as explained in <u>DMX Control</u>.
  - b. Select an auto or custom program as explained in Auto Programs, or a static mix of
- The master is the one that runs a program whether in Auto, Custom or Static Color mode.



- Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master.
- The master should be the first product in the daisy chain.

Color Settings The COLOR setting determines how the COLORado 1 Solo generates the white color based on various RGB settings.

- 1. Go to the **SETTING** main level.
- 2. Enter the master access passcode as described in Passcode.
- 3. Select COLOR.
- 4. Select **OFF**, **RGBW**, or **UC**.

OFF: When all the RGB faders are set to 255, the output is maximum, although

the resulting white color may not be balanced.

**RGBW:** When all the RGB faders are set to 255, the resulting output is defined by

the configured white color (see White Calibration).

UC: When all the RGB faders are set to 255, the output matches that of less

efficient products (Universal Color).



**Dimmer Profiles** This setting determines how fast the output of the COLORado 1 Solo changes when you modify the values of the red, green, blue, white, and dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **SETTING** main level.
- 2. Enter the master access passcode as described in Passcode.
- Select **DIMMER**.
- 4. Select a dimmer curve (OFF, DIM1, DIM2, DIM3, or DIM4).



OFF: The output is proportional (linear) to the dimmer and RGBW channel values.

DIM1-4: The output follows the dimmer and RGBW channel values based on the corresponding dimmer curve, **DIM1** being the fastest and **DIM4** the slowest.



For optimum control of the 16-bit dimming channels in the TR16 and STD.Y personalities, be sure that both dimming curves in SETTING > DIMMER are set to OFF.



When the control panel lock is active, the product will prompt you to enter the passcode after 30 seconds of control panel inactivity or after turning on the product. See Passcode.

Program Upload This option allows you to copy the custom programs of one COLORado 1 Solo onto other COLORado 1 Solo by using the Master/Slave mode.

- 1. Configure and connect the products in a Master/Slave arrangement, where the master has the custom programs you want to transfer to the slaves.
- 2. From the master, go to the **SETTING** main level.
- 3. Enter the master access passcode as shown in Passcode.
- 4. Select UPLOAD.
- 5. Enter the master access passcode as shown in <a href="Passcode">Passcode</a>.
- 6. When **SEND** shows, press **<ENTER>** to start the upload.
- 7. Wait for the upload process to finish (the display will show **END** before continuing or turning the products off.

The master and slaves will provide the status of the process by lighting up as follows:



- Yellow indicates that the upload process is running. Green indicates that the upload process completed successfully.
- Red indicates that the upload process failed due to an error. Recheck all cable connections and restart the process. If the issue persists, contact Chauvet Technical Support.



DO NOT upload the data from a COLORado 1 Solo to a different product. The other product may become inoperative.

Reset This setting allows you to reset the COLORado 1 Solo to the default values, including the

custom programs. 1. Go to the **SETTING** main level.

- 2. Enter the master access passcode as described in Passcode.
- Select RESET.
- 4. Enter the master access passcode as described in Passcode.
- 5. Wait for the reset process to finish.



Whites Setting This setting allows you to select and edit the temperature of the white colors used in channel 6 (Macros) when in the TOUR mode, channel 11 when in the TR16 and STD.Y mode, or channel 5 when in the HSIC mode.

- 1. Go to the CALIB.C main level.
- 2. Enter the master access passcode as described in Passcode.
- Select a white color (WH.01–12).
- 4. Select a color (RED, GREEN, BLUE, or WHITE).
- Select a color value (000–255).
- 6. Repeat for the other colors.

White Calibration This setting allows you to select the white color shown by the COLORado 1 Solo when the color setting is RGBW and the DMX controller's red, green, and blue faders are set to 255.

- 1. Go to the CALIB.C main level.
- 2. Enter the master access passcode as described in Passcode.
- Go to RGBW.
- 4. Select a color (R., G., or B.).
- 5. Select a color value (000-255).
- 6. Repeat for the other colors.



When selecting CALIB.C > RGBW, you will only be able to define the values of R. (red), G. (green), and B. (blue).



The values of R. (red), G. (green), and B. (blue) configured from CALIB.C > RGBW will define the color temperature shown when the RGB faders are set to 255 if SETTING > COLOR > RGBW is active.

### Static Color

The Static Color mode allows for permanent RGBW color mixing without a DMX controller.

- 1. Go to the **STATIC** main level.
- Select the desired color or effect (RED, GREEN, BLUE, WHITE, STROBE, or ZOOM).
- 3. Select the color or effect value (**000–255** for colors, strobe, and effect).
- 4. Repeat for the other colors or effects.

# Temperature are set to 100%.

Color This setting controls the color temperature with preset white output options when all color faders

## Settings 2

- 1. Go to the **SETTING** main level.
- Enter the master access passcode as described in Passcode.
- Select FULL POWER CCT.
- Choose a white output color temperature. (WARM WHITE, NEUTRAL WHITE, COOL WHITE. or NORMAL)

Zoom Mode These settings are to be changed when operating in environmental temperatures lower than 40 °F. The default setting for normal operating temperatures above 40 °F is **ZOOM MODE 1**.

- 1. Go to the **ZOOM MODE** main level.
- 1. Select **ZOOM MODE 1** for use in normal operating temperature environments or **ZOOM MODE 2** environmental temperatures lower than 40 °F.

LED Frequency This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the COLORado 1 Solo.

- 1. Go to the **SETTING** main level.
- 2. Enter the master access passcode as described in Passcode.
- Select PWM.
- 4. Choose an output frequency. (600Hz, 1200Hz, 2000Hz, 2400Hz, 6000Hz, or 25000Hz) **Software** This option shows what version of software the COLORado 1 Solo is running.

1. Go to the **INFO** main level. Information 2. Select VERSION and the version number will show on the screen.

### **RDM** This option shows the product's **UID** # and the product name.

- 1. Go to the **RDM** main level.
- 2. Select **UID** and the version number will show on the screen. 3. Select **LABEL** and the product name will show on the screen.



### Configuration (DMX)

Use DMX configurations to operate the product with a DMX controller.

**DMX** This setting allows you to choose a particular DMX personality.

- Personalities 1. Go to the PERSONALITY main level.
  - 2. Select the desired personality (TOUR, TR16, STD.Y, HSIC, or SSP).



- See the DMX Values section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

DMX Control In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in <a href="DMX Personalities">DMX Personalities</a>.
- 2. Set the running mode:
  - a. Go to the **RUN MODE** main level.
  - b. Select the **DMX** programming level.
- 3. Set the starting address:
  - a. Go to **ADDRESS** main level.
  - b. Select the starting address (001–512).

### The highest recommended starting address for each DMX mode is as follows:



DMX Personality	DMX Address	DMX Personality	DMX Address	DMX Personality	DMX Address
TOUR	501	TR16	496	STD.Y	496
HSIC	504	SSP	504		

Loss Of Signal This setting controls how the product will respond when the DMX signal is lost.

### Setting 1. Go to the SETTING main level.

- 2. Enter the master access passcode as described in Passcode.
- Select DMX ERROR.
  - a. Select SAVE to make the product use the last command used when the signal is lost.
  - b. Select **BLACK** to turn off the all the LEDs when the signal is lost.



### **TOUR Notes**

These notes clarify the way the **TOUR** DMX personality works.

### Master Dimmer ·

- · Channel 1 controls the intensity of the currently projected color.
- When the slider is at the highest position (100%), the intensity of the output is at maximum.

# Red, Green, Blue, and White Color Selection

- Channels 2 through 5 control the intensity ratio of each of the red, green, blue, and white LEDs.
  - When these channels are at the highest position (100%), the intensity of each color is at maximum if **SETTING > COLOR** is **OFF**.
- You can combine channels 2 through 5 to create over one trillion colors.

### Color Macros ·

- Channel 6 selects the required color macro.
- Channel 6 has priority over channels 2 through 6.
- Channel 1 controls the intensity of the color macro.

### Strobe ·

- Channel 7 controls the strobe frequency (not the intensity) of channels 2 through 6.
- Channel 7 can strobe channels 2 through 5 when not running macros, allowing the individual faders (**R**, **G**, **B**, and **W**), as well as channel 1 (**D**), to control the output intensity.
- Channel 7 can strobe channel 6 when running macros, allowing channel 6 to select the macro and channel 1 to control the output intensity.

### Auto/Custom ·

- Channel 8 selects the preset auto programs **AUTO01–10** or the custom programs **PROGRAM1-10**.
- When activating the custom auto programs PROGRAM1-10, you can control the step time and fade time using channels 2 and 3, respectively.
- Channel 8 has priority over channels 2 through 7.
- Channel 9 controls the speed at which each auto program plays.

### Zoom ·

- Channel 10 controls Zoom adjustment. This provides options to adjust the beam angle from 8 to 55 degrees.
- Channel 11 resets the zoom lens to the home position.

### Dimmer Speed ·

- Channel 12 selects the Dimmer mode and speed. Dimmer mode provides four different options to simulate the dimming curve of an incandescent lighting product.
- When dimmer is set to OFF, the changes in the RGBW and master dimmer faders are linear.
- When dimmer is set to DIM1-DIM4, DIM1 is the fastest dimmer curve and DIM4 is the slowest.



### **DMX Values**

STD.Y

Y	Channel	Function	Value	Percent/Setting
-	1	Dimmer	000෮ 255	0–100%
_	2	Dimmer Fine	000ර 255	Fine control (16-bit) ( <b>Step Duration</b> if <b>Custom 1–10</b> in <b>CH. 13</b> is active)
_	3	Red	0006 255	0–100% (Fade Duration if Custom 1–10 in CH. 13 is active)
	4	Red Fine	000ó 255	Fine control (16-bit)
_	5	Green	000ó 255	0–100%
_	6	Green Fine	000ó 255	Fine control (16-bit)
_	7	Blue	000ó 255	0–100%
	8	Blue Fine	000ó 255	Fine control (16-bit)
	9	White	000ó 255	0–100%
	10	White Fine	000෮ 255	Fine control (16-bit)
	11	White Fine  Color Macro	1116 130 1316 150 1516 170 1716 200 2016 205 2066 210 2116 225 2166 220 2216 225 2266 230 2316 235 2366 240	No function R: 100% G: 0-100% B: 0 R: 100%-0 G: 100% B: 0 R: 0 G: 100%-0 B: 100% R: 0 G: 100%-0 B: 100% R: 0-100% G: 0 B: 100%-0 R: 100% G: 0 B: 100%-0 R: 100% G: 0-100% B: 0-100% R: 100%-0 G: 100%-0 B: 100% R: 100% G: 100% B: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 10
_	12	Strobe Effect		No function 0–25 Hz No function Lightning Strobe No function Random Strobe



values	(Cont.)			
	Channel	Function	Value	Percent/Setting
(Cont.)				No function
			041ó 050	Auto 1
			051ó 060	Auto 2
			061ó 070	Auto 3
			071ó 080	
			0816 090	
			0916 100	
			1016 110	
			1116 120	
			1216 130	
	13	Programs	1316 140	
			141ó 150	
			151ó 160	
			1616 170	
			1716 180	
			181 ó 190	
			1916 200 2016 210	
			2010 210 211ó 220	
			221ó 230	
				Custom 10
	4.4	Auta Chand		
	14	Auto Speed		0–100% (Only when using <b>Auto 1–10</b> )
	15	Zoom	000ó 255	
				No function
	16	Zoom Control		Zoom reset
				No function
				Preset dimmer speed from display menu
				Linear dimmer
	17	Dimmer Speed		Nonlinear dimming curve 1 (fastest)
	••	Ziiiiiioi Opood		Nonlinear dimming curve 2
				Nonlinear dimming curve 3
			1906 255	Nonlinear dimming curve 4 (slowest)



TR16 Channel

_				D (10 (1)				
Ch	annel	Function	Value	Percent/Setting				
	1	Dimmer	000ó 255					
	2	Dimmer Fine	0006 255	Fine control (16-bit) ( <b>Step Duration</b> if <b>Custom</b> in <b>CH. 13</b> is active)			Sustom 1–10	
	3	Red	0006 255	0–100% (Fade Duration if Custom 1–10 in CH. 13 is act			13 is active)	
	4	Red Fine	000ó 255	Fine control (1	6-bit)			
	5	Green	000ó 255	0–100%				
	6	Green Fine	000෮ 255	Fine control (1	6-bit)			
	7	Blue	000෮ 255	0–100%				
	8	Blue Fine	000෮ 255	Fine control (1	6-bit)			
	9	White	000෮ 255	0–100%				
	10	White Fine	000෮ 255	Fine control (1	6-bit)			
	11	Color Macro	0516 070 0716 090 0916 110 1116 130 1316 150 1516 170 1716 200 2016 205 2066 210 2116 225 2266 230 2316 235 2366 240 2416 245 2466 250	R: 100%-0 R: 0 R: 0 R: 0-100% R: 100% R: 100% R: 100%-0 R: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8	G: 0-100% G: 100% G: 100%-0 G: 100%-0 G: 0 G: 0 G: 0-100% G: 100%-0 G: 100%	B: 100% B: 100%-0	W: 100%	
	12	Strobe Effect	0006 009 0106 099 1006 109 1106 179 1806 189	No function 0–25 Hz No function Lightning Strol No function Random Strob				



aiues	(00111.)			
	Channel	Function	Value	Percent/Setting
(Cont.)			000෮ 040	No function
			0416 050	
			0516 060	Auto 2
			0616 070	Auto 3
			071ó 080	
			0816 090	
			0916100	
			1016 110	
			1116 120	
	40		1216 130	
	13	Programs	1316 140	
			1416 150	
			1516 160	
			161 ó 170 171 ó 180	
			181ó 190	
			1916 200	
			2016 210	
			2116 220	
			2216 230	
. <u>-</u>			2316 255	Custom 10
. <u>-</u>	14	Auto Speed	0006 255	0–100% (Only when using <b>Auto 1–10</b> )
. <del>-</del>	15	Zoom	000ó 255	0–100%
				No function
	16	Zoom Control		Zoom reset
·-			2216 255	No function
				Preset dimmer speed from display menu
				Linear dimmer
	17	Dimmer Speed		Nonlinear dimming curve 1 (fastest)
	••	Ziiiiiioi Opoou		Nonlinear dimming curve 2
				Nonlinear dimming curve 3
			1906 255	Nonlinear dimming curve 4 (slowest)



# DMX Values (Cont.) TOUR Channel

Channel	Function	Value	Percent/Setting				
1	Dimmer	000෮ 255	0–100%				
2	Red	0006 255	Fine control (16-bit) (Step Duration if Custom 1–10 in CH. 8 is active)				
3	Green	0006 255	0–100% (Fade Duration if Custom 1–10 in CH. 8 is active)				
4	Blue	000ó 255	0–100%				
5	White	000ó 255	0–100%				
6	Color Macro	011 ó 030 031 ó 050 051 ó 070 071 ó 090 091 ó 110 111 ó 130 131 ó 150 151 ó 170 171 ó 200 201 ó 205 206 ó 210 211 ó 215 216 ó 220 221 ó 225 226 ó 230 231 ó 235 236 ó 240 241 ó 245 246 ó 250 251 ó 255	R: 100%-0 G: 100%-0 B: 100% R: 100% G: 100% B: 100% W: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11				
7	Strobe Effect	0006 009 0106 099 1006 109 1106 179 1806 189 1906 255	No function 0–25 Hz No function Lightning Strobe No function Random Strobe				



v aiuc3	(COIIL.)			
	Channel	Function	Value	Percent/Setting
(Cont.)			000෮ 040	No function
			041ó 050	
			051ó 060	Auto 2
			061ó 070	Auto 3
			071ó 080	
			0816 090	
			0916 100	
			1016 110	
			1116 120	
	•	D	1216 130	
	8	Programs	1316 140	
			141 ó 150 151 ó 160	
			161ó 170	
			1716 170	
			181ó 190	
			1916 200	
			2016 210	
			211ó 220	Custom 8
			221ó 230	Custom 9
_			2316 255	Custom 10
<u>-</u>	9	Auto Speed	000ó 255	0–100% (Only when using <b>Auto 1–10</b> )
<u>-</u>	10	Zoom	000ó 255	0–100%
			000ó 200	No function
	11	Zoom Control		Zoom reset
<u>-</u>			221ó 255	No function
				Preset dimmer speed from display menu
				Linear dimmer
	12	Dimmer Speed		Nonlinear dimming curve 1 (fastest)
		Ziiiiiioi Opoou		Nonlinear dimming curve 2
				Nonlinear dimming curve 3
			1906 255	Nonlinear dimming curve 4 (slowest)



SSP

(00::::)			
Channel	Function	Value	Percent/Setting
1	Dimmer	000ó 255	0–100%
2	Red	000ó 255	0–100%
3	Green	000ó 255	0–100%
4	Blue	000ó 255	0–100%
5	White	000ó 255	0–100%
6	Strobe Effect	010ó 099 100ó 109 110ó 179 180ó 189	No function 0–25 Hz No function Lightning Strobe No function Random Strobe
7	Zoom	000ó 255	0–100%
8	Zoom Control	2016 220	No function Zoom reset No function
9	Dimmer Speed	0106 029 0306 069 0706 129 1306 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)



# DMX Values (Cont.) HSIC Channel

Channel	Function	Value	Percent/Setting
1	Dimmer	000෮ 255	0–100%
2	Hue	000෮ 255	0–100%
3	Hue Fine	000ó 255	0–100%
4	Saturation	000ó 255	0–100%
5	Color Macro	0116 030 0316 050 0516 070 0716 090 0916 110 1116 130 1316 150 1516 170 1716 200 2016 205 2066 210 2116 225 2266 230 2316 235 2366 240 2416 245 2466 250	No function R: 100% G: 0-100% B: 0 R: 100%-0 G: 100% B: 0 R: 0 G: 100% B: 0-100% R: 0 G: 100%-0 B: 100% R: 0-100% G: 0 B: 100%-0 R: 100% G: 0 B: 100%-0 R: 100% G: 0 B: 100%-0 R: 100%-0 G: 100%-0 B: 100% R: 100%-0 G: 100%-0 B: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
6	Strobe Effect	0106 099 1006 109 1106 179 1806 189 1906 255	No function 0–25 Hz No function Lightning Strobe No function Random Strobe
7	Zoom		0–100%
8	Zoom Control	2016 220	No function Zoom reset No function
9	Dimmer Speed	0106 029 0306 069 0706 129 1306 189	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 Nonlinear dimming curve 4 (slowest)



### 5. Technical Information

# Product Maintenance

**Product** To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

As a rule, clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- 6. Wipe any dirt or grime to the outside edges of the lens surface.
- 7. Gently polish the lens surfaces until they are free of haze and lint.




Always dry the external surfaces thoroughly and carefully after cleaning them.



# 6. Technical Specifications

imancians and		147 L.1		<b>187</b> * 17		
imensions and Weight	Length	Width	Height	Weight		
	,	6.93 in (176 mm)	9.53 in (242 mm	, , , , , , , , , , , , , , , , , , , ,		
_	Note: Dimensions in inches rounded to the nearest decimal digit.					
Power	Power Supply Type	Ran	ge	Voltage Selection		
	Switching (internal)	100–240 VA	C, 50/60 Hz	Auto-ranging		
	Parameter	120 VAC	, 60 Hz	230 VAC, 50 Hz		
	Consumption	65 '	W	65 W		
	Current	0.54	8 A	0.297 A		
	Power linking current (products)	13.6 A (24	products)	8 A (45 products)		
	Power I/O	U.S./Ca	nada	Worldwide		
	Power input connector	Seetronic Pov	verkon IP65	Seetronic Powerkon IP65		
	Power output connector	r Seetronic Pov	verkon IP65	Seetronic Powerkon IP65		
	Power cord plug	Edison	(U.S.)	Local plug		
Light Source	Туре	Pow	ver	Lifespan		
	• •					
	LED	60	W	50,000 hours		
	LED Color	60 <b>\ Qua</b> r		50,000 hours  Current		
Photometrics	Color	Quar	itity	Current		
Photometrics	<b>Color</b> quad-color RGBW	Quar 1	zoom	Current 4 A		
Photometrics	Color quad-color RGBW Parameter	Quar 1 Narrow	Zoom	Current 4 A Wide Zoom		
	Color quad-color RGBW Parameter Illuminance @ 5 m	<b>Quar</b> 1 <b>Narrow</b> 5,370	Zoom	Current 4 A Wide Zoom 97 lux		
Photometrics Thermal	Color quad-color RGBW Parameter Illuminance @ 5 m Beam angle	Quar 1 <b>Narrow</b> 5,370 4°	Zoom lux	Current 4 A Wide Zoom 97 lux 40°		
Thermal	Color quad-color RGBW Parameter Illuminance @ 5 m Beam angle Field angle	Quar 1 <b>Narrow</b> 5,370 4°	Zoom lux System	Current 4 A Wide Zoom 97 lux 40°		
	Color quad-color RGBW  Parameter Illuminance @ 5 m Beam angle Field angle  Max. External Temperate	Quar 1 Narrow 5,370 4° 8° ure Cooling	Zoom lux System ction	Current 4 A Wide Zoom 97 lux 40°		
Thermal	Color quad-color RGBW  Parameter Illuminance @ 5 m Beam angle Field angle  Max. External Temperate  113 °F (45 °C)	Quar 1 Narrow 5,370 4 8 ure Cooling Connecte	Zoom I lux System ction or Type	Current  4 A  Wide Zoom  97 lux  40°  55°		
Thermal	Color quad-color RGBW  Parameter Illuminance @ 5 m Beam angle Field angle  Max. External Temperatu  113 °F (45 °C) I/O Connectors	Quar 1 Narrow 5,370 4 8 ure Cooling Connecte	Zoom lux System ction or Type ets	Current 4 A Wide Zoom 97 lux 40° 55°  Channel Range		

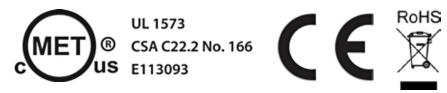







### Returns

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- · Your address
- · Your phone number
- · The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing is recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



# Contact Us

**USA WORLD HEADQUARTERS** 

**General Information** – Chauvet

Address: 5200 NW 108th Avenue Voice: (954) 577-4455 (Press 4)

Sunrise, FL 33351 Fax: (954) 756-8015

Voice: (954) 577-4455 Email: tech@chauvetlighting.com

Fax: (954) 929-5560

Toll free: (800) 762-1084 World Wide Web www.chauvetlighting.com

**Technical Support** 

Email: uktech@chauvetlighting.com

World Wide Web www.chauvetlighting.co.uk

**EUROPE** 

**General Information** - Chauvet Europe BVBA **Technical Support** 

Address: Stokstraat 18 Email: Eutech@chauvetlighting.eu

9770 Kruishoutem

Belgium World Wide Web www.chauvetlighting.eu

Voice: +32 9 388 93 97

General Information - Chauvet Europe Ltd. Technical Support

Address: Unit 1C

Brookhill Road Industrial Estate

Pinxton, Nottingham, UK

NG16 6NT

Voice: +44 (0)1773 511115 Fax: +44 (0)1773 511110

**General Information** - Chauvet Mexico

MEXICO

Zona Industrial Lerma

Lerma, Edo. de México, CP 52000 World Wide Web www.chauvet.com.mx

**Technical Support** 

Voice: +52 (728) 285-5000

Outside the U.S., United Kingdom, Ireland, Mexico, or Benelux contact the dealer of record. Follow their instructions to request support or to return a product. Visit our website for contact details.