
OVATION E-910FC

User Manual





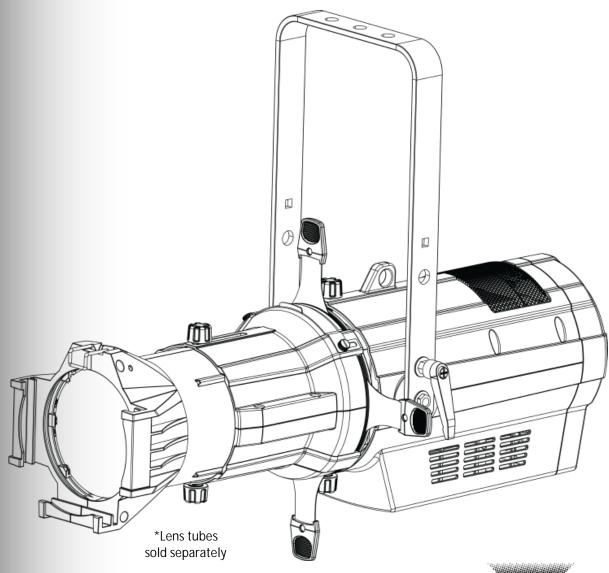

Edition The Ovation E-910FC User Manual Rev. 9 includes a description, safety precautions, and installation, programming, operation, and maintenance instructions for the Ovation E-910FC as **Notes** of the release date of this edition in May 2017.

Trademarks CHAUVET, the Chauvet logo and Ovation E-910FC are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

Copyright Notice The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

© Copyright 2017 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

Manual Use Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

Document For better results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If **Printing** using A4 paper (210 x 297 mm), configure your printer to scale the content accordingly.

Intended Any person in charge of installing, operating, and/or maintaining this product should completely Audience read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

Disclaimer Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions..

Revision

Document The Ovation E-910FC User Manual Rev. 9 supersedes all previous versions of this manual. Discard any older versions of this manual and replace with this version. Go to www.chauvetprofessional.com for the latest version.



Table of Contents

1. Before You Begin	
What Is Included	1
Claims	
Manual Conventions	
Symbols	
Safety Notes	
Personal Safety	
Mounting And Rigging	
Power And Wiring	
Operation	
Expected LED Lifespan	
2. Introduction	
Description	3
Features	
Overview	
Dimensions	5
3. Setup	6
AC Power	
AC Plug	
Power Linking	
Fuse Replacement	
DMX Linking	
DMX Personalities	
Remote Device Management (RDM)	7
Master/Slave Connectivity	7
Mounting	8
Orientation	8
Rigging	
Procedure	
Manual Beam Focus Control	
Rotating the Barrel Assembly	
Accessory Slot	
4. Operation	
Control Panel Description	
Control Options	
Programming	
Menu Map	
Configuration (Standalone)	
Auto Programs	
Master/Slave	
Color Temperature	
Manual Color Mixer	
Focus Mode	
Dimmer Profiles	
White Calibration	14
LED Frequency	14
Fan Mode	14
Back Light	
Run Time	
Software Information	
RDM	
Configuration (DMX)	
DMX Personalities	_
DMX Control DMX Values	
15Ch	_
13Ch	_
13Ch	_
10Ch	
7Ch	

Table of Contents



5Ch	
3Ch	17
Virtual Color Wheel	18
Color Chart	18
Preset Color Temperature Chart	19
5. Technical Information	
Product Maintenance	20
Cleaning the Light Engine Lens	
6. Technical Specifications	21
Photometrics Chart	22
Photometrics Chart	23
Photometrics Chart	
Photometrics Chart	25
Photometrics Chart	26
Photometrics Chart	27
Photometrics Chart	28
Returns	
Contact Us	30



1. Before You Begin

What Is · Included

Ovation E-910FC

Neutrik powerCON power cord

Warranty Card

Quick Reference Guide

Claims Carefully unpack the product immediately and check the box to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

Manual Conventions

Convention	Meaning
1–512	A range of values in the text
50/60	A set of mutually exclusive values in the text
<set></set>	A button on the product's control panel
Settings	A product function or a menu option
	1

Symbols

Symbols	Meaning
<u> </u>	Critical installation, configuration, or operation information. Failure to comply with this information may cause the product not to work, damage third-party equipment, or cause harm to the operator.
\mathbf{i}	Important installation or configuration information. Failure to comply with this information may keep the product from working.
	Useful information.




The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



Safety Notes

<u>^</u>

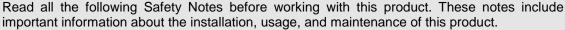

This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained Chauvet certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- · Always disconnect this product from its power source before servicing.
- · Always connect this product to a grounded circuit to avoid the risk of electrocution.
- Do not touch this product's housing during operation because it may be very hot.

Mounting And Rigging

- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture. (IP20)
- CAUTION: When transferring product from extreme temperature environments, (e.g. cold truck to warm humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.
- Make sure there are no flammable materials close to this product while it is operating.
- When hanging this product, always secure to a fastening device using a safety cable.

Power And Wiring

- Always make sure you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.
- Never connect this product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

Operation

- Do not operate this product if you see damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate this product at a higher temperature.
- In case of a serious operating problem, stop using this product immediately!



If your Chauvet product requires service, contact Chauvet Technical Support.

Expected LED Lifespan

LEDs gradually decline in brightness over time, mostly because of heat. Packaged in clusters, LEDs exhibit higher operating temperatures than in ideal, single-LED conditions. For this reason, using clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan can be 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product and reducing the ambient temperature to an optimal operating range. In addition, limiting the overall projection intensity may also help to extend the LEDs' lifespan.



2. Introduction

Description The Ovation E-910FC is a high-power full color LED (RGBAL) ERS-style product. It features full RGBA-Lime color mixing with modes providing full 16-bit dimming (per color and master), selectable PWM, RDM, and on-board dimming curve selection. The Virtual Color Wheel matches popular gel colors comparable to those projected by a tungsten source. Additionally we have added color temperature presets from 2800 to 6500 K that match a tungsten source to perfection.


Features ·

3, 5, 7, 10, 12, 13 or 15-channel Full Color LED (RGBAL) ERS-style product

- Operating modes:
 - 3-channel: Dimmer, virtual color wheel, color temperature
 - 3-channel: Hue, saturation, and value control
 - 3-channel: Dimmer, virtual color wheel, color temperature
 - 5-channel: RGBAL control
 - 7-channel: RGBAL control, dimmer, strobe
 - 10-channel: RGBAL control, 16-bit dimmer, strobe, virtual color wheel, color temperature
 - 12-channel: RGBAL control, dimmer, strobe, virtual color wheel, color temperature. auto programs, auto speed, dimmer mode
 - 13-channel: 16-bit RGBAL and dimmer, strobe
 - 15-channel: 16-bit RGBAL and dimmer, strobe, virtual color wheel, color temperature
- Built-in auto and custom programs recalled via DMX and Master/Slave
- Full Color LED (RGBAL) ERS-style lighting product for theatre, film and production
- Ultra smooth 16-bit dimming of master dimmer and individual colors
- Flat, even field of light with superior color mixing
- Virtual Color Wheel with color matched to popular Gel colors
- Color Temperature Presets from 2800 K to 6500 K with high CRI & CQS
- RDM (Remote Device Management) for added flexibility
- Adjustable PWM (Pulse Width Modulation) to avoid flickering on camera
- Virtually silent operation for use in studio and theatre applications
- Works perfectly with industry standard lens tubes and accessories





Overview

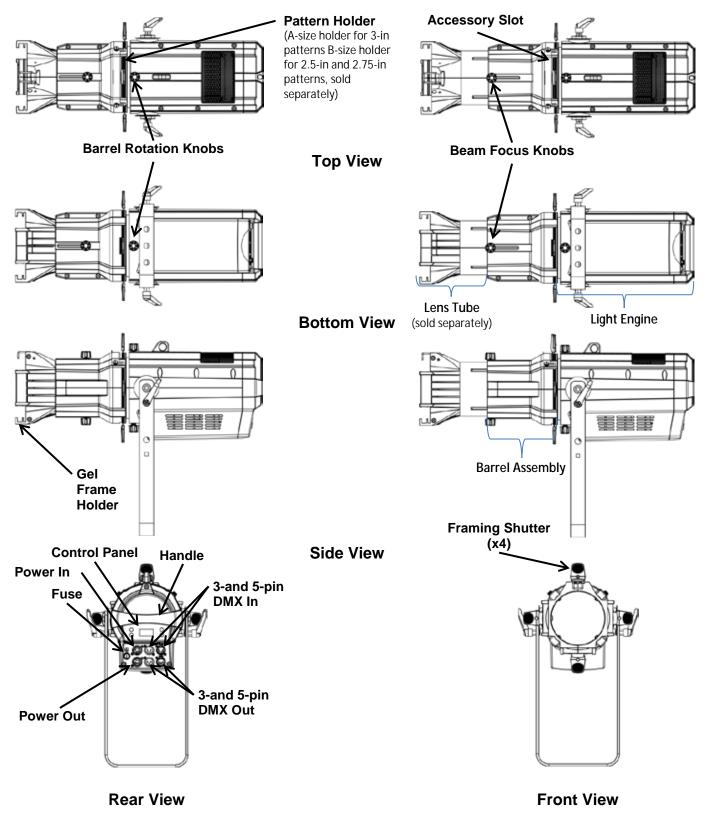






Dimensions

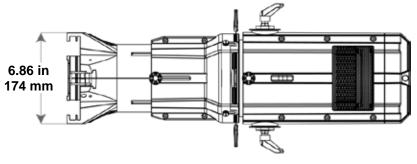


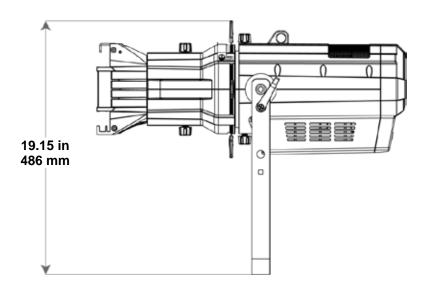

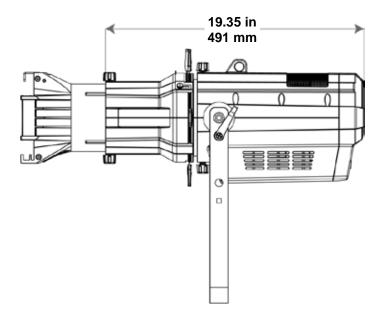

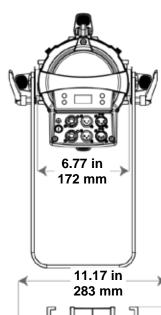

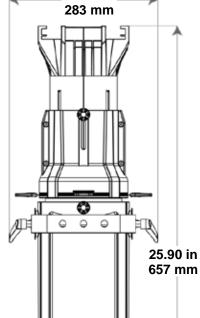

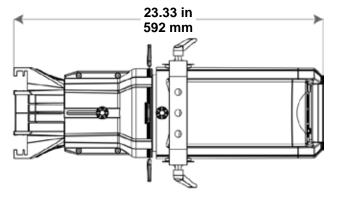



3. Setup

AC Power

Each Ovation E-910FC has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Ovation E-910FC, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual.

The listed current rating indicates the maximum current draw during normal operation. For more information, you may download Sizing Circuit Breakers from the Chauvet website: www.chauvetprofessional.com.



- Always connect this product to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.
- To eliminate unnecessary wear and improve its lifespan, during periods of non-use completely disconnect the product from power via breaker or by unplugging it.



Never connect this product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

The Ovation E-910FC comes with a power input cord terminated with a Neutrik powerCON A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need to change the Edison plug, use the table below to wire the new plug.

Connection	Connection Wire (U.S.)		onnection Wire (U.S.) Wire (Europe)		Screw Color
AC Live	Black	Brown	Yellow or Brass		
AC Neutral	White	Blue	Silver		
AC Ground	Green/Yellow	Green/Yellow	Green		

Power Linking The Ovation E-910FC supports power linking. You can power link up to 6 products at 120 V; up to 11 at 208 V; or up to 12 at 230 V.

> This product comes with a power input cord. Power linking cables are available from Chauvet for purchase.

Replacement

- **Fuse** 1. Disconnect this product from the power outlet.
 - 2. Using a Phillips-head screwdriver, unscrew the fuse holder cap from the housing.
 - 3. Remove the blown fuse and replace with another fuse of the same type and rating (T 3.15 A, 250 V).
 - 4. Screw the fuse holder cap back in place and reconnect power.



Make sure to disconnect the product's power cord before replacing a blown fuse. Always replace the blown fuse with another of the same type and rating.



DMX Linking

You can link the Ovation E-910FC to a DMX controller using a 3- or 5-pin DMX connection. If using other DMX-compatible products with the Ovation E-910FC, you can control each individually with a single DMX controller.

DMX The Ovation E-910FC uses a 3- or 5-pin DMX data connection for the 3, HSV, 5, 7, 10, 12, 13. Personalities and 15-channel DMX personalities.

- Refer to the Introduction chapter for a brief description of each DMX personality.
- Refer to the Operation chapter to learn how to configure the Ovation E-910FC to work in these personalities.
- The DMX Values section provides you with detailed information regarding the DMX personalities.



- If you are not familiar with or need more information about DMX standards, Master/Slave connectivity, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.
- For optimum control of the 16-bit dimming channels in the 10Ch, 13Ch, and 15Ch personalities, be sure that the dimming curves in Dimmer Mode are set to Off.

(RDM)

Remote Device Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Management Manual or with the manufacturer as not all DMX controllers have this capability. The Ovation E-910FC supports RDM protocol that allows feedback to make changes to menu map options.

Master/Slave Connectivity

The Master/Slave mode allows an Ovation E-910FC (the master) to control one or more Ovation E-910FC products (the slaves) without a DMX controller. One Ovation E-910FC becomes the master when running an auto or custom program, or by being in a Static mode. You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The Operation section of this manual provides detailed instructions on how to configure the master and slaves.
- If you are not familiar with or need more information about DMX standards, or the DMX cables needed to link this product to a DMX controller, download the DMX Primer from the Chauvet website: www.chauvetprofessional.com.

Ovation E-910FC User Manual Rev. 9



Mounting


Before mounting this product, read and follow the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to http://trusst.com/products/.

Orientation Always mount this product in a safe position and make sure there is adequate room for ventilation, configuration, and maintenance.

Rigging Chauvet recommends using the following general guidelines when mounting this product.

- When selecting an installation location, consider easy access to this product for operation, programming adjustments, and routine maintenance.
- Make sure to mount this product away from any flammable material as indicated in the Safety Notes.
- Never mount in places where rain, high humidity, extreme temperature changes, or restricted ventilation may affect the product.
- If hanging this product, make sure that the mounting location can support the product's weight. See the **Technical Specifications** for the weight-bearing requirements of this product.
- When hanging this product, always secure to a fastening device using a safety cable. For our CHAUVET Professional line of safety cables, go to http://trusst.com/products/.

Procedure The Ovation E-910FC comes with a hanging/mounting bracket to which you can attach mounting clamps. The bracket has 13-mm holes, which are appropriate for this purpose. You must supply your own mounting clamps, so be sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product where necessary.

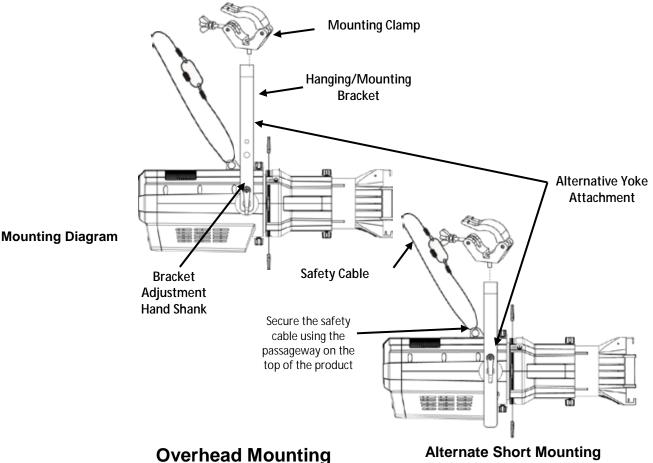




Manual Beam Focus The Ovation E-910FC has a manual focus, which is adjusted as follows.

- Control 1. Locate the beam focus knobs at the top and bottom of the barrel assembly. Loosen the knobs by turning them counter-clockwise.

 - 3. Slide the lens tube forward or backward until you achieve the desired focus or beam
 - 4. Tighten the knobs by turning them clockwise, which lock the lens tube's position.

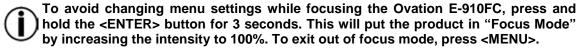

Rotating the Barrel The Ovation E-910FC allows manual rotation of the barrel assembly, as follows. Assembly 1. Locate the barrel rotation knobs at the top and bottom of the light engine.


Loosen the knobs by turning them counter all the counter and bottom.

- - Note: Do not remove the knobs.
- 3. Rotate the barrel to the desired position, up to 25° in either direction from the centered position.
- 4. Tighten the knobs by turning them clockwise, which lock the barrel's position.



Accessory Slot The Ovation E-910FC has an accessory slot, which holds a drop-in iris, a motorized pattern device, or various other optional accessories (sold separately).

- 1. Loosen the thumbscrews on the slot cover.
 - **Note:** Do not remove the thumbscrews.
- Slide to cover forward.
- 3. Insert an accessory.
 - Note: Make sure to insert the accessory correctly. For example, make sure the iris handle extends upward from the slot.
- 4. Slide the cover back. Make sure any handles or adjustment tools that stick out the top are able to function correctly.
- 5. Tighten the thumbscrews to secure the cover.

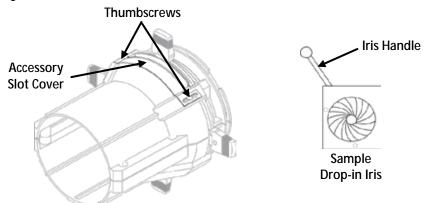



- When not using the accessory slot, replace and secure the slot cover to prevent light leakage during operation.
- When obtaining any optional accessories, be sure the items are compatible with the Ovation E-910FC.



4. Operation

Control Panel Description

Button	Function			
<menu></menu>	Exits from the current menu or function			
<enter></enter>	Enables the currently displayed menu or sets the currently selected value in to the current function			
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function			
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function			

Control Options Set the Ovation E-910FC starting address in the 001-512 DMX range. This enables control of up to 34 products in the 15-channel 15Ch personality.

Programming

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press < MENU> repeatedly until the option shows on the display. Press <ENTER> to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option shows on the display. Press <ENTER> to select. In this case, if there is another programming level, you will either see that first option, or you will see the selected value.
- Press **<MENU>** repeatedly to exit to the previous main level.

Menu Map

Main Level		Programming	Description		
DMX Address	<001–512>				Selects DMX address (highest channel restricted to personality chosen)
		3Ch	3-channel: dimmer, virtual color wheel, color temperature		
		HSV			3-channel: HSV control
		5Ch			5-channel: RGBAL control
	7Ch			7-channel: RGBAL control, dimmer, strobe	
DMX	10Ch				10-channel: RGBAL control, 16-bit dimmer, strobe, virtual color wheel, color temperature
Channel		12Ch	12-channel: RGBAL control, dimmer, strobe, virtual color wheel, color temperature, auto programs, auto speed, dimmer mode		
		13Ch	13-channel: 16-bit RGBAL and dimmer, strobe		
	15Ch				15-channel: 16-bit RGBAL and dimmer, strobe, virtual color wheel, color temperature
Virtual Color Wheel	Virtual Color Wheel	C3050 - Md Yellow C3040 - Lt Yellow C3240 - Amb Yellow C2340 - VLt Amber	Dimmer	<000-255>	Virtual Color Wheel simulates the output of each gel color from . Refer to the Virtual Color Wheel Chart section for specific values.



Main Level		Programmin	g Levels		Description
Virtual Color Wheel (cont.)	Virtual Color Wheel (cont.)	C2040 - Lt Amber C2050 - Md Amber C2060 - Dk Amber C1050 - Lt Red C1080 - Md Red C1020 - NC Pink C1030 - Md Pink C1030 - Dk Pink C1630 - Dk Pink C1630 - Dk Red Amber C1060 - Dk Red Amber C1060 - Dk Magenta C6170 - Dk Magenta C6170 - Dk Magenta C6020 - Lt Lavender C5030 - Lt Blue C5030 - Lt Blue C50430 - Lt Blue C50430 - Lt Blue C5060 - Dk Blue C5060 - Dk Blue C5081 - VDk Blue C5081 - VDk Blue C4370 - Yel Green C4070 - Green C4550 - Turquoise C4560 - Aqua	Dimmer	<000-255>	Virtual Color Wheel simulates the output of each gel color from .Refer to the Virtual Color Wheel Chart section for specific values.
	Color Temperature Color Tempera		Dimmer	<000–255>	Preset white color temperatures. Emulates a tungsten lamp at the specified color temperature. Refer to the Preset Color Temperature Chart section for specific values.



Main Level	Programming Levels			s	Description	
Virtual Color Wheel (cont.)	Manual Color Mixer	Gro Bl	ed een lue nber me	<0-255>	Combine red, green, blue, amber, and lime to make a custom color (0–100%)	
Auto Show	Auto 1 Auto 2 Auto Show Auto 3 Auto 4 Auto 5			<1–100>	Selects automatic programs and auto program speed	
Master/Slave		Ма	ster		DMX mode (Master)	
- Waster/Olave		Sla	ave		Slave mode	
		C	Off		No dimmer	
Dimmer Mode		Dimm	Dimmer 1–3		Dimming curves Dimmer 1 (fast) to Dimmer 3 (slow)	
	Off			Uses factory default white setting		
White Balance	nce Manual	R	ed		Sets red LED maximum value	
Wille Dalance		Gr	een	<125–255>	Sets green LED maximum value	
		ВІ	lue		Sets blue LED maximum value	
		600Hz				
	1200Hz					
LED Fraguency	2000Hz			Selects the PWM output frequency		
LED Frequency	4000Hz					
	6000Hz					
	25KHz					
Fan Mode		Αι	uto		Sets the fan to auto mode	
ran wode		C)n		Sets the fan to always on	
		C)n		Display backlight always on	
	10S			Turns off display backlight after 10 sec of inactivity		
Back Light	20\$			Turns off display backlight after 20 sec of inactivity		
	30\$			Turns off display backlight after 30 sec of inactivity		
	Fixture Hou	rs		< H>	Shows total product hours	
Information	Version			<v></v>	Shows installed software version	
	UID:				Shows product UID	



Configuration (Standalone)

Use standalone configuration to operate the product without a DMX controller.

Auto Programs Auto programs allow for dynamic RGBAL color mixing without a DMX controller.


- 1. Go to the **Auto Show** main level.
- 2. Select the desired auto (Auto 1–5)
- 3. Select the desired auto program speed (1–100)



You cannot edit any of the auto programs (Auto 1-5).

Master/Slave The Master/Slave mode allows a group of Ovation E-910FCs (the slaves) to simultaneously duplicate the output of another Ovation E-910FC (the master) without a DMX controller.

- 1. Set each of the slaves:
 - a. Go to the Master/Slave main level.
 - b. Select Slave.
- Set the master:
 - Go to the Master/Slave main level.
 - b. Select Master.





- Do not connect a DMX controller to the products configured for Master/Slave operation. The DMX controller may interfere with signals from the master.
- The master should be the first product in the daisy chain.

Virtual Color The Ovation E-910FC offers over thirty pre-mixed colors based on gel colors. To select a gel Wheel color, do the following.

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Virtual Color Wheel.
- 3. Select the desired color (See the Virtual Color Wheel Chart section).
- 4. Press **<ENTER>** twice.
- 5. Use **<UP>** or **<DOWN>** to select the **Dimmer** value, from **000–255**.
- 6. Press <ENTER>.

See the Virtual Color Wheel Chart section for details on specific values.

Temperature

Color The Color Temperature mode offer preset white color temperatures that emulate a tungsten lamp at the specified color temperature.

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Color Temperature.
- 3. Select the desired color temperature (See the Preset Color Temperature Chart section).
- 4. Press **<ENTER>** twice.
- 5. Use **<UP>** or **<DOWN>** to select the **Dimmer** value, from **000–255**.
- Press <ENTER>.

See the Preset Color Temperature Chart section for details on specific values.

Manual Color The Manual Color Mixer mode allows for permanent RGBAL color mixing without a DMX Mixer controller.

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Manual Color Mixer.
- 3. Select the desired color (Red, Green, Blue, Amber, or Lime).
- Select the color value (000-255).
- Repeat for the other colors.

Focus Mode Focus mode allows for focusing of the Ovation E-910FC without changing any menu settings.

- 1. Press and hold **<ENTER>** for 3 seconds. The intensity will increase to 100%.
- 2. Press **<MENU>** to exit to previous settings.



Dimmer Profiles This setting determines how fast the output of the Ovation E-910FC changes when you modify the values of the red, green, blue, amber, lime, and dimmer faders. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- 1. Go to the **Dimmer Mode** main level.
- 2. Select a dimmer curve (Off, Dimmer 1, Dimmer 2, or Dimmer 3).

The output is proportional (linear) to the dimmer and RGBAL channel values.



Dimmer 1-3: The output follows the dimmer and RGBAL channel values based on the corresponding dimmer curve, Dimmer 1 being the fastest and Dimmer 3 the slowest.



For optimum control of the 16-bit dimming channels in the 10Ch, 13Ch, and 15Ch personalities, be sure that the dimming curves in Dimmer Mode are set to Off.

White Calibration This setting selects the white color shown by the Ovation E-910FC when the DMX controller's red, green, and blue faders are set to 255.

- 1. Go to the White Balance main level.
- 2. Go to Manual to set the color values or Off to set the faders to linear.
- 3. Select a color (Red, Green, or Blue).
- 4. Select a color value (125-255).
- 5. Repeat for the other colors.

LED Frequency

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation E-910FC.

- 6. Go to the **LED Frequency** main level.
- 7. Choose an output frequency. (600Hz, 1200Hz, 2000Hz, 4000Hz, 6000Hz, or 25KHz)

Fan Mode This option toggles the fan speed from being always on and auto control based on the products temperature.

- 1. Go to the **Fan Mode** main level.
- 2. Select a fan mode (Auto, or On).

Back Light This setting allows you to set the amount of time the backlight on the Ovation E-910FC's display stays on after the last button is pressed on the control panel.

- 1. Go to the **BackLite** main level.
- 2. Select **On** (remains on), **10S** (10 seconds), **20S** (20 seconds), or **30S** (seconds).

Run Time This option show how many total hours the product has been on.

- 1. Go to the **Information** main level.
- Select Fixture Hours and the amount of hours will show on the screen.

Information

Software This option shows what version of software the Ovation E-910FC is running.

- 1. Go to the **Information** main level.
- 2. Select **Version** and the version number will show on the screen.

this product.

- RDM This option shows the product's UID #. The UID # is used when using the RDM functionality of
 - 1. Go to the **Information** main level.
 - 2. Select **UID**: and the number will show on the screen.



(DMX)

Configuration Use DMX configurations to operate the product with a DMX controller.

DMX This setting allows you to choose a particular DMX personality.

Personalities

1. Go to the **DMX Channel** main level.

Select the desired personality (3Ch, 5Ch, 7Ch, 10Ch, 12Ch, 13Ch, 15Ch or HSV). See the DMX Values section for the highest starting address you can select for each



Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

DMX Control In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personalities.
- 2. Set the running mode:

personality.

- a. Go to the Master/Slave main level.
- b. Select the Master programming level.
- 3. Set the starting address:
 - a. Go to DMX Address main level.
 - b. Select the starting address (001-512).

The highest recommended starting address for each DMX mode is as follows:



DMX Personality	DMX Address	DMX Personality	DMX Address	DMX Personality	DMX Address
3Ch	510	5Ch	508	7Ch	506
10Ch	503	12Ch	501	13Ch	500
15Ch	498	HSV	510		

DMX Values

15Ch

h Cha	annel	Function	Value	Percent/Setting
	1	Dimmer	000ó 255	0–100%
	2	Dimmer Fine	000ó 255	0–100%
	3	Red	000ó 255	0–100%
	4	Red Fine	000ó 255	0–100%
	5	Green	000ó 255	0–100%
	6	Green Fine	000ó 255	0–100%
	7	Blue	000ó 255	0–100%
	8	Blue Fine	000ó 255	0–100%
	9	Amber	000ó 255	0–100%
	10	Amber Fine	000ó 255	0–100%
	11	Lime	000ó 255	0–100%
	12	Lime Fine	000ó 255	0–100%
	13	Strobe		No function Strobe, slow to fast
	14	Virtual Color Wheel 0000 255		Refer to the <u>Virtual Color Wheel Chart</u> section for specific values.
	15	Color Temperature	0006 255	Refer to the <u>Preset Color Temperature Chart</u> section for specific values.



13Ch

h	Channel	Function	Value	Percent/Setting
	1	Dimmer	000ó 255	0–100%
	2	Dimmer Fine	000ó 255	0–100%
	3	Red	000ó 255	0–100%
	4	Red Fine	000ó 255	0–100%
	5	Green	000ó 255	0–100%
	6	Green Fine	000ó 255	0–100%
	7	Blue	000ó 255	0–100%
	8	Blue Fine	000ó 255	0–100%
	9	Amber	000ó 255	0–100%
	10	Amber Fine	000ó 255	0–100%
	11	Lime	000ó 255	0–100%
	12	Lime Fine	000ó 255	0–100%
	13	Strobe		No function Strobe, slow to fast

12Ch

Chanr	nel Function	Value	Percent/Setting
1	Dimmer	0006 255	0–100%
2	Red	0006 255	0–100%
3	Green	000ó 255	0–100%
4	Blue	000ó 255	0-100%
5	5 Amber		0–100%
6	6 Lime		0-100%
7	Strobe	000ó 010 011ó 255	No function Strobe, slow to fast
8	Virtual Color Wheel	000ó 255	Refer to the <u>Virtual Color Wheel Chart</u> section for specific values.
9	Color Temperature	000ó 255	Refer to the <u>Preset Color Temperature Chart</u> section for specific values.
10	Auto Programs	011ó 060	Auto 2 Auto 3 Auto 4
11	Auto Speed	000ó 255	Slow to fast
12	Dimmer Speed		Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode 1 (fastest) Dimmer speed mode 2 Dimmer speed mode 3 (slowest)



10Ch	Channel	Function	Value	Percent/Setting
-	1	Dimmer	000ó 255	0–100%
-	2	Dimmer Fine	000ó 255	0–100%
-	3	Red	000ó 255	0–100%
-	4	Green	000ó 255	0–100%
-	5	Blue	000ó 255	0-100%
-	6	Amber	000ó 255	0–100%
-	7	Lime	000ó 255	0-100%
_	8	Strobe		No function Strobe, slow to fast
-	9	Virtual Color Wheel	0006 255	Refer to the <u>Virtual Color Wheel Chart</u> section for specific values.
	10	Color Temperature	0006 255	Refer to the <u>Preset Color Temperature Chart</u> section for specific values.
7Ch	Channel	Function	Value	Percent/Setting
<u>-</u>	1	Dimmer	000ó 255	0–100%
<u>-</u>	2	Red	000ó 255	0–100%
_	3	Green	000ó 255	0–100%
_	4	Blue	000෮ 255	0–100%
_	5	Amber	000ó 255	0–100%
-	6	Lime	000ó 255	
	7	Strobe		No function Strobe, slow to fast
5Ch	Channel	Function	Value	Percent/Setting
<u>-</u>	1	Red	000ó 255	0–100%
_	2	Green	000ó 255	0–100%
_	3	Blue	000ó 255	
_	4	Amber	000ó 255	0–100%
	5	Lime	000ó 255	0-100%
3Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000ó 255	0-100%
_	2	Virtual Color Wheel	0006 255	Refer to the <u>Virtual Color Wheel Chart</u> section for specific values.
		Color Temperature	0006 255	Refer to the <u>Preset Color Temperature Chart</u> section for specific values.
HSV	Channel	Function	Value	Percent/Setting
	1	Hue	000ó 255	0-100%
_	2	Saturation	000ó 255	0-100%
	3	Value	000ó 255	0-100%



Virtual Color The Ovation E-910FC includes a feature called the Virtual Color Wheel (VCW). This feature is available as a stand-alone control mode for manual use and also as a control channel in select Wheel DMX personalities. Over 30 pre-mixed colors, custom blended by our engineers, are available to call up for easier programming.

> The DMX values used to mix these colors are provided below. You may adjust the overall intensity of the Ovation fixture in order to more closely replicate colors you are familiar with. A chart is available on our website www.chauvetprofessional.com to compare our pre-mixed colors with popular gel colors. This chart is for comparison purposes only and is not a representation that our pre-mixed colors match any of the gel colors listed.

Color Chart

DMX Channel Value	Display Readout	Red Value	Green Value	Blue Value	Amber Value	Lime Value
0006 005		000	000	000	000	000
006ó 013	C3050 - Md Yellow	233	163	020	123	255
014ó 021	C3040 - Lt Yellow	224	158	047	255	231
022ó 028	C3240 - Amb Yellow	180	060	000	245	255
0296 035	C2340 - VLt Amber	245	107	081	255	213
036ó 043	C2040 - Lt Amber	230	130	062	255	155
044ó 051	C2050 - Md Amber	255	000	025	255	194
0526 059	C2060 - Dk Amber	255	000	024	255	150
060ó 067	C1050 - Lt Red	255	037	027	030	038
068ó 075	C1080 - Md Red	255	004	017	000	000
076ó 083	C1020 - NC Pink	238	135	129	255	255
084ó 091	C1030 - Md Pink	255	131	120	255	195
0926 099	C1630 - Dk Pink	250	165	123	255	210
100ó 107	C1250 - Md Red Amber	255	000	041	195	055
108ó 115	C1060 - Dk Red Amber	255	000	045	120	030
116ó 121	C1650 - Magenta	255	050	115	255	115
122ó 130	C6170 - Dk Magenta	255	035	117	000	000
131ó 138	C6020 - Lt Lavender	127	122	142	251	255
139ó 146	C5030 - Lt Blue	000	255	197	100	255
147ó 154	C5020 - VLt Blue	158	255	189	000	255
155ó 162	C5430 - Lt Blue 2	000	255	180	000	243
163ó 170	C5070 - Blue	043	255	210	043	036
171ó 178	C5050 - Md Blue	000	255	218	000	181
179ó 186	C5060 - Dk Blue	000	210	206	000	118
187ó 194	C5690 - Indigo	065	000	210	040	055
195ó 202	C5080 - VDk Blue	000	203	230	000	040
203ó 210	C5081 - VDk Blue 2	040	199	240	000	045
211ó 218	C4370 - Yel Green	027	255	028	016	104
219ó 226	C4070 - Green	049	255	055	120	090
227ó 234	C4550 - Turquoise	060	230	109	000	245
2356 242	C4560 - Aqua	020	240	126	036	255
243ó 250	C4570 - Blue Green	000	255	079	030	053
251ó 255		000	000	000	000	000



The colors above are simulated renditions of the color output produced as compared to other similar incandescent products. Chauvet makes no guarantee of the color output



Preset Color Temperature Chart

r t	DMX Channel Value	Display Readout	Red Value	Green Value	Blue Value	Amber Value	Lime Value
	000෮ 005		000	000	000	000	000
	006ó 025	2800K	255	199	107	253	255
	026Ó 050	3200K	253	247	129	255	255
	051ó 075	3500K	234	255	141	253	255
	076ó 100	4000K	204	255	156	243	255
	101ó 125	4500K	181	248	166	224	255
	126ó 150	5000K	160	255	180	241	255
	151ó 175	5600K	138	255	191	241	255
	176ó 200	6000K	147	255	193	203	255
	201ó 225	6500K	142	251	197	187	255
	226ó 255		000	000	000	000	000



Note: The color temperatures above are simulated renditions of the color output produced as compared to a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.



5. Technical Information

Product To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Maintenance Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean your product:


- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint-free cotton cloth or a lens cleaning tissue.
- 6. Wipe any dirt or grime to the outside edges of the lens surface.
- 7. Gently polish the lens surfaces until they are free of haze and lint.



Always dry the external surfaces thoroughly and carefully after cleaning them.



Do not spin the cooling fans while blowing compressed air into them.

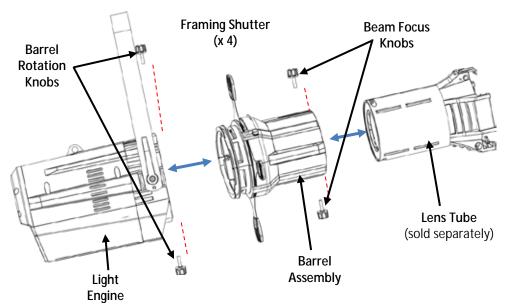

Cleaning the Light The lens inside the light engine may need periodic cleaning. To gain access to this lens, Engine Lens do the following.

1. Separate the

- Separate the light engine from the barrel assembly by unscrewing the barrel rotation
- 2. Clean the lens as described in Product Maintenance.



- Take great care not to damage or scratch the lens assembly, which will now be exposed inside the light engine housing.
- Always close the framing shutters when transporting or storing the product.



To remove the lens tube (sold separately), unscrew the beam focus knobs. Follow any maintenance and cleaning instructions supplied with the lens tube.




6. Technical Specifications

Length Width Height Weight 19.49 in (495 mm) 11.22 in (285 mm) 19.17 in (487 mm) 15.40 in (7.1 kg) Note: Dimensions in inches rounded to the nearest decimal digit.		ioai opoomic	Muli	<i>-</i>								
Note: Dimensions in inches rounded to the nearest decimal digit. Note: Dimensions in inches rounded to the nearest decimal digit.	imensions and	Length		Width			Height			Weight		
Power Supply Type Switching (internal) 100-240 VAC, 50/60 Hz	Weight	19.49 in (495 mm)	11.22	in (285	mm)	19.17	7 in (487	n (487 mm) 15.40 lb (7.1 kg)				
Switching (internal)		Note: Dim	ensions	in inche	es round	ed to the	nearest	decima	al digit.			
Parameter	Power	Power Supply Type			Range			٧	oltage S	Selection	1	
Consumption Current		Switching (internal)		100–240	0 VAC, 5	50/60 Hz		Auto-ranging				
Current Power linking current (groducts) 13.6 A (6 products) 13.6 A (12 products)		Parameter		120	VAC, 6	0 Hz			230 VA	C, 50 Hz		
Power linking current (products) Fuse/Breaker T 3.15 A, 25 U T 3.15 A, 250 V T 3.15 A, 250		Consumption			240 W				234	ł W		
Fuse/Breaker					2.006 A				1.07	74 A		
Power input connector Power input connector Power output connector Power output connector Power cord plug Edison (U.S.) Local plug Edison (U.S.) Local plug Edison (U.S.) Edison (U.S.)				13.6	A (6 prod	ducts)		13	3.6 A (12	product	s)	
Power input connector Power output connector Power output connector Power cord plug Edison (U.S.) Local plug		Fuse/Breaker		T 3	.15 A, 25	50 V			T 3.15 A	A, 250 V		
Power output connector Power cord plug Edison (U.S.) Local plug Local plug		Power I/O		U.	S./Cana	da			World	dwide		
Power cord plug		Power input connector		Neutri	k power(CON A		Ne	eutrik po	werCON	Α	
Type		•	Neutrik powerCON B						•		В	
LED		Power cord plug		Ed	lison (U.		Local	l plug				
Color	Light Source	Туре				•						
Red 18					3 W							
Signature Final Signature		Color			Quantity	y			Cur	rent		
Blue												
Amber Lime Green 18 1.4 1.4												
Photometrics Parameter 14° 19° 26°												
Photometrics Parameter 14° Lens Lens Lens Lens Lens Lens Lens Lens												
Hens	Photomotrics	Lime Green	4.40	400		200	E0°	450			E0°	
Ix Ix Ix Ix Ix Ix Ix Ix	Photometrics	Parameter										
Lumens N/A 3,236 4,316 3,918 3,813 N/A N/B 3,6° 24° 23° 36° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20° 20°		Illuminance @ 5 m										
Beam angle		Lumens										
Field angle												
Temperature 113 °F (45 °C) Fan-Assisted Convection DMX I/O Connectors Connector Type Channel Range 3- and 5-pin XLR Sockets 3, 5, 7, 10, 12, 13 or 15 Ordering Product Name Item Code UPC Number		•	14°	19°	26°	34°	51°	15°	29°	26°	50°	
DMX I/O Connectors Connector Type Channel Range 3- and 5-pin XLR Sockets 3, 5, 7, 10, 12, 13 or 15 Ordering Product Name Item Code UPC Number	Thermal			Cooling	System	1						
3- and 5-pin XLR Sockets 3, 5, 7, 10, 12, 13 or 15 Ordering Product Name Item Code UPC Number		113 °F (45 °C)	Fan-	Assisted	d Conve	ction						
Ordering Product Name Item Code UPC Number	DMX	I/O Connectors		Connec	tor Type	9		Cha	nnel Ra	nge		
Ordering Product Name Item Code UPC Number		3- and 5-pin XLR		Soc	kets			3, 5, 7,	10, 12, 1	3 or 15		
Ovation E-910FC 03121116 781462214647	Ordering	Product Name		Item	Code			UP	C Numb	oer		
		Ovation E-910FC		0312	1116			781	462214	647		







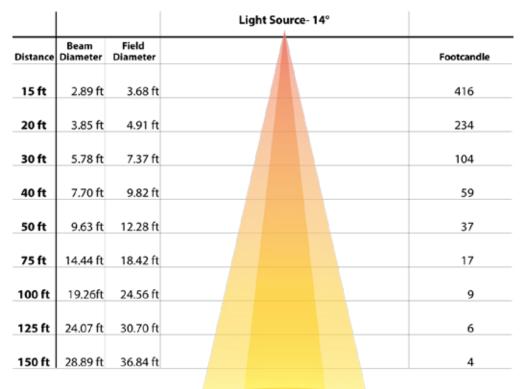




			Light Source	- 14°	
Distance	Beam Diameter	Field Diameter		Lus	ζ.
1 m	0.19 m	0.25 m		93,6	00
2 m	0.39 m	0.49 m		23,4	00
5 m	0.96 m	1.23 m		3,7	44
8 m	1.54 m	1.96 m		1,4	63
10 m	1.93 m	2.46 m		9	36
15 m	2.89 m	3.68 m		4	16
20 m	3.85 m	4.91 m		2	34
25 m	4.81 m	6.14 m		1	50
30 m	5.78 m	7.37 m		1	04

Field

Field



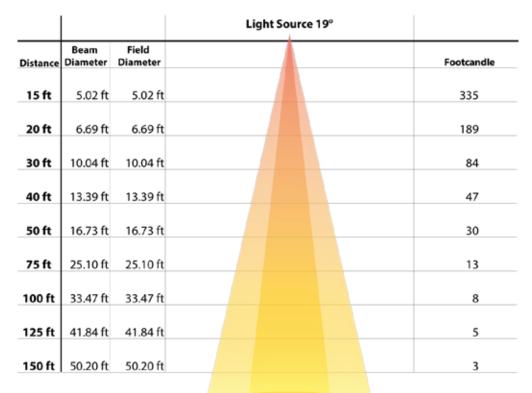




			Light Sour	ce 19°	
Distance	Beam Diameter	Field Diameter			Lux
1 m	0.33 m	0.33 m			75,425
2 m	0.67 m	0.67 m			18,856
5 m	1.67 m	1.67 m			3,017
8 m	2.68 m	2.68 m			1,179
10 m	3.35 m	3.35 m			754
15 m	5.02 m	5.02 m			335
20 m	6.69 m	6.69 m			189
25 m	8.37 m	8.37 m			121
30 m	10.04 m	10.04 m			84

Field

Field



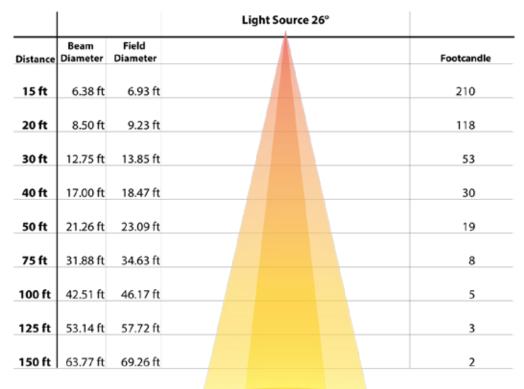




			Light	Source 26°	
Distance	Beam Diameter	Field Diameter			Lux
1 m	0.43 m	0.46 m			47,350
2 m	0.85 m	0.92 m			11,838
5 m	2.13 m	2.31 m			1,894
8 m	3.40 m	3.69 m			740
10 m	4.25 m	4.62 m			474
15 m	6.38 m	6.93 m			210
20 m	8.50 m	9.23 m			118
25 m	10.63 m	11.54 m			76
30 m	12.75 m	13.85 m			53

Field

Field



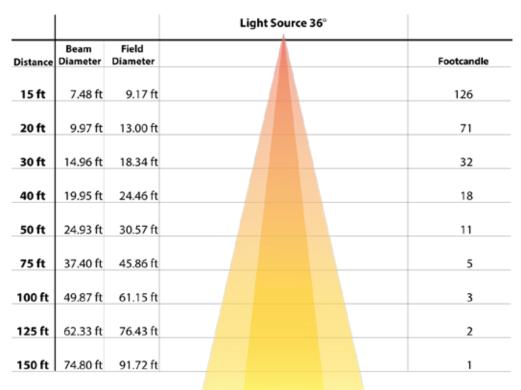




			Light Sc	ource 36°	
Distance	Beam Diameter	Field Diameter			Lux
1 m	0.50 m	0.61 m			28,425
2 m	1.00 m	1.22 m			7,106
5 m	2.49 m	3.06 m			1,137
8 m	3.99 m	4.89 m			444
10 m	4.99 m	6.11 m			284
15 m	7.48 m	9.17 m			126
20 m	9.97 m	12.23 m			71
25 m	12.47 m	15.29 m			45
30 m	14.96 m	18.34 m			32

Field

Field



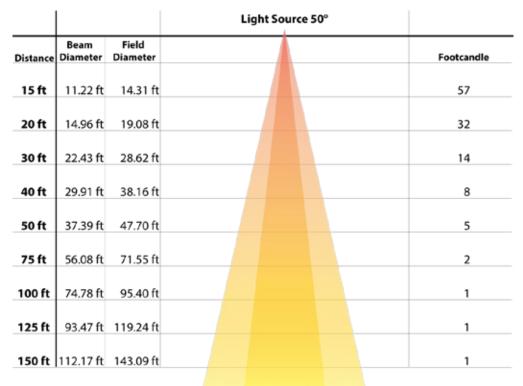




			Light Sour	ce 50°	
Distance	Beam Diameter	Field Diameter			Lux
1 m	0.75 m	0.95 m			12,825
2 m	1.50 m	1.91 m			3,206
5 m	3.74 m	4.77 m			513
8 m	5.98 m	7.63 m			200
10 m	7.48 m	9.54 m			128
15 m	11.22 m	14.31 m			57
20 m	14.96 m	19.08 m			32
25 m	18.69 m	23.85m			21
30 m	22.43 m	28.62 m			14

Field

Field



	Narı	row	Zoomable Light Source 15°~30°							Wide	
Distance	Beam Diameter	Field Diameter	Footcandle						ootcandle	Beam Diameter	Field Diameter
15 ft	3.42 ft	3.95 ft	495						158	6.38 ft	7.76 ft
20 ft	4.56 ft	5.27 ft	279						89	8.50 ft	10.34 ft
30 ft	6.84 ft	7.90 ft	124						39	12.75 ft	15.52 ft
40 ft	9.11 ft								22	17.00 ft	20.69 ft
50 ft	11.39 ft			1					14		25.86 ft
75 ft	17.09 ft								5		38.79 ft
100 ft	22.79 ft								4		51.72 ft
125 ft	28.48 ft	32.91 ft							2		
150 ft	34.18 ft	39.50 ft	5						2	63.77 ft	77.59 ft

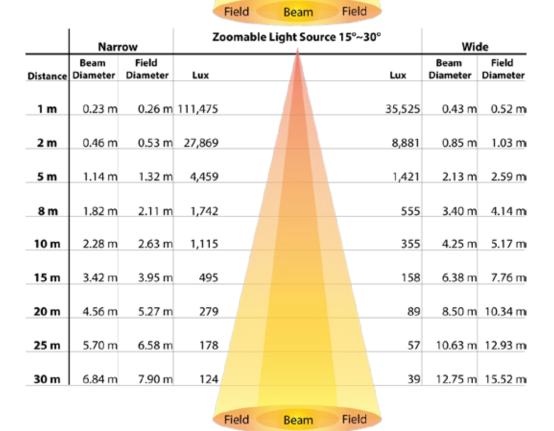



	Narrow		Zoon	Wide					
Distance	Beam Diameter	Field Diameter	Footcandle				Footcandle	Beam Diameter	Field Diameter
15 ft	6.10 ft	6.93 ft	214				86	9.75 ft	13.99 ft
20 ft	8.14 ft	9.23 ft	120				49	13.00 ft	18.65 ft
30 ft	12.21 ft	13.85 ft	53				22	19.50 ft	24.98 ft
40 ft	16.28 ft	18.47 ft	30			h	12	25.99 ft	37.30 ft
50 ft	20.35 ft	23.09 ft	19	A			8	32.49 ft	
	30.52 ft	34.63 ft	9				3		
75 ft			_					1017 110	
100 ft	40.69 ft	46.17 ft	5				2	64.98 ft	93.26 ft
125 ft	50.86 ft	57.72 ft	3				1	81.23 ft	116.58 ft
150 ft	61.04 ft	69.26 ft	2				1	97.48 ft	139.89 ft



	Narr	ow	Zoomable Light Source 25°~50°							Wide	
Distance	Beam Diameter	Field Diameter	Lux						Lux	Beam Diameter	Field Diameter
1 m	0.41 m	0.46 m	48,075						19,450	0.65 m	0.93 m
2 m	0.81 m	0.92 m	12.019						4,863	1.30 m	1.87 m
5 m	2.03 m	2.31 m	1,923						778	3.25 m	4.66 m
8 m	3.26 m	3.69 m	751						304	5.20 m	7.46 m
10 m	4.07 m	4.62 m	481						195	6.50 m	9.33 m
15 m	6.10 m	6.93 m	214	1					86	9.75 m	13.99 m
20 m	8.14 m	9.23 m	120						49	13.00 m	18.65 m
25 m	10.17 m	11.54 m	77						31	16.25 m	23.32 m
30 m	12.21 m	13.85 m	53						22	19.50 m	27.98 m
			F	ield		Beam	1	Field			



Returns

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



DO NOT write the RMA number directly on the box. Instead, write it on a properly affixed label.

Once you have received the RMA number, include the following information on a piece of paper inside the box:

- Your name
- · Your address
- · Your phone number
- · The RMA number
- A brief description of the problem(s)

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. FedEx packing or double-boxing is recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



Contact Us

USA WORLD HEADQUARTERS

General Information – Chauvet

Address: 5200 NW 108th Avenue Voice: (844) 393-7575 Sunrise, FL 33351 Fax: (954) 756-8015

chauvetcs@chauvetlighting.com Voice: (954) 577-4455 Email:

Technical Support

Email: uktech@chauvetlighting.com

World Wide Web www.chauvetlighting.co.uk

Fax: (954) 929-5560

World Wide Web www.chauvetlighting.com Toll free: (800) 762-1084

EUROPE

General Information - Chauvet Europe BVBA **Technical Support**

Address: Stokstraat 18 Email: Eutech@chauvetlighting.eu

9770 Kruishoutem

Belgium

World Wide Web www.chauvetlighting.eu Voice: +32 9 388 93 97

General Information - Chauvet Europe Ltd. **Technical Support**

Address: Unit 1C

Brookhill Road Industrial Estate

Pinxton, Nottingham, UK

NG16 6NT

Voice: +44 (0)1773 511115 Fax: +44 (0)1773 511110

MEXICO

General Information - Chauvet Mexico **Technical Support**

Address: Av. de las Partidas 34, 3-B Email: servicio@chauvet.com.mx

(Entrance by Calle 2)

Zona Industrial Lerma World Wide Web www.chauvet.com.mx

Lerma, Edo. de México, CP 52000

Voice: +52 (728) 690-2010

Outside the U.S., United Kingdom, Ireland, Mexico, or Benelux contact the dealer of record. Follow their instructions to request support or to return a product. Visit our website for contact details.