


# **User Manual**





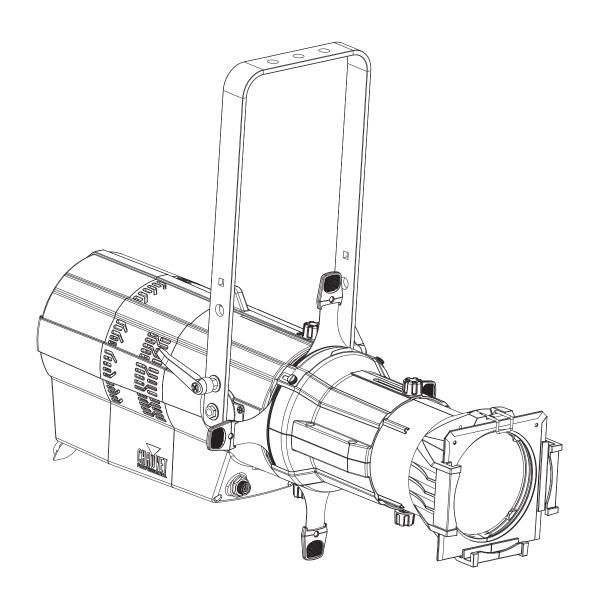

### **EDITION NOTES**

The Ovation E-910FC IP User Manual includes a description, safety precautions, installation, programming, operation and maintenance instructions for the Ovation E-910FC IP.

#### **Trademarks**

CHAUVET, the Chauvet logo and Ovation E-910FC IP are registered trademarks or trademarks of Chauvet & Sons, LLC (d/b/a Chauvet and Chauvet Lighting) in the United States and other countries. Other company and product names and logos referred to herein may be trademarks of their respective companies.

### **Copyright Notice**

The works of authorship contained in this manual, including, but not limited to, all design, text and images are owned by Chauvet.

#### © Copyright 2019 Chauvet & Sons, LLC. All rights reserved.

Electronically published by Chauvet in the United States of America.

#### Manual Use

Chauvet authorizes its customers to download and print this manual for professional information purposes only. Chauvet expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without written consent from Chauvet.

### **Document Printing**

For best results, print this document in color, on letter size paper (8.5 x 11 in), double-sided. If using A4 paper (210 x 297 mm), configure the printer to scale the content accordingly.

#### **Intended Audience**

Any person installing, operating, and/or maintaining this product should completely read through the guide that shipped with the product, as well as this manual, before installing, operating, or maintaining this product.

#### Disclaimer

Chauvet believes that the information contained in this manual is accurate in all respects. However, Chauvet assumes no responsibility and specifically disclaims any and all liability to any party for any loss, damage or disruption caused by any errors or omissions in this document, whether such errors or omissions result from negligence, accident or any other cause. Chauvet reserves the right to revise the content of this document without any obligation to notify any person or company of such revision, however, Chauvet has no obligation to make, and does not commit to make, any such revisions. Download the latest version from <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a>.

### **FCC Compliance**

This device complies with Part 15 Part B of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **Document Revision**

This Ovation E-910FC IP User Manual is the 2<sup>nd</sup> edition of this document. Go to www.chauvetprofessional.com for the latest version.



### **TABLE OF CONTENTS**

1.	Before You Begin	1
	What Is Included	1
	Claims	1
	Manual Conventions	1
	Symbols	1
	Safety Notes	
	Personal Safety	2
	Mounting and Rigging	2 2 2 2 2
	Power and Wiring	2
	Operation	2
	Expected LED Lifespan	2
2	Introduction	3
۷.		0
	Description	3
	Features	3
	Lens Tube	3
	Product Overview	4
	Product Dimensions	5
3.	Setup	6
•	AC Power	6
	AC Plug	6
	Power Linking	6
		6
	DMX LinkingDMX Personalities	6
	Remote Device Management (RDM)	
	Moster/Clave Connectivity	6 7
	Master/Slave Connectivity	
	Mounting	7
	Orientation	7 7
	Rigging Procedure	ρ
	Manual Beam Focus Control	8 8 9
	Rotating the Barrel Assembly	9
	Accessory Slot	9
4	Operation	
••	Control Panel Operation	
	Control Options	
	·	
	Programming	
	Control Panel Lock	10
	Configuration (DMX)	
		13
	DMX Control	13
	DMX Values	13
	16 Ch	13
	14 Ch	14 14
	13 Ch	15
	8 Ch	15
	6 Ch.	15
	4 Ch	16
	HSV	16
	Virtual Color Wheel	17



	Configuration (Standalone)  Focus Mode  Static Mode	18 18 18
	Auto Programs	18 18
	Master/Slave	19
	Dimmer Profiles	19
	White Balance	19
	LED Frequency	19
	Fan Mode	19
	Back Light	19
	System Information	19 19
_	Factory Reset	_
ວ.	Technical Information	20
_	Product Maintenance	20
6.	Technical Specifications	21
	Photometrics Chart	22
	Photometrics Chart	23
	Photometrics Chart	24
	Photometrics Chart	25
	Photometrics Chart	26
	Photometrics Chart	27
	Photometrics Chart	28
Re	eturns	29
	ontact Us	30
$\mathbf{c}$	///IIIUL US	JU



## 1. BEFORE YOU BEGIN

### What Is Included

- Ovation E-910FC IP
- Seetronic Powerkon IP65 Power Cord

#### · Quick Reference Guide

#### **Claims**

Carefully unpack the product immediately and check the container to make sure all the parts are in the package and are in good condition.

If the box or the contents (the product and included accessories) appear damaged from shipping, or show signs of mishandling, notify the carrier immediately, not Chauvet. Failure to report damage to the carrier immediately may invalidate your claim. In addition, keep the box and contents for inspection.

For other issues, such as missing components or parts, damage not related to shipping, or concealed damage, file a claim with Chauvet within 7 days of delivery.

### **Manual Conventions**

Convention	Meaning	
1–512 A range of values		
50/60 A set of values of which only one can be chosen		
<set> A button on the product's control panel</set>		
Settings A product function or a menu option		

### **Symbols**

Symbol	Meaning		
A	Electrical warning. Not following these instructions may cause electrical damage to the product, accessories, or the user.		
	Critical installation, configuration, or operation information. Not following these instructions may make the product not work, cause damage to the product, or cause harm to the operator.		
<b>i</b>	Important installation or configuration information. The product may not function correctly if this information is not used.		
	Useful information.		



Any reference to data or power connections in this manual assumes the use of Seetronic IP rated cables.



The term "DMX" used throughout this manual refers to the USITT DMX512-A digital data transmission protocol.



### **Safety Notes**

Read all the following safety notes before working with this product. These notes contain important information about the installation, usage, and maintenance of this product.



This product contains no user-serviceable parts. Any reference to servicing in this User Manual will only apply to properly trained, certified technicians. Do not open the housing or attempt any repairs.



All applicable local codes and regulations apply to proper installation of this product.

#### **Personal Safety**

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect the product from the power source before cleaning or replacing the fuse.
- Always connect the product to a grounded circuit to avoid the risk of electrocution.
- Do not touch the product's housing when operating because it may be very hot.

#### **Mounting and Rigging**

- Do not submerge this product (IP65). Temporary outdoor operation is fine.
- When using this product in an outdoor environment, use IP65 (or higher) rated power and data cables. Secure unused power and data ports with attached IP65 covers.
- CAUTION: When transferring product from extreme temperature environments, (e.g., cold truck to warm, humid ballroom) condensation may form on the internal electronics of the product. To avoid causing a failure, allow product to fully acclimate to the surrounding environment before connecting it to power.
- Not for permanent outdoor installation in locations with extreme environmental conditions. This
  includes, but is not limited to:
  - Exposure to a marine/saline environment (within 3 miles of a saltwater body of water).
  - Locations where the normal high or low temperatures exceed the temperature ranges in this manual.
  - Locations that are prone to flooding or being buried in snow.
  - Areas where the product will be subjected to extreme radiation or caustic substances.
- Mount this product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces
- Make sure there are no flammable materials close to the product when operating.
- When hanging this product, always secure to a fastening device using a safety cable.

#### **Power and Wiring**

- Always make sure you are connecting the product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- Never connect the product to a dimmer pack or rheostat.
- Never disconnect this product by pulling or tugging on the power cable.

### Operation

- Do not operate this product if there is damage on the housing, lenses, or cables. Have the damaged parts replaced by an authorized technician at once.
- Do not cover the ventilation slots when operating to avoid internal overheating.
- The maximum ambient temperature is 113 °F (45 °C). Do not operate the product at higher temperatures.
- The minimum startup temperature is -4°F (-20°C). Do not start the product at lower temperatures.
- The minimum ambient temperature is -22°F (-30°C). Do not operate the product at lower temperatures.
- In the event of a serious operation problem, stop using this product immediately!



If your Chauvet product requires service, contact Chauvet Technical Support.

### **Expected LED Lifespan**

LEDs gradually decline in brightness over time, primarily because of heat. LEDs that are arranged in clusters experience higher operating temperatures than single LEDs. For this reason, operating clustered LEDs at their fullest intensity significantly reduces the LEDs' lifespan. Under normal conditions, this lifespan is 40,000 to 50,000 hours. If extending this lifespan is vital, lower the operating temperature by improving the ventilation around the product, thus reducing the ambient temperature. In addition, limiting the overall projection intensity may extend the LEDs' lifespan.



### 2. Introduction

### **Description**

The Ovation E-910FC IP takes the high-performance, full RGBA-Lime color-mixing LED engine of the Ovation E-910FC outdoors. Our standard shutter assembly and lenses lend familiarity and ease of use to this IP65 ERS style fixture that offers Color Temperature presets of 2800 to 6500 K that match the output of a tungsten source to perfection. Control options include full bit dimming (per color and master), selectable PWM, RDM and onboard dimming curves selection. Also accessible is our virtual color wheel which matches popular color gels.

#### **Features**

- 4, 6, 8, 11, 13, 14, or 16 channel quad-color LED wash product
- · Operating modes:
  - 4-channel: Dimmer, virtual color wheel, color temperature, gobo rotator
  - 4-channel: Hue, saturation, value, gobo rotator
  - 6-channel: RGBAL control, gobo rotator
  - 8-channel: RGBAL control, dimmer, strobe, gobo rotator
  - 11-channel: RGBAL control, 16-bit dimmer, strobe, virtual color wheel, color temperature, gobo rotator
  - 13-channel: RGBAL control, dimmer, strobe, virtual color wheel, color temperature, auto programs, auto speed, dimmer mode, gobo rotator
  - 14-channel: 16-bit RGBAL and dimmer, strobe, gobo rotator
  - 16-channel: 16-bit RGBAL and dimmer, strobe, virtual color wheel, color temperature, gobo rotator
- Full Color LED (RGBAL) ERS-style lighting fixture for theatre, film and production
- Fully IP65 rated for seasonal use indoors or out
- Use of our standard Ovation beam shaping shutters and lenses lends familiarity and ease of use to the fixture
- Virtual Color wheel with color matched to popular gel colors
- Color Temperature Presets from 2800 K to 6500 K with high CRI and CQS
- Ultra-smooth 16-bit dimming, and 8-bit dimming curves to complement any lighting scheme.
- Flat, even field of light for superior gobo projection
- RDM (Remote Device Management) for added flexibility
- Adjustable PWM (Pulse Width Modulation) to avoid flickering on camera


#### Lens Tube


The following lens tubes are available for purchase:

- 14° w/ Gel frame (7.5 in/191 mm accessories)
- 19° w/ Gel frame (6.25 in/159 mm accessories)
- 26° w/ Gel frame (6.25 in/159 mm accessories)
- 36° w/ Gel frame (6.25 in/159 mm accessories)
- 50° w/ Gel frame (6.25 in/159 mm accessories)
- 15°-30° w/ Gel frame (7.5 in/191 mm accessories)
- 25°-50° w/ Gel frame (7.5 in/191 mm accessories)




### **Product Overview**

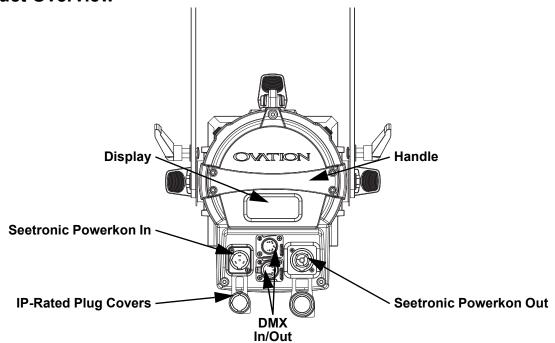


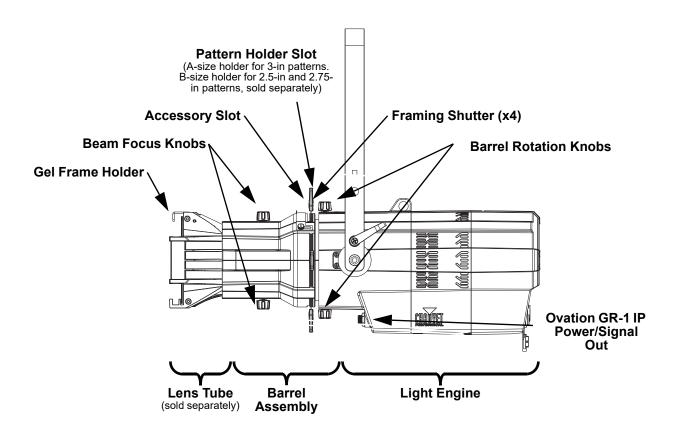






### **Product Dimensions**

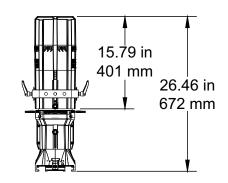


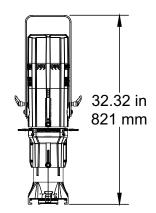


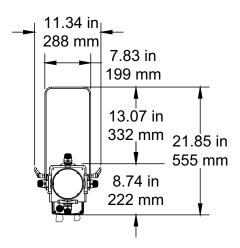

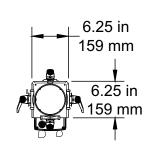

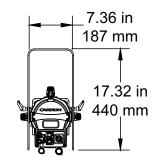

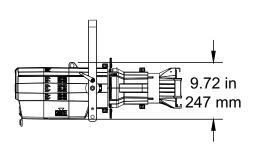

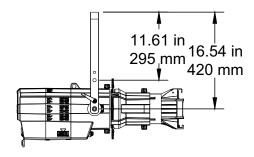



### 3. SETUP

#### **AC Power**

Each Ovation E-910FC IP has an auto-ranging power supply that works with an input voltage range of 100 to 240 VAC, 50/60 Hz. To determine the power requirements for each Ovation E-910FC IP, refer to the label affixed to the product. You can also refer to the Technical Specifications chart in this manual. The listed current rating indicates the maximum current draw during normal operation. For more information, download Sizing Circuit Breakers from the Chauvet website: www.chauvetprofessional.com.



 Always connect the product to a protected circuit (circuit breaker or fuse). Make sure the product has an appropriate electrical ground to avoid the risk of electrocution or fire.

 To eliminate unnecessary wear and improve its lifespan, during periods of nonuse completely disconnect the product from power via breaker or by unplugging it



Never connect the product to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.

### **AC Plug**

The Ovation E-910FC IP comes with a power input cord terminated with a Seetronic Powerkon A connector on one end and an Edison plug on the other end (U.S. market). If the power input cord that came with your product has no plug, or if you need the change the plug, use the table below to wire the new plug.

Connection	Wire (U.S.)	Wire (Europe)	Screw Color
AC Live	Black	Brown	Yellow or Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green

### **Power Linking**

The product supports power linking. You can power link up to 7 products at 120 V; up to 11 at 208 V; or up to 12 at 230 V. This product comes with a power input cord. Power linking cables are available from Chauvet for purchase.



- To preserve the IP65 rating and the warranty of this product Seetronic Powerkon cables must be used.
- Insert the attached IP65 rated plugs into the corresponding power/data connections when not in use.

### **DMX Linking**

You can link the Ovation E-910FC IP to a DMX controller using a 5-pin DMX connection. If using other DMX-compatible products with this product, you can control each individually with a single DMX controller.

#### **DMX Personalities**

The Ovation E-910FC IP uses a 5-pin DMX data connection for the 4, 6, 8, 11, 13, 14, or 16-channel DMX personalities.

- Refer to the Introduction for a brief description of each DMX personality.
- Refer to the Operation chapter to learn how to configure the Ovation E-910FC IP to work in these
  personalities.
- The DMX Values section provides detailed information regarding the DMX personalities.

### **Remote Device Management (RDM)**

Remote Device Management, or RDM, is a standard for allowing DMX-enabled devices to communicate bi-directionally along existing DMX cabling. Check the DMX controller's User Manual or with the manufacturer as not all DMX controllers have this capability. The Ovation E-910FC IP supports RDM protocol that allows feedback to make changes to menu map options.



### **Master/Slave Connectivity**

The Master/Slave mode allows a Ovation E-910FC IP (the master) to control one or more Ovation E-910FC IP products (the slaves) without a DMX controller. One Ovation E-910FC IP becomes the master when running an auto or custom program, or by being in a Static mode.

You must configure each slave's control panel to operate in Slave mode. During Master/Slave operation, the slaves will operate in unison with the master.



DO NOT connect a DMX controller to products operating in Master/Slave mode. The DMX controller signals may interfere with the signals from the master.



- The <u>Operation</u> section of this manual provides detailed instructions on how to configure the master and slaves.
- If you are not familiar with DMX standards or Master/Slave connectivity, download the DMX Primer from the Chauvet website www.chauvetprofessional.com for more information.



To preserve the IP65 rating and the warranty of this product, IP65 data cables must be used.

### Mounting

Before mounting the product, read and follow the safety recommendations indicated in the Safety Notes. For our CHAUVET Professional line of mounting clamps, go to <a href="http://trusst.com/products/">http://trusst.com/products/</a>.

#### Orientation

Always mount this product in a safe position, making sure there is adequate room for ventilation, configuration, and maintenance.

#### Rigging

Chauvet recommends using the following general guidelines when mounting this product.


- Before deciding on a location for the product, make sure there is easy access to the product for maintenance and programming purposes.
- Make sure that the structure onto which you are mounting the product can support the product's weight. See the <u>Technical Specifications</u> for weight information.
- When mounting the product overhead, always use a safety cable. Mount the product securely to a rigging point, whether an elevated platform or a truss.
- When rigging the product onto a truss, use a mounting clamp of appropriate weight capacity.
- When power linking multiple products, mount the products close enough for power linking cables to reach.
- The bracket adjustment knobs allow for directional adjustment when aiming the product to the desired angle. Only loosen or tighten the bracket knobs manually. Using tools could damage the knobs.



#### **Procedure**

The Ovation E-910FC IP comes with a double-bracketed yoke to which you can either attach mounting clamps for hanging or simply use as a floor stand. You must supply the mounting clamps. Make sure the clamps are capable of supporting the weight of this product. Use at least one mounting point per product. For the CHAUVET Professional line of mounting clamps, go to <a href="http://www.trusst.com/products">http://www.trusst.com/products</a>.

#### **Mounting Diagram**

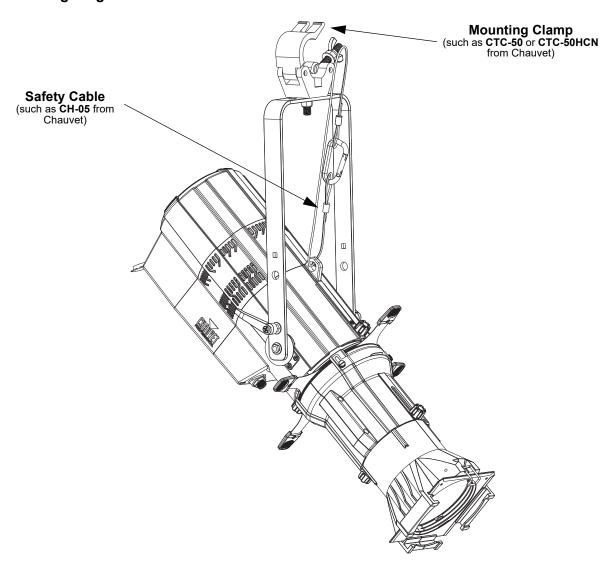

#### **Manual Beam Focus Control**

The Ovation E-910FC IP has a manual focus, which is adjusted as follows:

- Locate the beam focus knobs at the top and bottom of the barrel assembly.
- 2. Loosen the knobs by turning them counter-clockwise.
- Slide the lens tube forward or backward until you achieve the desired focus or beam edge.
- 4. Tighten the knobs by turning them clockwise, which lock the lens tube's position.



To avoid changing menu settings while focusing the Ovation E-910FC IP, press and hold the <ENTER> button for 3 seconds. This will put the product in "Focus Mode" by increasing the intensity to 100%. To exit out of focus mode, press <MENU>.



#### **Rotating the Barrel Assembly**

The Ovation E-910FC IP allows manual rotation of the barrel assembly, as follows:

- 1. Locate the barrel rotation knobs at the top and bottom of the light engine.
- 2. Loosen the knobs by turning them counter-clockwise.
  - Note: Do not remove the knobs.
- 3. Rotate the barrel to the desired position, up to 25° in either direction from the centered position.
- 4. Tighten the knobs by turning them clockwise, which lock the barrel's position.




Make sure the barrel assembly is oriented with the pattern holder and accessory slots at the top of the product.

### **Accessory Slot**

The Ovation E-910FC IP has an accessory slot, which holds a drop-in iris, a motorized pattern device, or various other optional accessories (sold separately).

- Loosen the thumbscrews on the slot cover.
  - **Note**: Do not remove the thumbscrews.
- 2. Slide the cover forward.
- 3. Insert an accessory.
  - Note: Make sure to insert the accessory correctly. For example, make sure the iris handle extends upward from the slot.
- 4. Slide the cover back. Make sure any handles or adjustment tools that stick out the top are able to function correctly.
- 5. Tighten the thumbscrews to secure the cover.

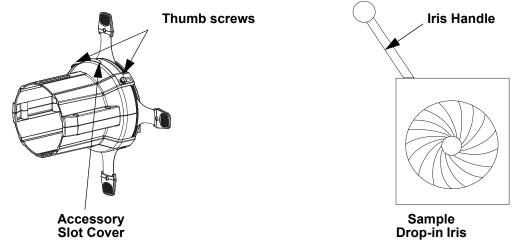



- When not using the accessory slot, replace and secure the slot cover to prevent light leakage during operation.
- When obtaining any optional accessories, be sure the items are compatible with the Ovation E-910FC IP.



### 4. OPERATION

### **Control Panel Operation**

Button	Function		
<menu></menu>	Exits from the current menu or function		
<b>Enables</b> the currently displayed menu or sets the currently selected value in to the current function			
<up></up>	Navigates upward through the menu list or increases the numeric value when in a function		
<down></down>	Navigates downward through the menu list or decreases the numeric value when in a function		

### **Control Options**

Set the Ovation E-910FC IP starting address in the 001-512 DMX range. This enables control of up to 46 products in the 11-channel 11CH personality.

### **Programming**

Refer to the Menu Map to understand the menu options. The menu map shows the main level and a variable number of programming levels for each option.

- To go to the desired main level, press **<MENU>** repeatedly until the option shows on the display. Press **<ENTER>** to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until
  the option shows on the display. Press <ENTER> to select. In this case, if there is another
  programming level, you will see that first option, or you will see the selected value.
- Press <MENU> repeatedly to exit to the previous main level.

#### **Control Panel Lock**

This setting enables you to activate or disable the control panel lock, which keeps unauthorized users from changing the product's settings.

- 1. Go to the **Key Lock** main level.
- 2. Select On or Off.



When the control panel lock is activated, in order to access the products main programming level, the product will prompt for the passcode. Enter the passcode as described below.

### Menu Map

Main Level	Programming Levels	Description
DMX Address 001–509*		Selects DMX address (highest channel restricted to personality chosen)
	4 Ch	4-channel: dimmer, VCW, color temperature, gobo rotator
	6 Ch	6-channel: RGBAL, gobo rotator
	8 Ch	8-channel: dimmer, RGBAL, strobe, gobo rotator
	11 Ch	11-channel: 16-bit dimmer, RGBAL, strobe, VCW, color temperature, gobo rotator
DMX Channel	13 Ch	13-channel: dimmer, RGBAL, strobe, VCW, color temperature, auto program, auto speed, dimmer speed mode, gobo rotator
	14 Ch	14-channel: 16-bit dimmer, 16-bit RGBAL, strobe, gobo rotator
	16 Ch	16-channel: 16-bit dimmer, 16-bit RGBAL, strobe, VCW, color temperature, gobo rotator
	HSV	4-channel: hue, saturation, value, gobo rotator



Main Level	Pr	rogramming	_		Description
Virtual Color Wheel	Virtual Color Wheel	C3050-Md Yellow C3040-Lt Yellow C3240-Amb Yellow C2340-VLt Amber C2040-Lt Amber C2050-Md Amber C2060-Dk Amber C1050-Lt Red C1080-Md Red C1020-NC Pink C1030-Md Pink C1030-Md Pink C1630-Dk Red Amber C1650-Magenta C6170-Dk Magenta C6170-Dk Magenta C6020-Lt Lavender C5030-Lt Blue C5030-Lt Blue C50430-Lt Blue C50430-Lt Blue C50430-Lt Blue C5050-Md Blue C5050-Md Blue C5050-Md Blue C5050-Dk Blue C5060-Dk Blue C5080-VDk Blue C5081-VDk Blue C5081-VDk Blue C5081-VDk Blue C5081-VDk Blue C5081-VDk Blue C5081-VDk Blue		Dimmer <000– 255>	Virtual color wheel simulates the output of each gel color. Refer to the Virtual Color Wheel Chart section for specific values.
	Color Temperature	2800 3200 3500 4000 4500 5600 6600	0K 0K 0K 0K 0K 0K		Preset white color temperatures. Emulates a tungsten lamp at the specified color temperature. Refer to the Color Temperature Chart section for specific values.
	Manual Color Mixer Blu Ami		Red Green Blue Amber Lime	<000- 255>	Combine red, green, blue, amber, and lime to make a custom color (0–100%)
Auto Show	Auto 1–5 <001-		-100>	Selects automatic programs and program speed	
Gobo Rotator	0-255			Rotating gobo index	
Master/	Master				DMX mode (Master)
Slave	/e Slave			Slave mode	



Main Level	Programming	g Levels	Description
Dimmer	Off		Linear dimmer
Mode	Dimmer 1–3		Dimming curves <b>Dimmer 1</b> (fast) to <b>Dimmer 3</b> (slow)
	Off		Uses factory default white setting
		Red	Sets red LED maximum value
White		Green <000-	Sets green LED maximum value
Balance	Manual	Blue 255>	Sets blue LED maximum value
		Amber	Sets amber LED maximum value
		Lime	Sets lime LED maximum value
	600Hz		
	1200H	<del>_</del>	
LED	2000H		Sets the PWM frequency
Frequency	4000H		Octo the 1 www frequency
	6000H		
	25KH:		
	Auto		Sets the fan to auto mode
Fan Mode	Off		Sets the fan to always on
i dii iliodo			Sets the fan to always off
	Silen	t	Sets the fan to silent
	On		Display backlight always on
	108		Turns off display backlight after 10 seconds of inactivity
Back Light	20\$		Turns off display backlight after 20 seconds of inactivity
	30S		Turns off display backlight after 30 seconds of inactivity
Key Lock	On Off		Turns passcode on or off
0 - h - D	On		E. H P. H I
Gobo Power	Off		Enables or disables gobo power output
	Fixture Hours	<h></h>	Shows total hours the product has been powered on
Information	Version	<v></v>	Shows current firmware version
	UID	< <del>-</del>	- Shows product UID
Reset	No		Resets the product to factory default
Factory	Yes		settings



### **Configuration (DMX)**

Use DMX configurations to operate the product with a DMX controller.

#### **DMX Personalities**

This setting allows you to choose a particular DMX personality.

- 1. Go to the **DMX Channel** main level.
- 2. Select the desired personality (4 Ch, 6 Ch, 8 Ch, 11 Ch, 13 Ch, 14 Ch, 16 Ch, or HSV).



- See the <u>DMX Control</u> section for the highest starting address you can select for each personality.
- Make sure that the starting addresses on the various products do not overlap due to the new personality setting.

#### **DMX Control**

In this mode, each product will respond to a unique starting address from the DMX controller. All products with the same starting address will respond in unison.

- 1. Select a DMX personality as shown in DMX Personalities.
- 2. Set the starting address:
  - a. Go to DMX Address main level.
  - b. Select the starting address (001-512).

The highest recommended starting address for each DMX mode is as follows:

DMX Personality	DMX Address	DMX Personality	DMX Address
4	509	13	500
6	507	14	499
8	505	16	497
11	502	HSV	509

#### **DMX Values**

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Green	000 ⇔ 255	0–100%
6	Green Fine	000 ⇔ 255	0–100%
7	Blue	000 ⇔ 255	0–100%
8	Blue Fine	000 ⇔ 255	0–100%
9	Amber	000 ⇔ 255	0–100%
10	Amber Fine	000 ⇔ 255	0–100%
11	Lime	000 ⇔ 255	0–100%
12	Lime Fine	000 ⇔ 255	0–100%
13	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
14	Virtual Color Wheel	000 ⇔ 255	See <u>Virtual Color Wheel Chart</u>
15	Color Temperature	000 ⇔ 255	See Color Temperature Chart
16	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast



### 14 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Red Fine	000 ⇔ 255	0–100%
5	Green	000 ⇔ 255	0–100%
6	Green Fine	000 ⇔ 255	0–100%
7	Blue	000 ⇔ 255	0–100%
8	Blue Fine	000 ⇔ 255	0–100%
9	Amber	000 ⇔ 255	0–100%
10	Amber Fine	000 ⇔ 255	0–100%
11	Lime	000 ⇔ 255	0–100%
12	Lime Fine	000 ⇔ 255	0–100%
13	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
14	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast

Channel	Function	Value	Percent/Setting				
1	Dimmer	000 ⇔ 255	0–100%				
2	Red	000 ⇔ 255	0–100%				
3	Green	000 ⇔ 255	0–100%				
4	Blue	000 ⇔ 255	0–100%				
5	Amber	000 ⇔ 255	0–100%				
6	Lime	000 ⇔ 255	0–100%				
7	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast				
8	Virtual Color Wheel	000 ⇔ 255	See Virtual Color Wheel Chart				
9	Color Temperature	000 ⇔ 255	See Color Temperature Chart				
10	Auto Program	000 ⇔ 010 011 ⇔ 060 061 ⇔ 110 111 ⇔ 160 161 ⇔ 210 211 ⇔ 255	No function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5				
11	Auto Speed	000 ⇔ 255	0–100%				
12	Dimmer Speed Mode	000 ⇔ 051 052 ⇔ 101 102 ⇔ 152 153 ⇔ 203 204 ⇔ 255	No function Dimmer speed mode off Dimmer speed mode 1 Dimmer speed mode 2 Dimmer speed mode 3				
13	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast				



# 11 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Dimmer Fine	000 ⇔ 255	0–100%
3	Red	000 ⇔ 255	0–100%
4	Green	000 ⇔ 255	0–100%
5	Blue	000 ⇔ 255	0–100%
6	Amber	000 ⇔ 255	0–100%
7	Lime	000 ⇔ 255	0–100%
8	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
9	Virtual Color Wheel	000 ⇔ 255	See Virtual Color Wheel Chart
10	Color Temperature	000 ⇔ 255	See Color Temperature Chart
11	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast

## 8 Ch

Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Red	000 ⇔ 255	0–100%
3	Green	000 ⇔ 255	0–100%
4	Blue	000 ⇔ 255	0–100%
5	Amber	000 ⇔ 255	0–100%
6	Lime	000 ⇔ 255	0–100%
7	Strobe	000 ⇔ 010 011 ⇔ 255	No function Strobe, slow to fast
8	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast

Channel	Function	Value	Percent/Setting
1	Red	000 ⇔ 255	0–100%
2	Green	000 ⇔ 255	0–100%
3	Blue	000 ⇔ 255	0–100%
4	Amber	000 ⇔ 255	0–100%
5	Lime	000 ⇔ 255	0–100%
6	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast



Channel	Function	Value	Percent/Setting
1	Dimmer	000 ⇔ 255	0–100%
2	Virtual Color Wheel	000 ⇔ 255	See Virtual Color Wheel Chart
3	Color Temperature	000 ⇔ 255	See Color Temperature Chart
4	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast
HSV	'	'	•

Channel	Function	Value	Percent/Setting
1	Hue	000 ⇔ 255	0–100%
2	Saturation	000 ⇔ 255	0–100%
3	Value	000 ⇔ 255	0–100%
4	Gobo Rotator	000 ⇔ 127 128 ⇔ 190 191 ⇔ 192 193 ⇔ 255	Index Clockwise fast to slow Stop Counter-clockwise slow to fast



#### Virtual Color Wheel

The Ovation E-910FC IP includes a feature called the Virtual Color Wheel (VCW). This feature is available as a stand-alone control mode for manual use and also as a control channel in select DMX personalities. Over 30 pre-mixed colors, custom blended by our engineers, are available to call up for easier programming. The DMX values used to mix these colors are provided below. You may adjust the overall intensity of the Ovation fixture in order to more closely replicate colors you are familiar with. A chart is available on our website <a href="https://www.chauvetprofessional.com">www.chauvetprofessional.com</a> to compare our pre-mixed colors with popular gel colors. This chart is for comparison purposes only and is not a representation that our pre-mixed colors match any of the gel colors listed.

#### **Virtual Color Wheel Chart**

DMX Channel Value	Display Readout	Red Value	Green Value	Blue Value	Amber Value	Lime Value
000 ⇔ 005		000	000	000	000	000
006 ⇔ 013	C3050 - Md Yellow	233	163	020	123	255
014 ⇔ 021	C3040 - Lt Yellow	224	158	047	255	231
022 ⇔ 028	C3240 - Amb Yellow	180	060	000	245	255
029 ⇔ 035	C2340 - VLt Amber	245	107	081	255	213
036 ⇔ 043	C2040 - Lt Amber	230	130	062	255	155
044 ⇔ 051	C2050 - Md Amber	255	000	025	255	194
052 ⇔ 059	C2060 - Dk Amber	255	000	024	255	150
060 ⇔ 067	C1050 - Lt Red	255	037	027	030	038
068 ⇔ 075	C1080 - Md Red	255	004	017	000	000
076 ⇔ 083	C1020 - NC Pink	238	135	129	255	255
084 ⇔ 091	C1030 - Md Pink	255	131	120	255	195
092 ⇔ 099	C1630 - Dk Pink	255	165	123	255	210
100 ⇔ 107	C1250 - Md Red Amber	255	000	041	195	055
108 ⇔ 115	C1060 - Dk Red Amber	255	000	045	120	030
116 ⇔ 121	C1650 - Magenta	255	050	115	255	115
122 ⇔ 130	C6170 - Dk Magenta	255	035	117	000	000
131 ⇔ 138	C6020 - Lt Lavender	127	122	142	251	255
139 ⇔ 146	C5030 - Lt Blue	000	255	197	100	255
147 ⇔ 154	C5020 - VLt Blue	158	255	189	000	255
155 ⇔ 162	C5430 - Lt Blue 2	000	255	180	000	243
163 ⇔ 170	C5070 - Blue	043	255	210	043	036
171 ⇔ 178	C5050 - Md Blue	000	255	218	000	181
179 ⇔ 186	C5060 - Dk Blue	000	210	206	000	118
187 ⇔ 194	C5690 - Indigo	065	000	210	040	055
195 ⇔ 202	C5080 - VDk Blue	000	203	230	000	040
203 ⇔ 210	C5081 - VDk Blue2	040	199	240	000	045
211 ⇔ 218	C4370 - Yel Green	027	255	028	016	104
219 ⇔ 226	C4070 - Green	049	255	055	120	090
227 ⇔ 234	C4550 - Turquoise	060	230	109	000	245
235 ⇔ 242	C4560 - Aqua	020	240	126	036	255
243 ⇔ 250	C4570 - Blue Green	000	255	079	030	053
251 ⇔ 255	<b></b>	000	000	000	000	000



Note: The colors above are simulated renditions of the color output produced as compared to other similar incandescent products. Chauvet makes no guarantee of the color output accuracy.



#### **Color Temperature Chart**

DMX Channel	Display Readout	Red	Green	Blue	Amber	Lime
Value		Value	Value	Value	Value	Value
000 ⇔ 005		000	000	000	000	000
006 ⇔ 025	2800K	255	199	107	253	255
026 ⇔ 050	3200K	253	247	129	255	255
051 ⇔ 075	3500K	234	255	141	253	255
076 ⇔ 100	4000K	204	255	156	243	255
101 ⇔ 125	4500K	181	248	166	224	255
126 ⇔ 150	5000K	160	255	180	241	255
151 ⇔ 175	5600K	138	255	191	241	255
176 ⇔ 200	6000K	147	255	193	203	255
201 ⇔ 225	6500K	142	251	197	187	255
226 ⇔ 255		000	000	000	000	000



Note: The color temperatures above are simulated renditions of the color output produced as compared to a tungsten lamp at the specified color temperature. Chauvet makes no guarantee of the color output accuracy.

### **Configuration (Standalone)**

Use standalone configuration to operate the product without a DMX controller.

#### **Focus Mode**

Focus mode allows for focusing of the Ovation E-910FC IP without changing any menu settings.

- 1. Press and hold **<ENTER>** for 3 seconds. The output intensity will increase to 100%.
- 2. Press <MENU> to exit focus mode and restore the settings.

#### **Static Mode**

The Static mode allows for an unchanging color without a DMX controller.

#### Virtual Color Wheel

- 1. Go to the Virtual Color Wheel main level.
- Select Virtual Color Wheel.
- 3. Select the desired gel color (see Virtual Color Wheel Chart).
- 4. Select the desired output level (<000-255>).

#### **Color Temperature**

- 1. Go to the Virtual Color Wheel main level.
- 2. Select **Color Temperature**.
- Select the desired color temperature (see <u>Color Temperature Chart</u>).
- 4. Select the desired output level (<000–255>).

#### **Manual Color Mixer**

- 1. Go to the Virtual Color Wheel main level.
- 2. Select Manual Color Mixer.
- 3. Select the color to edit (Red, Green, Blue, Amber, or Lime).
- 4. Select the desired output level for that color (<000–255>).
- 5. Repeat steps 3 and 4 until product outputs as desired.

#### **Auto Programs**

Auto programs allow for dynamic blinder effects without a DMX controller.

- 1. Go to the **Auto Show** main level
- 2. Select the desired auto program (Auto 1-5).
- 3. Select the desired speed (1-100).



The auto programs cannot be edited.

#### **Gobo Rotator** (for use with Ovation GR-1 IP, sold separately)

The gobo rotator mode controls the Ovation GR-1 IP rotation speed.

- 1. Go to the **Gobo Rotator** main level.
- 2. Select the desired value (0-255).



#### Master/Slave

The Master/Slave mode allows a group of Ovation E-910FC IP products (the slaves) to simultaneously duplicate the output of another Ovation E-910FC IP (the master) without a DMX controller. To set each of the slaves:

- 1. Go to the Master/Slave main level
- Select Slave.

To set the master:

- 1. Go to the Master/Slave main level
- Select Master.
- 3. Select a static setting.



- The master is the one that runs a program whether in Auto or Static mode.
- Do not connect a DMX controller to the products configured for Master/Slave operation.
   The DMX controller may interfere with signals from the master.
- The master should be the first product in the daisy chain.

#### **Dimmer Profiles**

This setting determines how fast the output of the Ovation E-910FC IP changes when you modify the output value. This setting provides four different options to simulate the dimming curve of an incandescent lighting product.

- Go to the **Dimmer Mode** main level.
- 2. Select a dimmer curve (Off, Dimmer 1, Dimmer 2, or Dimmer 3).



Off: The output is proportional (linear) to the dimmer channel value.

**Dimmer 1-3:** The output follows the dimmer value based on the corresponding dimmer curve, **Dimmer 1** being the fastest.

#### White Balance

This setting determines the maximum output values for each color, which affects the appearance of a full output white.

- 1. Go to the White Balance main level.
- 2. Select **Off** (the product will use a default setting) or **Manual**.
- 3. For Manual mode, select the color value to edit (Red, Green, Blue, Amber, or Lime).
- 4. Set the maximum value for the selected color (125–255).
- 5. Repeat steps 3 and 4 until the product outputs as desired.

#### **LED Frequency**

This option changes the Pulse Width Modulation (PWM) frequency of the LEDs on the Ovation E-910FC

- 1. Go to the **LED Frequency** main level.
- 2. Select PWM Frequency (600Hz, 1200Hz, 2000Hz, 4000Hz, 6000Hz, or 25Khz).

#### Fan Mode

This setting determines how the fan speed on the Ovation E-910FC IP is set.

- Go to the Fan Mode main level
- 2. Select **Auto** (fan speed will increase or decrease based on product temperature), **Off** (fan will stay off. Product output will decrease based on product temperature), **Silent** (fan will maintain a constant silent speed), or **On** (fan speed will always be at maximum).

#### Back Light

This setting allows for selection of the amount of time the backlight on the Ovation E-910FC IP's display stays on after the last button is pressed on the control panel.

- 1. Go to the **Back Light** main level.
- 2. Select **On** (remains on), **10S** (10 seconds), **20S** (20 seconds), or **30S** (seconds).

#### System Information

This option displays the total number of hours the product has run, the installed software version, and the product's UID.

- 1. Go to the **Information** main level.
- Select Fixture Hours, Version, or UID.

#### **Factory Reset**

This option restores the Ovation E-910FC IP to factory default settings.

- 1. Go to the **Reset Factory** main level.
- Select No or Yes.



### 5. TECHNICAL INFORMATION

### **Product Maintenance**

To maintain optimum performance and minimize wear, clean this product frequently. Usage and environment are contributing factors in determining the cleaning frequency.

Clean this product at least twice a month. Dust build-up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

To clean the product:

- 1. Unplug the product from power.
- 2. Wait until the product is at room temperature.
- 3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents.
- 4. Clean all transparent surfaces with a mild soap solution, ammonia-free glass cleaner, or isopropyl alcohol.
- 5. Apply the solution directly to a soft, lint free cotton cloth or a lens cleaning tissue.
- 6. Softly drag any dirt or grime to the outside of the transparent surface.
- 7. Gently polish the transparent surfaces until they are free of haze and lint.



Always dry the transparent surfaces carefully after cleaning them.



# 6. TECHNICAL SPECIFICATIONS

### **Dimensions and Weight**

Length	Width	Height	Weight
26 in (660 mm)	11.33 in (288 mm)	10.4 in (264.6 mm)	23.2 lb (10.5 kg)

**Note**: Dimensions in inches rounded to the nearest hundredth.

#### **Power**

Power Supply Type	Range	Voltage Selection
Switching (internal)	100 to 240 VAC, 50/60 Hz	Auto-ranging
Parameter	120 V, 60 Hz	230 V, 50 Hz
Consumption	225 W	241 W
Operating Current	1.88 A	1.05 A
Power linking current (products)	13.6 A (7 products)	13.6 A (12 products)
Power I/O	U.S./Canada	Worldwide
Power input connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power output connector	Seetronic Powerkon IP65	Seetronic Powerkon IP65
Power Cord plug	Edison (U.S.)	Local Plug

### **Light Source**

_		
Туре	Power	Lifespan
LED	3 W	50,000 hours
Color	Quantity	Current
RGBAL	91	722 mA

#### **Photometrics**

Parameter	14°	19°	<b>26</b> °	36°	50°	15°~30°	25°~50°
Beam Angle	11°	19°	24°	28°	41°	13°/24°	23°/36°
Field Angle	14°	19°	26°	34°	51°	15°/29°	26°/50°
Illuminance @ 5 m	4,420 lux	2,530 lux	1,720 lux	1,020 lux	457 lux	4,260/1,620 lux	1,790/825 lux

#### **Thermal**

Maximum External Temperature	Cooling System
113 °F (45 °C)	Convection

#### **DMX**

I/O Connector	Channel Range
5-pin XLR	4, 6, 8, 11, 13, 14, 16

### **Ordering**


Product Name	Item Code	UPC Number
Ovation E-910FC IP	03121497	781462218454












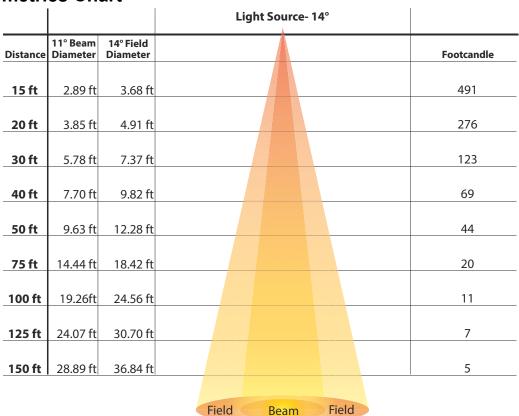

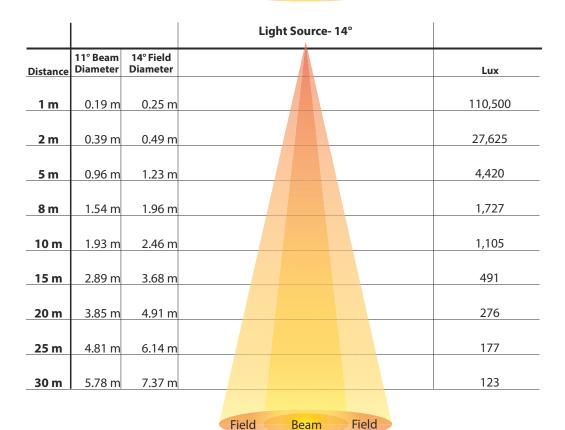




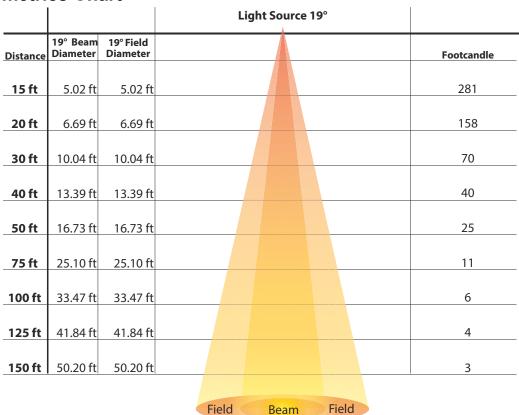

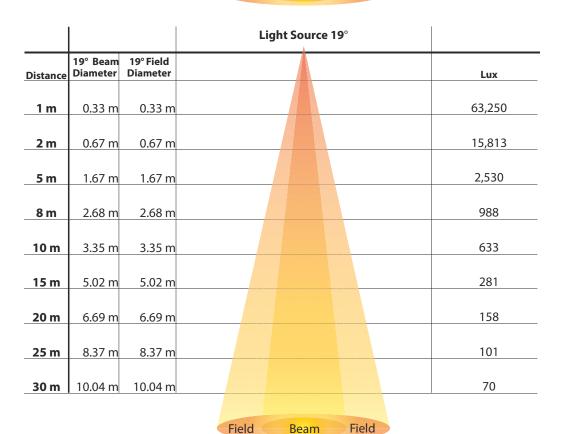



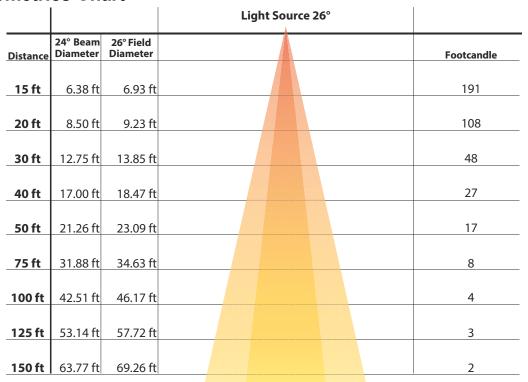




			Light So	ource 26°	
Distance	24° Beam Diameter	26° Field Diameter			Lux
1 m	0.43 m	0.46 m			43,000
2 m	0.85 m	0.92 m			10,750
5 m	2.13 m	2.31 m			1,720
8 m	3.40 m	3.69 m			672
10 m	4.25 m	4.62 m			430
15 m	6.38 m	6.93 m			191
20 m	8.50 m	9.23 m			108
25 m	10.63 m	11.54 m			69
30 m	12.75 m				48


Field

Beam


Field



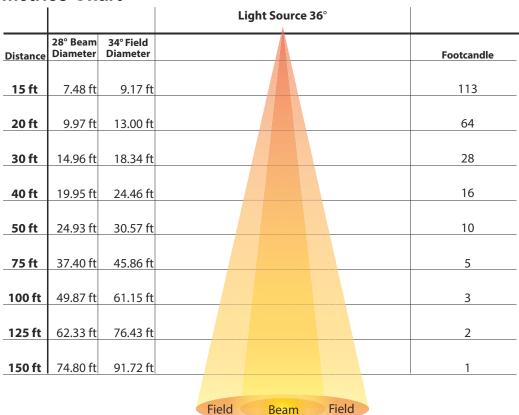


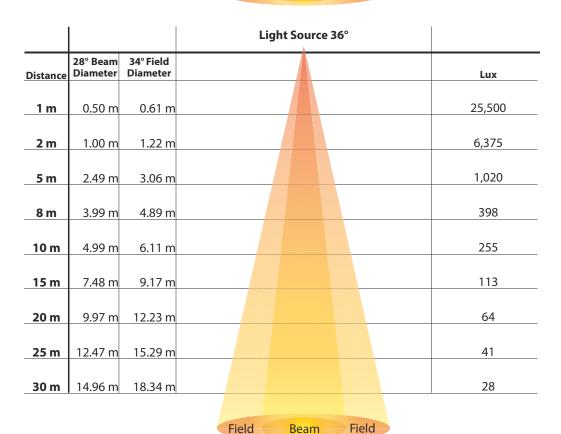



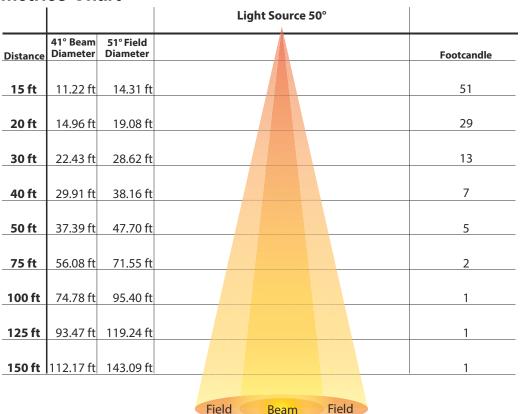

Beam

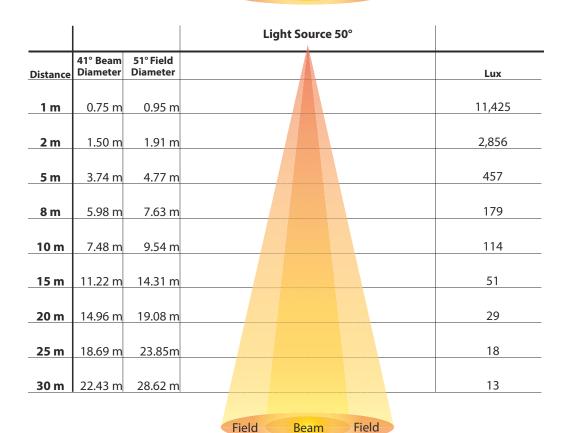




	l		70	omabl	مانده	+ C	<b></b>	I E º 2 ſ	0		
	Narı	row	20	Omabi	Wie	de					
Distance	13° Beam Diameter	15° Field Diameter	Footcandle	e				F	ootcandle	24° Beam Diameter	29° Field Diameter
15 ft	3.42 ft	3.95 ft	473						180	6.38 ft	7.76 ft
20 ft	4.56 ft	5.27 ft	266						101	8.50 ft	10.34 ft
30 ft	6.84 ft	7.90 ft	118						45	12.75 ft	15.52 ft
40 ft	9.11 ft	10.53 ft	67						25	17.00 ft	20.69 ft
50 ft	11.39 ft	13.17 ft	43						16	21.26 ft	25.86 ft
75 ft	17.09 ft	19.75 ft	19						7	31.88 ft	38.79 ft
100 ft	22.79 ft	26.33 ft	11						4	42.51 ft	51.72 ft
125 ft	28.48 ft	32.91 ft	7						3	53.14 ft	64.65 ft
150 ft	34.18 ft	39.50 ft	5						2	63.77 ft	77.59 ft

Field


Beam

Field

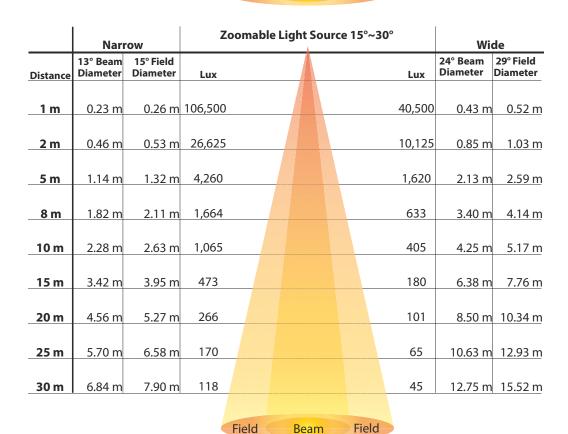



	Narı	row	Zoomable Light			ht Sou	ırce	25°~50	)°	Wide	
Distance	23° Beam Diameter	26° Field Diameter	Footcandle			$\Lambda$		F	ootcandle	36° Beam Diameter	50° Field Diameter
15 ft	6.10 ft	6.93 ft	199						92	9.75 ft	13.99 ft
20 ft	8.14 ft	9.23 ft	112						52	13.00 ft	18.65 ft
30 ft	12.21 ft	13.85 ft	50						23	19.50 ft	24.98 ft
40 ft	16.28 ft	18.47 ft	28						13	25.99 ft	37.30 ft
50 ft	20.35 ft	23.09 ft	18						8	32.49 ft	46.63 ft
75 ft	30.52 ft	34.63 ft	8						4	48.74 ft	69.95 ft
100 ft	40.69 ft	46.17 ft	4						2	64.98 ft	93.26 ft
125 ft	50.86 ft	57.72 ft	3						1	81.23 ft	116.58 ft
150 ft	61.04 ft	69.26 ft	2						1	97.48 ft	139.89 ft

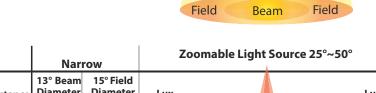

	Narı	row	Zoomable Light				ouro	:e 25°	~50°	Wide	
Distance	13° Beam Diameter	15° Field Diameter	Lux			$\Lambda$			Lux	24° Beam Diameter	29° Field Diameter
1 m	0.41 m	0.46 m	44,750			A			20,625	0.65 m	0.93 m
2 m	0.81 m	0.92 m	11,188						5,156	1.30 m	1.87 m
5 m	2.03 m	2.31 m	1,790						825	3.25 m	4.66 m
8 m	3.26 m	3.69 m	699						322	5.20 m	7.46 m
10 m	4.07 m	4.62 m	448						206	6.50 m	
15 m	6.10 m	6.93 m	199						92	9.75 m	13.99 m
20 m	8.14 m	9.23 m	112						52	13.00 m	18.65 m
25 m	10.17 m	11.54 m	72						33	16.25 m	23.32 m
30 m	12.21 m	13.85 m	50						23	19.50 m	27.98 m



### **RETURNS**

Send the product prepaid, in the original box, and with the original packing and accessories. Chauvet will not issue call tags.

Call Chauvet and request a Return Merchandise Authorization (RMA) number before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause(s) for the return.

To submit a service request online, go to www.chauvetprofessional.com/service-request.

Clearly label the package with an RMA number. Chauvet will refuse any product returned without an RMA number.



Write the RMA number on a properly affixed label. DO NOT write the RMA number directly on the box.

Once you have the RMA number, provide the following information on a piece of paper and place it inside the box:

- Your name
- Your address
- Your phone number
- RMA number
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be your responsibility. FedEx packing or double-boxing are recommended.



Chauvet reserves the right to use its own discretion to repair or replace returned product(s).



# **CONTACT US**

General Information	Technical Support
Chauvet World Headquarters	
Address: 5200 NW 108th Ave.	Voice: (844) 393-7575
Sunrise, FL 33351	Fax: (954) 756-8015
Voice: (954) 577-4455	Email: <a href="mailto:chauvetlighting.com">chauvetlighting.com</a>
Fax: (954) 929-5560	
Toll Free: (800) 762-1084	Website: www.chauvetprofessional.com
Chauvet Europe Ltd	
Address: Unit 1C	Email: <u>UKtech@chauvetlighting.eu</u>
Brookhill Road Industrial Estate	
Pinxton, Nottingham, UK	Website: www.chauvetprofessional.eu
NG16 6NT	
Voice: +44 (0) 1773 511115	
Fax: +44 (0) 1773 511110	
Chauvet Europe BVBA	
Address: Stokstraat 18	Email: BNLtech@chauvetlighting.eu
9770 Kruishoutem	
Belgium	Website: www.chauvetprofessional.eu
Voice: +32 9 388 93 97	
Chauvet France	
Address: 3, Rue Ampère 91380 Chilly-Mazarin	Email: FRtech@chauvetlighting.fr
France	Website: www.chauvetprofessional.eu
Voice: +33 1 78 85 33 59	
Chauvet Germany	
Address: Bruno-Bürgel-Str. 11 28759 Bremen	Email: <u>DEtech@chauvetlighting.de</u>
Germany	Website: www.chauvetprofessional.eu
Voice: +49 421 62 60 20	
Chauvet Mexico	
Address: Av. de las Partidas 34 - 3B (Entrance by Calle 2)	Email: servicio@chauvet.com.mx
Zona Industrial Lerma	Website: www.chauvetprofessional.mx
Lerma, Edo. de México, CP 52000	
Voice: +52 (728) 690-2010	

Visit the applicable website above to verify our contact information and instructions to request support. Outside the U.S., United Kingdom, Ireland, Mexico, France, Germany, or Benelux, contact the dealer of record.