



SIXPAR 100TM

user manual



©2022 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

#### **ELATION PROFESSIONAL USA**

6122 S. Eastern Ave. Los Angeles, CA. 90040 323-582-3322 | Fax 323-832-9142 | www.elationlighting.com | sales@elationlighting.com

#### **ELATION PROFESSIONAL B.V.**

Junostraat 2 | 6468 EW Kerkrade, The Netherlands +31 45 546 85 66 | Fax +31 45 546 85 96 | www.elationlighting.eu | info@elationlighting.eu

#### **ELATION PROFESSIONAL Mexico**

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000 +52 (728) 282-7070 | ventas@adj.com

## DOCUMENT VERSION



Please check www.elationlighting.com for the latest revision/update of this manual.

	Document Version	Software Version	DMX Channel Modes	Notes
2/2015	1	≥1.02	6/7/8/12	Initial release.
2/2019	1.1	≥1.13	6/7/8/12	Updated DMX traits.
8/2020	1.2	≥1.14	6/7/8/12	Updated Understanding DMX & Fixture Menu for Primary/ Secondary Mode
2/21/2022	1.3	N/C	6/7/8/12	Corrected Fixture Menu, added RDM



# CONTENTS

General Information	4
Warranty	6
Safety Instructions	7
General Guidelines	9
Fixture Overview	10
Fixture Installation	11
Remote Device Management (RDM)	13
Understanding DMX	14
Fixture Menu	17
DMX Channel Functions And Values	20
Cleaning and Maintenance	23
Technical Specifications	24
Optional Accessories	26



# GENERAL INFORMATION

### **INTRODUCTION**

Congratulations, you have just purchased one of the most innovative and reliable lighting fixtures on the market today! The **SIXPAR 100™** has been designed to perform reliably for years when the guidelines in this booklet are followed. Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance.

#### **UNPACKING**

Thank you for purchasing the SIXPAR 100™ by Elation Professional®. Every SIXPAR 100™ has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your unit for damage and be sure all accessories necessary to operate the unit have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this unit to your dealer without first contacting customer support at the number listed below. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

### **BOX CONTENTS**

- (1) Twist Locking Power Cable
- Manual & Warranty Card



#### WARRANTY REGISTRATION

Please fill out the enclosed warranty card to validate your purchase. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support at 323-582-3322.

#### **CUSTOMER SUPPORT**

Elation Professional® provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.elationlighting.com for any comments or suggestions. For service related issue please contact Elation Professional®.

#### **ELATION PROFESSIONAL USA**

6122 S. Eastern Ave. Los Angeles, CA. 90040 323-582-3322 | Fax 323-832-9142 | www.elationlighting.com | sales@elationlighting.com

#### **ELATION PROFESSIONAL B.V.**

Junostraat 2 | 6468 EW Kerkrade, The Netherlands +31 45 546 85 66 | Fax +31 45 546 85 96 | www.elationlighting.eu | info@elationlighting.eu

#### **ELATION PROFESSIONAL Mexico**

AV Santa Ana 30 Parque Industrial Lerma, Lerma, Mexico 52000 +52 (728) 282-7070

#### **CUSTOMER SUPPORT**

Contact ELATION Service for any product related service and support needs. Also visit forums.elationlighting.com with questions, comments or suggestions.

ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST 323-582-3322 | Fax 323-832-9142 | support@elationlighting.com

ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET +31 45 546 85 63 | Fax +31 45 546 85 96 | support@elationlighting.eu

**REPLACEMENT PARTS** please visit parts.elationlighting.com



### LIMITED WARRANTY

- A. Elation Professional® hereby warrants, to the original purchaser, Elation Professional® products to be free of manufacturing defects in material and workmanship for a period of two years (730 days), and Elation Professional® product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional® factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional® will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional® shall have no liability what so ever for loss and/or or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional® concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional® factory unless prior written authorization was issued to purchaser by Elation Professional®; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional® will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional® under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional®. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional® reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional® in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional® be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional® products and supersedes all prior warranties and written descriptions of warranty terms and conditions therefore published.



## SAFETY INSTRUCTIONS



The **SIXPAR** 100<sup>™</sup> is an extremely sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow the guidelines in this manual. The manufacturer of this device will not accept responsibility for damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual.



This device falls under **PROTECTION CLASS 1**. It's essential this device be grounded properly. Only qualified personnel should perform all electrical connections.



CAUTIONS

UNPLUG POWER BEFORE SERVICING FIXTURE



NEVER TOUCH FIXTURE DURING OPERATION AS IT MAY BE HOT



NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE SENSITIVE PERSONS MAY SUFFER AN EPILETIC SHOCK



# HIGH INTENSITY ULTRAVIOLET LIGHT



AVOID DIRECT EYE & SKIN EXPOSURE. WEAR PROPER EYE & SKIN PROTECTION. SEE MANUAL FOR SAFETY INSTRUCTIONS. RISK GROUP 3 - RISK OF EXPOSURE TO ULTRAVIOLET UV RADIATION! FIXTURE EMITS HIGH INTENSITY WAVELENGTH OF ULTRAVIOLET UV LIGHT FROM THE UV LED. WEAR PROPER EYE AND SKIN PROTECTION. AVOID PROLONGED PERIODS OF EXPOSURE TO UV LED. AVOID WEARING WHITE COLOR CLOTHING AND/OR USING UV PAINTS ON SKIN. AVOID DIRECT EYE AND/OR SKIN EXPOSURE AT DISTANCES LESS THAN 11 FEET (3.3m). DO NOT OPERATE FIXTURE WITH DAMAGED/MISSING EXTERNAL COVERS. DO NOT LOOK DIRECTLY INTO THE UV LIGHT AND/OR VIEW UV LIGHT

DIRECTLY WITH OPTICAL INSTRUMENTS THAT MAY CONCENTRATE THE LIGHT/RADIATION OUTPUT. INDIVIDUALS SUFFERING FROM A RANGE OF EYE CONDITIONS, SUNLIGHT EXPOSURE DIS-ORDERS, OR INDIVIDUALS USING PHOTOSENSITIVE MEDICATION, MAY RECEIVE DISCOMFORT IF EXPOSED TO THE ULTRAVIOLET UV LIGHT EMITTED FROM THE UV LED.



## **IMPORTANT NOTICE!**



There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. Damages resulting from modifications to this fixture and/or the disregard of safety and general user instructions found in this user manual void the manufactures warranty and are not subject to any warranty claims and/or repairs.

- For proper operation, follow the **Installation** guidelines described in this manual.
   Only qualified and certified personnel should perform installation of this fixture and only the original rigging parts (brackets) included with this fixture should be used for installation. Any modifications will void the original manufactures warranty and increase the risk of damage and/or personal injury.
- Never look directly into the light source of this fixture to prevent risk of injury to your retina, which may induce blindness. Those suffering from **EPILEPSY** should avoid looking directly into the light source of this unit at all times.
- Always disconnect from main power source before performing any type of service and/or cleaning procedure. Only handle the power cord by the plug end, never pull out the plug by tugging the wire portion of the cord.
- Do not operate this fixture if the power cord has become frayed, crimped and/or damaged. If the power cord is damaged, replace it immediately with a new one of similar power rating.




## GENERAL GUIDELINES

## NEVER OPEN THIS FIXTURE WHILE IN USE!

- During the initial operation of this fixture, a light smoke or smell may emit from the
  interior of the fixture. This is a normal process and is caused by excess paint in the
  interior of the casing burning off from the heat associated with the lamp and will
  decrease gradually over time.
- This fixture is a professional lighting effect designed for INDOOR / DRY LOCATIONS
   ONLY on stage, in nightclubs, theatres, etc.
- Please make sure there are NO FLAMMABLE MATERIALS close to the fixture while operating, to prevent any fire hazard.
- Minimum distance of inflammable materials from the surface 1.6 feet (0.5m).
- DO NOT attempt installation and/or operation without knowledge how to do so.
- DO NOT allow operation by persons who are not qualified to operate this type of fixture. Most damages are the result of operations by nonprofessionals.
- Consistent operational breaks may ensure the fixture will function properly for many years to come.
- DO NOT shake fixture, avoid brute force when installing and/or operating fixture.
- Always install the fixture with an appropriate safety cable. When installing the
  fixture in a suspended environment, always use mounting hardware that is no less
  than M10 x 25 mm, also be sure the hardware is insert in the pre-arranged screw
  holes in the bracket of the fixture.
- Use the original packaging and materials to transport the fixture in for service.
- DO NOT TOUCH the housing bare-hand during its operation. Turn OFF the power and allow approximately 15 minutes for the fixture to cool down before replacing or serving.



# FIXTURE OVERVIEW

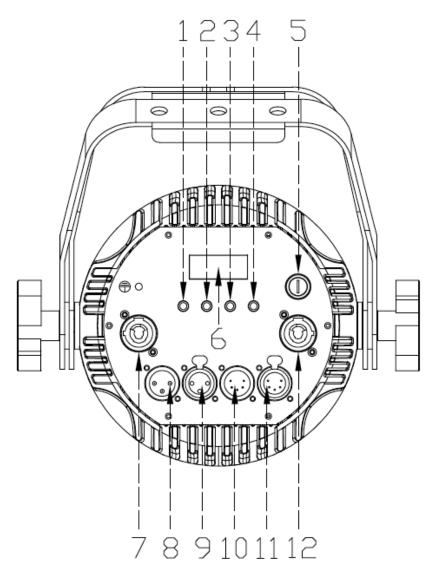

- 1. MODE Button
- 2. UP Button
- 3. DOWN Button
- 4. ENTER Button
- 5. FUSE
- 6. LCD Menu Display
- 7. Power IN
- 8. 3pin DMX IN
- 9. 3pin DMX OUT
- 10. 5pin DMX IN
- 11. 5pin DMX OUT
- 12. Power OUT



# FIXTURE INSTALLATION



# FLAMMABLE MATERIAL WARNING

Keep fixture at least 5.0 ft (1.5m) away from any flammable materials, decorations, pyrotechnics, etc.



# ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



## CAUTIONS

- For added protection, mount the fixture in areas outside walking paths, seating areas, or in areas were unauthorized personnel might reach the fixture.
- Min/Max ambient operating temperature for this fixture is 5°F to 113°F (-15°C to 45°C).
- Do not use the fixture under or above this temperature.
- Before mounting the fixture to any surface, make sure the installation area can hold a minimum point load of 10 times the weight of the fixture. 74 lbs / 33 kg)
- Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.
- Never stand directly below the device when mounting, removing or servicing.



# POWER LINKING

Max number of units that can be power linked is 12 units @110V and 25 units @240V.

### **CLAMP MOUNTING**

The **SIXPAR 100™** provides a unique integrated Dual Yoke / Floor Stand. When mounting this fixture to truss be sure to secure an appropriately rated clamp using an M10 screw fitted through the center hole of the Dual Yoke / Floor Stand.


#### SECURING

Regardless of the rigging option you choose for your **SIXPAR 100**<sup>™</sup> always be sure to secure your fixture with a safety cable. The fixture provides a built-in rigging point for a safety cable on the hanging bracket as illustrated above. Be sure to only use the designated rigging point for the safety cable and never secure a safety cable to a carrying handle.



#### **MOUNTING POINTS**

- Overhead mounting requires extensive experience, including amongst others
  calculating working load limits, installation material being used, and periodic
  safety inspection of all installation material and the device. If you lack these
  qualifications, do not attempt the installation yourself. Improper installation can
  result in bodily injury.
- Fixture is fully operational in the specific mounting positions as illustrated below.

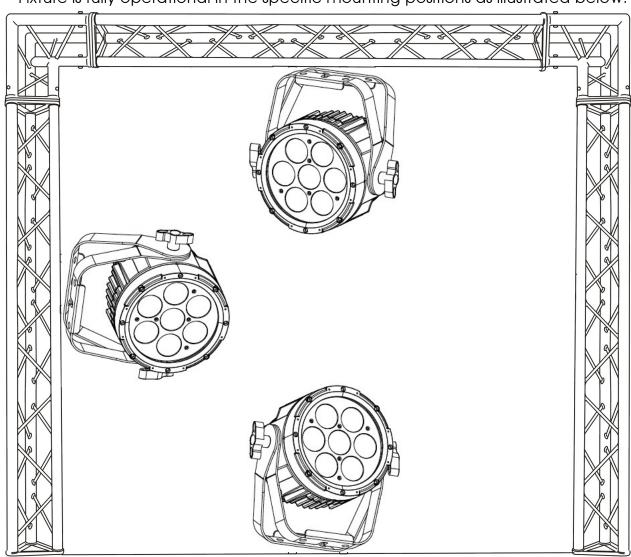



SAFETY

CABLE

Always use a Safety Cable whenever installing this fixture in a suspended environment to ensure the fixture will not drop if the clamp fails.



# **REMOTE DEVICE MANAGEMENT (RDM)**

NOTE: In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, allowing the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then used its SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

Please be aware that not all devices support all RDM features, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you required.

The following parameters are accessible in RDM on this device:

MANUFACTURER
MANUFACTURER ID
DEVICE ID
MODEL ID
DMX START ADDRESS
DMX PERSONALITY
DMX SLOTS
SOFTWARE VERSION



## UNDERSTANDING DMX

#### DMX-512

DMX is short for Digital Multiplex. This is a universal protocol used by most lighting and controller manufactures as a form of communication between intelligent fixtures and controllers. DMX allows all makes and models of different manufactures to be linked together and operate from a single controller. This is possible as long as all the fixtures and the controller are DMX compliant. A DMX controller sends the DMX data instructions to the fixture allowing the user to control the different aspects of an intelligent light. DMX data is sent out as serial data that travels from fixture to fixture via data "IN" and data "OUT" XLR terminals located on the fixtures (most controllers will only have output jacks).

#### **DMX LINKING**

To ensure proper DMX data transmission, always use proper DMX cables and a terminator. When using several DMX fixtures try to use the shortest cable path possible. Never split a DMX line with a "Y" style connector. The order in which the fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a starting DMX address of 1 may be placed anywhere in the DMX chain, at the beginning, at the end, or anywhere in the middle. The DMX controller knows to send data assigned to address 1 to that fixture no matter where it is located in the DMX chain. The **SIXPAR 100** $^{\text{TM}}$  can be controlled via DMX-512 protocol and the DMX address is set via the control menu.


# DATA CABLE (DMX Cable) REQUIREMENTS (For DMX and Primary/Secondary Operation)

Your fixture and your DMX controller require a standard 3pin or 5pin XLR connector for data input and data output (see figure below). Also, remember that a DMX line must be daisy chained and cannot be split.




#### **DMX-512 CONTROLLER CONNECTION**

Connect the provided XLR cable to the female XLR output of your controller and the other side to the male XLR input of the **SIXPAR 100™**. The diagram below illustrates a typical DMX-512 connection when the fixture is in the **12 Channel Mode**. You can chain multiple panels together through serial linking. Always be sure daisy chain your In and out data connections, never split or "Y" your DMX connections.

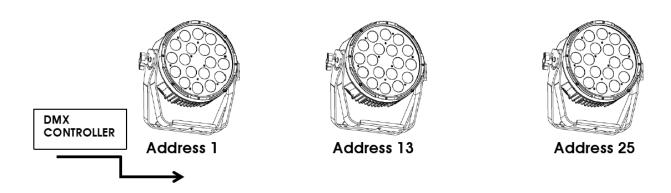

#### DMX-512 CONNECTION WITH DMX TERMINATOR

A DMX terminator should be used in all DMX lines especially in longer runs. The use of a terminator may avoid erratic behavior in your DMX line. A terminator is a 120 ohm 1/4-watt resistor that is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This fixture is inserted in the female XLR connector of the last fixture in your daisy chain to terminate the line. Using a line terminator will decrease the possibilities of erratic behavior.

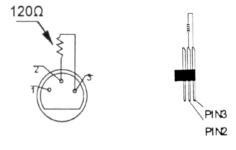

Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal, (Resistance 120 Ohm 1/4 W) between PIN 2 (DMX-) and PIN 3 (DMX +) of the last fixture.



#### **DMX ADDRESSING**

All fixtures should be given a DMX starting address when using a DMX controller, so the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to "listen" to the digital control information sent out from the DMX controller. The allocation of this starting DMX address is achieved by setting the correct DMX address on the digital display located on the back of the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different address for each individual fixture. Be advised that setting all fixtures to the same DMX address will subsequently control all fixtures in the same fashion, in other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will start to "listen" to the channel number you have set, based on the quantity of control channels (DMX channels) of each fixture. That means changing the settings of one channel will only affect the selected fixture.

In the case of the **SIXPAR 100^{\text{TM}}**, when in the **12 Channel Mode** you should set the starting DMX address of the first unit to 1, the second unit to 13 (1 + 12), the third unit to 25 (13 + 12), and so on.

**Note:** During start-up the **SIXPAR 100^{\text{TM}}** will automatically detect whether a DMX data signal is being received or not. If the fixture is not receiving a DMX signal please check the following:

- The 3pin or 5pin XLR input plug (cable with DMX signal from controller) is not connected or is not inserted completely into the DMX input jack of the fixture.
- The DMX controller is switched off or defective.
- The DMX cable or connector is defective.
- A DMX terminator has been inserted into the last fixture in your DMX chain.



## FIXTURE MENU

#### **ON-BOARD SYSTEM MENU**

The **SIXPAR 100™** comes with an easy to navigate system menu. The next sections will cover how to access each menu function.

### LCD CONTROL PANEL DISPLAY


The (4) button control panel (see image below) located on back of the fixture allows you to access the main menu and make all necessary adjustments to the **SIXPAR 100** $^{TM}$ .

During normal operation, pressing the MODE button will navigate through the different function menus. Once you reach a desired menu, press the ENTER button to select that menu. The variable field that can be adjusted within the selected menu will begin to flash. Using the UP or DOWN buttons, adjust the field until the desired value is displayed. For example, the CHANNEL CH: menu variable field can be set to 06, 07, 08, or 12. Pressing the ENTER button once will confirm your selected value. Exit at any time without making any adjustments by pressing the MODE button.



#### INFORMATION DISPLAYED DURING INITIAL POWER ON

When the fixture is initially powered ON, the display shows the following information:

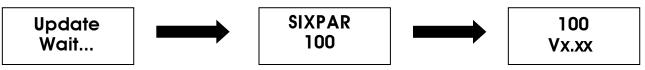

Fixture Software Version (Greater than or equal to)



# LCD CONTROL PANEL LOCKOUT


When the "**Display ON**" menu is set to **OFF1**, the LCD backlight will turn OFF after 30 seconds and the Control Panel will lock. To unlock, press and hold the MODE button for 5 seconds.

	ELATION©	SIXPAR 100 <sup>TM</sup>					
		M MENU					
Specifications are subject to change without any prior written notice.							
MENU	OPTIONS / VALUES	DESCRIPTION					
CHANNEL	CH: 06, 07, 08, <b>12</b>	DMX Channel Mode					
DMX MODE	ADDR: <b>001</b> ~ 512	DMX Address Setting					
SECONDRY MODE	SECONDRY MODE	Set Fixture A as Secondary Unit					
	ON	LCD Display Always ON					
Display ON	OFF	LCD Display OFF after 30 seconds					
	OFF1	LCD Display OFF After 30 Seconds and LOCKED					
	1.MANUAL	Manual Color Adjustment					
	R00-99	Adjust RED Brightness (00-99)					
	G00-99	Adjust GREEN Brightness (00-99)					
	B00-99	Adjust BLUE Brightness (00-99)					
	W00-99	Adjust WHITE Brightness (00-99)					
	A00-99	Adjust AMBER Brightness (00-99)					
	U00-99	Adjust UV Brightness (00-99)					
T . 1	S00-99	Adjust STROBE SPEED 00 SLOW (0.1Hz) - 99 FAST (20Hz)					
Internal Programs	2.CHANGE	30 Color Chase Macro					
Tograms	SP01-99	Adjust SPEED 01 SLOW - 99 FAST					
	S00-99	Adjust STROBE SPEED 00 SLOW (0.1Hz) - 99 FAST (20Hz)					
	3.CHANG6	6 Color Chase Macro					
	SP01-99	Adjust SPEED 01 SLOW - 99 FAST					
	S00-99	Adjust STROBE SPEED 00 SLOW (0.1Hz) - 99 FAST (20Hz)					
	4.FADE	Color Fade Macro					
	SP01-99	Adjust SPEED 01 SLOW - 99 FAST					
	S00-99	Adjust STROBE SPEED 00 SLOW (0.1Hz) - 99 FAST (20Hz)					
DimCurve	Standard, Stage, TV, Architec, Theatre	Set Dimming Curve					
	Blackout	NO Output					
NO DMX	Hold	Hold Last Setting					
	Fade	Fade					



## **DIMMING CURVES**

The **DimCurve** menu allows you to select one of the following preset dimming curves: **Standard, Stage, TV, Architec,** or **Theatre**. (See diagram below for more details)

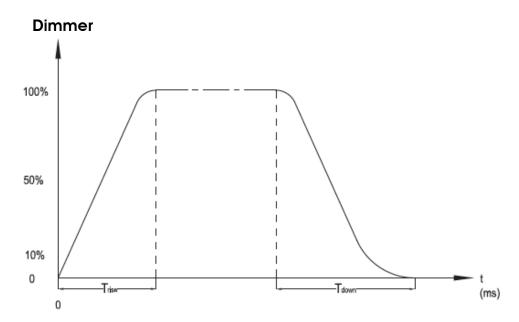

Ramp Effect	02	55 OS (Fade Time)	0 1S (Fade Time)		
nump Enece	Trise (ms)	Tdown (ms)	Trise (ms)	Tdown (ms)	
Standard	0	0	0	0	
Stage	780	1100	1540	1660	
TV	1180	1520	1860	1940	
Architectural	1380	1730	2040	2120	
Theatre	1580	1940	2230	2280	



# DMX CHANNEL FUNCTIONS AND VALUES

ELATION© SIXPAR 100 <sup>TM</sup>								
DMX Channel Values / Functions (12 DMX Channels)								
	Specifications are subject to change without any prior written notice.							
	MODE	/ CHANN	EL	VALUE	FUNCTION			
6 CH	7 CH	8 CH	12 CH					
1	1	1	1		RED			
1	1	1	1	0-255	Red (0-100%)			
2	2	2	2		GREEN			
2	2	2	2	0-255	Green (0-100%)			
3	3	3	3		BLUE			
	3	3	3	0-255	Blue (0-100%)			
4	4	4	4		WHITE			
		7	7	0-255	White (0-100%)			
5	5	5	5		AMBER			
3	3	3	3	0-255	Amber (0-100%)			
6	6	6	6		U.V.			
0	Ů	U	O .	0-255	U. V. (0-100%)			
	7	7	7		MASTER DIMMER			
	,	,	,	0-255	Dimmer (0-100%)			
					STROBE			
				0-31	LED OFF (NO STROBE)			
			8	32-95	Strobe Effect SLOW to FAST			
		8		96-127	LED ON (NO STROBE)			
		· ·		128-159	Strobe Pulse Effect In Sequences SLOW to FAST			
				160-191	LED ON (NO STROBE)			
				192-223	Random Strobe Effect SLOW to FAST			
				224-255	LED ON (NO STROBE)			



ELATION© SIXPAR 100 <sup>TM</sup>							
DMX Channel Values / Functions (12 DMX Channels)							
Specifications are subject to change without any prior written notice.							
	MODE /	CHANNEL		VALUE	FUNCTION		
6 CH	6 CH 7 CH 8 CH 12 CH						
					COLOR MACROS		
				0-3	OFF		
				4-7	RED		
				8-11	GREEN		
				12-15	BLUE		
				16-19	WHITE		
				20-23	AMBER		
				24-27	UV		
				28-31	RED + GREEN		
				32-35	RED + BLUE		
				36-39	RED + WHITE		
				40-43	RED + AMBER		
				44-47	RED + UV		
				48-51	GREEN + BLUE		
				52-55	GREEN + WHITE		
			56-59	GREEN + AMBER			
				60-63	GREEN + UV		
				64-67	BLUE + WHITE		
			_	68-71	BLUE + AMBER		
			9	72-75	BLUE + UV		
				76-79	WHITE + AMBER		
				80-83	WHITE + UV		
				84-87	AMBER + UV		
			88-91	RED + GREEN + BLUE			
				92-95	RED + GREEN + WHITE		
				96-99	RED + GREEN + AMBER		
				100-103	RED + GREEN + UV		
				104-107	RED + BLUE + WHITE		
				108-111	RED + BLUE + AMBER		
				112-115	RED + BLUE + UV		
				116-119	RED + WHITE + AMBER		
				120-123	RED + WHITE + UV		
				124-127	RED + AMBER + UV		
				128-131	GREEN + BLUE + WHITE		
				132-135	GREEN + BLUE + AMBER		
				136-139	GREEN + BLUE + UV		
				140-143	GREEN + WHITE + AMBER		
				144-147	GREEN + WHITE + UV		
				148-151	GREEN + AMBER + UV		



ELATION© SIXPAR 100™								
			DN	AX Chann	el Values / Functions (12 DMX Channels)			
		(	Specificat	tions are su	bject to change without any prior written notice.			
MODE / CHANNEL VALUE FUNCTION								
6 CH	7 CH	8 CH	12 CH					
					COLOR MACROS (continued)			
				152-155	BLUE + WHITE + AMBER			
				156-159	BLUE + WHITE + UV			
				160-163	BLUE + AMBER + UV			
				164-167	WHITE + AMBER + UV			
				168-171	RED + GREEN + BLUE + WHITE			
				172-175	RED + GREEN + BLUE + AMBER			
				176-179	RED + GREEN + BLUE + UV			
				180-183	RED + GREEN +WHITE + AMBER			
				184-187	RED + GREEN + WHITE + UV			
				188-191	RED + GREEN + AMBER + UV			
				192-195	RED + BLUE + WHITE + AMBER			
				196-199	RED + BLUE + WHITE + UV			
			9	200-203	RED + BLUE + AMBER + UV			
				204-207	RED + WHITE + AMBER + UV			
				208-211	GREEN + BLUE + WHITE + AMBER			
				212-215	GREEN + BLUE + WHITE + UV			
				216-219	GREEN + BLUE + AMBER + UV			
				220-223 224-227	GREEN + WHITE + AMBER + UV  BLUE + WHITE + AMBER + UV			
				228-231	RED + GREEN + BLUE + WHITE + AMBER			
				232-235	RED + GREEN + BLUE + WHITE + AMBER  RED + GREEN + BLUE + WHITE + UV			
				236-239	RED + GREEN + BLUE + AMBER + UV			
				240-243	RED + GREEN + WHITE + AMBER + UV			
				244-247	RED + BLUE + WHITE + AMBER + UV			
				248-251	GREEN +BLUE + WHITE + AMBER + UV			
				252-255	RED + GREEN + BLUE + WHITE + AMBER + UV			
					COLOR CHASE MACROS			
				00-20	NO Function			
			10	21-40	30 Color Chase			
			10	41-60	6 Color Chase			
				61-80	Color Fade Chase			
				81-255	NO Function			
			11		COLOR CHASE MACROS SPEED			
			11	00-255	Chase Speed of CHANNEL 10 - SLOW to FAST			
					DIMMING MODES			
				0-20	STANDARD			
			21-40	STAGE				
			12	41-60	TV			
				61-80	ARCHITECTURAL			
				81-100	THEATER			
				101-255	NO Function			



## CLEANING AND MAINTENANCE



CAUTION

Disconnect power before cleaning or maintenance.

#### **CLEANING**

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics.

• Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation. Never use alcohol, solvents, or ammonia based cleaners.

#### **MAINTENANCE**

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every 3 months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Lose screws may fall out during normal operation resulting in damage or injury.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Inspect all moving parts and make sure there are no signs of wear and rotate/move without imbalances.
- Electric power supply cables must not show any damage, material fatigue or sediments. Never remove the ground prong from the power cable.



# TECHNICAL SPECIFICATIONS

#### **FEATURES**

15° Beam 25° Field Angles 5 Variable Dimming Curve Modes Dual Yoke / Floor Stand Multiple Unit Power Linking RDM - Remote Device Management Rugged Die-Cast Aluminum Exterior Flicker Free Operation for TV and FILM

#### SOURCE

(7) 12W 6-in-1 RGBAW+UV LEDs 100,000 Hour Average LED Life

#### **EFFECTS**

Electronic Strobe
Color and Chase Macros
Electronic Dimming: 0% - 100%
5 Variable Dimming Curve Modes

#### CONTROL / CONNECTIONS

(4) DMX Channel Modes (6 / 7 / 8 / 12)
(4) Button Touch Control Panel
LCD Menu Display
3pin & 5pin DMX
Twist Locking Power Cable

#### SIZE / WEIGHT

Length: 10.1" (257mm) Width: 4.9" (125mm) Vertical Height: 9.6" (243mm) Weight: 7.4 lbs. (3.3 kg)

#### ELECTRICAL / THERMAL

AC 110-250V - 50/60Hz 89W Max Power Consumption Power Linking: 12pcs @110V / 25pcs @240V 5°F to 113°F (-15°C to 45°C)

#### APPROVALS / RATINGS


CE | IP20




Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.



#### PHOTOMETRIC DATA

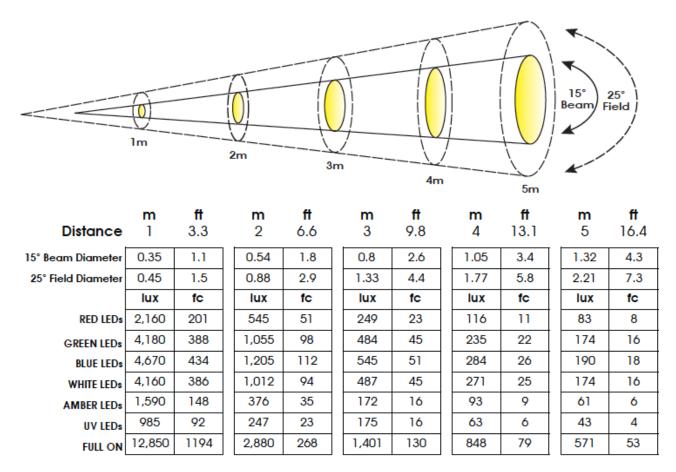

### **DIMENSIONAL DRAWINGS**

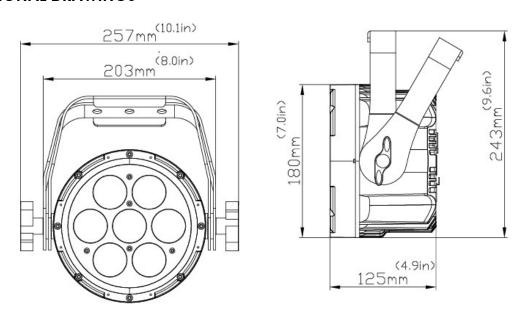

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.



# OPTIONAL ACCESSORIES

ORDER CODE	ITEM
TRIGGER CLAMP	Heavy Duty Wrap Around Hook Style Clamp
SIXPAR100/GFH	Gel Frame and Holder Kit
SIXPAR/BD100	Barn Door (Gel Frame Holder Kit Required - Not Included)
LSF536	Light Shaping Filter 30° 20" x 24" Sheet
LSF537	Light Shaping Filter 20° 20" x 22" Sheet
LSF538	Light Shaping Filter 60° x 1° 20" x 24" Sheet
LSF559	Light Shaping Filter 10° 20" x 24" Sheet
EWDMXSYSTEM	Wireless DMX System (1 Transmitter, 1 Receiver)
EWDMXT	Wireless DMX Transmitter
EWDMXR	Wireless DMX Receiver
PLC3	3' (1m) Power Cable
PLC6	6' (1.8m) Power Cable
AC3PDMX5PRO	5 ft. (1.5m) 3pin PRO DMX Cable
AC5PDMX5PRO	5 ft. (1.5m) 5pin PRO DMX Cable

Additional Cable Lengths Available